


SHARP

SERVICE MANUAL SERVICE-ANLEITUNG

S33Y1PG-A10XU

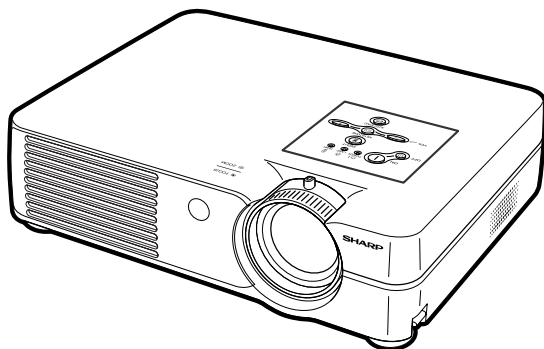

LCD PROJECTOR
LCD PROJEKTOR

PG-A10X
PG-A10X-SL

MODELS
MODELLE

CEILING MOUNT BRACKET
DECKENMONTAGEHALTERUNG
AN-A10T

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

Im Interesse der Benutzersicherheit (erforderliche Sicherheitsregeln in einigen Ländern) muß das Gerät in seinen Originalzustand gebracht werden. Außerdem dürfen für die spezifizierten Bauteile nur identische Teile verwendet werden.

SHARP CORPORATION

This document has been published to be used for after sales service only.
The contents are subject to change without notice.

CONTENTS

	Page		Page
• SPECIFICATIONS	3	• OVERALL WIRING DIAGRAM	74
• IMPORTANT SERVICE SAFETY		• DESCRIPTION OF SCHEMATIC DIAGRAM ...	76
NOTES (for USA)	4	• WAVEFORMS	77
• NOTE TO SERVICE PERSONNEL	5	• SCHEMATIC DIAGRAM	78
• OPERATION MANUAL	9	• PRINTED WIRING BOARD ASSEMBLIES ...	105
• REMOVING OF MAJOR PARTS	16	• PARTS LIST	
• RESETTING THE TOTAL LAMP TIMER	20	■ ELECTRICAL PARTS	108
• THE OPTICAL UNIT OUTLINE	21	■ CABINET AND MECHANICAL PARTS ...	120
• ELECTRICAL ADJUSTMENT	23	■ ACCESSORIES PARTS	124
• TROUBLE SHOOTING TABLE	31	■ PACKING PARTS	124
• CHASSIS LAYOUT	70	• PACKING OF THE SET	125
• BLOCK DIAGRAM	72	CEILING MOUNT BRACKET (AN-A10T)	126

INHALT

	Seite		Seite
• TECHNISCHE DATEN	38	• BESCHREIBUNG DES SCHEMATISCHEN	
• HINWEISE FÜR DAS		SCHALTPLANS	76
WARTUNGSPERSONAL	39	• WELLENFORMEN	77
• BEDIENUNGSANLEITUNG	41	• SCHEMATISCHER SCHALTPLAN	78
• ENTFERNEN DER HAUPTTEILE	48	• LEITERPLATTENEINHEITEN	105
• RÜCKSTELLEN DES		• ERSATZTEILLISTE	
LAMPENBETRIEBSZEIT-TIMERS	52	■ ELEKTRISCHE BAUTEILE	108
• BESCHREIBUNG DER OPTIK-EINHEIT	53	■ GEHÄUSE UND MECHANISCHE	
• ELEKTRISCHE EINSTELLUNG	55	BAUTEILE	120
• FEHLERSUCHTABELLE	63	■ ZUBEHÖRTEILE	124
• CHASSIS-ANORDNUNG	70	■ VERPACKUNGSTEILE	124
• BLOCKSCHALTBILD	72	• VERPACKEN DES GERÄTS	125
• GESAMTSCHALTPLAN	74	DECKENMONTAGEHALTERUNG	
		(AN-A10T)	126

Specifications

Product type	LCD Projector
Model	PG-A10X/PG-A10X-SL
Video system	NTSC3.58/NTSC4.43/PAL/PAL-M/PAL-N/PAL-60/SECAM/ DTV480I/DTV480P/DTV540P/DTV580I/DTV580P/DTV720P/DTV1035I/DTV1080I
Display method	LCD panel X 3, RGB optical shutter method
LCD panel	Panel size: 0.79" (20.0 mm) (12 [H] X 16 [W] mm) No. of dots: 786,432 dots (1,024 [H] X 768 [V])
Standard lens	1 – 1.2X zoom lens, F1.9 – 2.2, f = 26 – 31 mm
Projection lamp	SHP 165 W lamp
Component input signal (INPUT1)	15-pin mini D-sub connector Y: 1.0 Vp-p, sync negative, 75 Ω terminated PB: 0.7 Vp-p, 75 Ω terminated PR: 0.7 Vp-p, 75 Ω terminated
Horizontal resolution	700 TV lines (DTV720P)
Computer RGB input signal (INPUT 1)	15-pin mini D-sub connector RGB separate/sync on green type analog input: 0 – 0.7 Vp-p, positive, 75 Ω terminated HORIZONTAL SYNC. SIGNAL: TTL level (positive/negative) VERTICAL SYNC. SIGNAL: Same as above
S-video input signal (INPUT 2)	4-pin mini DIN connector Y (luminance signal): 1.0 Vp-p, sync negative, 75 Ω terminated C (chrominance signal): Burst 0.286 Vp-p, 75 Ω terminated
Video input signal (INPUT 3)	RCA connector: VIDEO, composite video, 1.0 Vp-p, sync negative, 75 Ω terminated
Computer control signal (RS-232C)	9-pin mini DIN connector
Pixel clock	12 – 108 MHz
Vertical frequency	43 – 85 Hz
Horizontal frequency	15 – 70 kHz
Audio input signal	ø 3.5 mm minijack: AUDIO, 0.5 Vrms, more than 47 kΩ (stereo)
Audio output	1.0 W (monaural)
Speaker system	2.8 cm round X 1
Rated voltage	AC 100 – 240 V
Input current	2.4 A
Rated frequency	50/60 Hz
Power consumption	240 W (Standard mode)/190 W (Eco mode) with AC 100 V 226 W (Standard mode)/182 W (Eco mode) with AC 240 V
Power consumption (standby)	5 W (AC 100 V) — 8 W (AC 240 V)
Heat dissipation	900 BTU/hour (Standard mode)/710 BTU/hour (Eco mode) with AC 100 V 850 BTU/hour (Standard mode)/680 BTU/hour (Eco mode) with AC 240 V
Operating temperature	41°F to 95°F (+5°C to +35°C)
Storage temperature	– 4°F to 140°F (– 20°C to +60°C)
Cabinet	Plastic
I/R carrier frequency	38 kHz
Dimensions (approx.)	11 45/64" X 3 13/64" X 9 1/32" (297 (W) X 81 (H) X 229 (D) mm) (main body only) 11 45/64" X 3 33/64" X 9 1/32" (297 (W) X 89 (H) X 229 (D) mm) (including adjustment foot and projecting parts)
Weight (approx.)	6.4 lbs. (2.9 kg)
Supplied accessories	Remote control, Two R-6 batteries, Power cord for U.S., Canada etc. (6', 1.8 m), Power cord for Europe, except U.K. (6', 1.8 m), Power cord for U.K., Hong Kong and Singapore (6', 1.8 m), Power cord for Australia, New Zealand and Oceania (6', 1.8 m), RGB cable (9'10", 3.0 m), DIN-D-sub RS-232C adaptor (5 57/64", 15 cm), Carrying case, Lens cap (attached), Extra air filter, Projector manual and technical reference CD-ROM, "QUICK GUIDE" label, Operation manual
Replacement parts	Lamp unit (Lamp/cage module) (BQC-PGA10X//1), Remote control (RRMCGA138WJSA), Two R-6 batteries ("AA" size, UM/SUM-3, HP-7, or similar), Power cord for U.S., Canada etc. (QACCDAA016WJPZ), Power cord for Europe, except U.K. (QACCCA006WJPZ), Power cord for U.K., Hong Kong and Singapore (QACCBAA015WJPZ), Power cord for Australia, New Zealand and Oceania (QACCLA005WJPZ), RGB cable (QCNWGA012WJPZ), DIN-D-sub RS-232C adaptor (QCNWGA015WJPZ), Carrying case (GCASNA006WJSA), Lens cap (CCAPHA007WJ01), Air filter (PFILDA008WJZZ), Projector manual and technical reference CD-ROM (UDSKAA022WJN1), "QUICK GUIDE" label (TLABZA191WJZZ), Operation manual (TINS-A505WJN1)

This SHARP projector uses an LCD (Liquid Crystal Display) panel. This very sophisticated panel contains 786,432 pixels (X RGB) TFTs (Thin Film Transistors). As with any high technology electronic equipment such as large screen TVs, video systems and video cameras, there are certain acceptable tolerances that the equipment must conform to.

This unit has some inactive pixels within acceptable tolerances which may result in inactive dots on the picture screen. This will not affect the picture quality or the life expectancy of the unit.

Specifications are subject to change without notice.

IMPORTANT SERVICE SAFETY NOTES (for USA)

- Service work should be performed only by qualified service technicians who are thoroughly familiar with all safety checks and servicing guidelines as follows:

WARNING


1. For continued safety, no modification of any circuit should be attempted.
2. Disconnect AC power before servicing.

BEFORE RETURNING THE PROJECTOR: (Fire & Shock Hazard)

Before returning the projector to the user, perform the following safety checks:

1. Inspect lead wires are not pinched between the chassis and other metal parts of the projector.
2. Inspect all protective devices such as non-metallic control knobs, insulating materials, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacity networks, mechanical insulators, etc.
3. To be sure that no shock hazard exists, check for current leakage in the following manner:
 - Plug the AC cord directly into a 120-volt AC outlet, (Do not use an isolation transformer for this test).
 - Using two clip leads, connect a 1.5k ohm, 10 watt resistor paralleled by a 0.15 μ F capacitor in parallel between all exposed metal cabinet parts and earth ground.

- Use an AC voltmeter with sensitivity of 5000 ohm per volt., or higher, sensitivity to measure the AC voltage drop across the resistor (See Diagram).
- All checks must be repeated with the AC plug connection reversed. (If necessary, a non-polarized adapter plug must be used only for the purpose of completing these checks.)
Any reading of 0.3 volts RMS (this corresponds to 0.2 milliamp. AC.) or more is excessive and indicates a potential shock hazard which must be corrected before returning the unit to the owner.

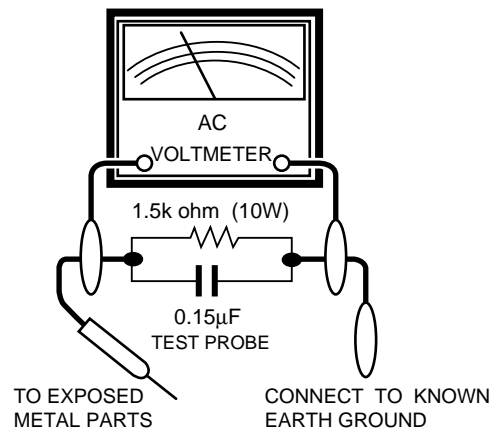

SAFETY NOTICE

Many electrical and mechanical parts in LCD Projector have special safety-related characteristics.

These characteristics are often not evident from visual inspection, nor can protection afforded by them be necessarily increased by using replacement components rated for higher voltage, wattage, etc.

Replacement parts which have these special safety characteristics are identified in this manual; electrical components having such features are identified by "⚠" and shaded areas in the Replacement Parts Lists and Schematic Diagrams. For continued protection, replacement parts must be identical to those used in the original circuit. The use of a substitute replacement parts which do not have the same safety characteristics as the factory recommended replacement parts shown in this service manual, may create shock, fire or other hazards.

AVIS POUR LA SECURITE

De nombreuses pièces, électriques et mécaniques, dans les projecteur à LCD présentent des caractéristiques spéciales relatives à la sécurité, qui ne sont souvent pas évidentes à vue.

Le degré de protection ne peut pas être nécessairement augmentée en utilisant des pièces de remplacement étalonnées pour haute tension, puissance, etc.

Les pièces de remplacement qui présentent ces caractéristiques sont identifiées dans ce manuel; les pièces électriques qui présentent ces particularités sont identifiées par la marque "⚠" et hachurées dans la liste des pièces de remplacement et les diagrammes schématiques. Pour assurer la protection, ces pièces doivent être identiques à celles utilisées dans le circuit d'origine. L'utilisation de pièces qui n'ont pas les mêmes caractéristiques que les pièces recommandées par l'usine, indiquées dans ce manuel, peut provoquer des électrocutions, incendies ou autres accidents.

WARNING: The bimetallic component has the primary conductive side exposed. Be very careful in handling this component when the power is on.

AVERTISSEMENT: La composante bimétallique dispose du conducteur primaire dénudé. Faire attention lors de la manipulation de cette composante sous tension.

NOTE TO SERVICE PERSONNEL

UV-RADIATION PRECAUTION

The light source, UHP lamp, in the LCD projector emits small amounts of UV-Radiation.


AVOID DIRECT EYE AND SKIN EXPOSURE.

To ensure safety please adhere to the following:

1. Be sure to wear sun-glasses when servicing the projector with the lamp turned "on" and the top enclosure removed.



2. Do not operate the lamp outside of the lamp housing.

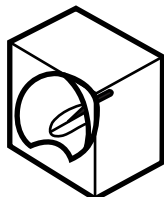

3. Do not operate for more than 2 hours with the enclosure removed.



UV-Radiation and Medium Pressure Lamp Precautions

1. Be sure to disconnect the AC plug when replacing the lamp.
2. Allow one hour for the unit to cool down before servicing.
3. Replace only with same type lamp. Type BQC-PGA10X//1 rated 100V/200W.
4. The lamp emits small amounts of UV-Radiation, avoid direct-eye contact.
5. The medium pressure lamp involves a risk of explosion. Be sure to follow installation instructions described below and handle the lamp with care.

NOTE POUR LE PERSONNEL D'ENTRETIEN


PRECAUTION POUR LES RADIATIONS UV

La source de lumière, la lampe UHP, dans le projecteur LCD émet de petites quantités de radiation UV.


EVITEZ TOUTE EXPOSITION DIRECTE DES YEUX ET DE LA PEAU.

Pour votre sécurité, nous vous prions de respecter les points suivants:


1. Toujours porter des lunettes de soleil lors d'un entretien du projecteur avec la lampe allumée et le haut du coffret retiré.

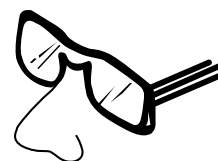

2. Ne pas faire fonctionner la lampe à l'extérieur du boîtier de lampe.

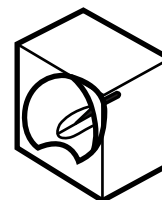

3. Ne pas faire fonctionner plus de 2 heures avec le coffret retiré.

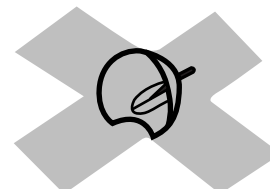

Précautions pour les radiations UV et la lampe moyenne pression

1. Toujours débrancher la fiche AC lors du remplacement de la lampe.
2. Laisser l'unité refroidir pendant une heure avant de procéder à l'entretien.
3. Ne remplacer qu'avec une lampe du même type. Type BQC-PGA10X//1, caractéristique 100V/200W.
4. La lampe émet de petites quantités de radiation UV-éviter tout contact direct avec les yeux.
5. La lampe moyenne pression implique un risque d'explosion. Toujours suivre les instructions d'installation décrites ci-dessous et manipuler la lampe avec soin.


UV-RADIATION PRECAUTION (Continued)

■ Lamp Replacement

Note:

Since the lamp reaches a very high temperature during units operation replacement of the lamp should be done at least one hour after the power has been turned off. (to allow the lamp to cool off.) Installing the new lamp, make sure not to touch the lamp (bulb) replace the lamp by holding its reflector ②.

[Use original replacement only.]

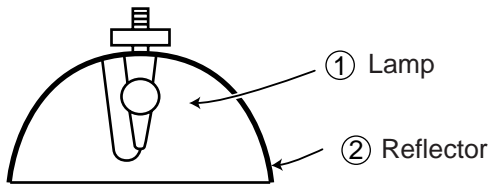

DANGER ! — Never turn the power on without the lamp to avoid electric-shock or damage of the devices since the stabilizer generates high voltages at its start.

Since small amounts of UV-radiation are emitted from an opening between the exhaust fans, it is recommended to place the cap of the optional lens on the opening during servicing to avoid eye and skin exposure.


PRECAUTION POUR LES RADIATIONS UV (Suite)

■ Remplacement de la lampe

Remarque:

Comme la lampe devient très chaude pendant le fonctionnement de l'unité, son remplacement ne doit être effectué au moins une heure après avoir coupé l'alimentation (pour permettre à la lampe de refroidir). En installant la nouvelle lampe, s'assurer de ne pas toucher la lampe (ampoule). Remplacer la lampe en tenant son réflecteur ②.

[N'utiliser qu'un remplacement d'origine.]

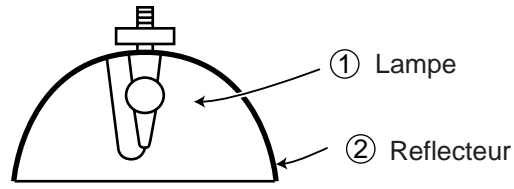

DANGER ! — Ne jamais mettre sous tension sans la lampe pour éviter un choc électrique ou des dommages des appareils car le stabilisateur génère de hautes tensions à sa mise en route.

Comme de petites quantités de radiation UV sont émises par une ouverture entre les ventilateurs aspirants, il est recommandé de placer le capuchon de l'optique optionnelle sur l'ouverture pendant l'entretien pour éviter une exposition des yeux et la peau.

WARNING: High brightness light source, do not stare into the beam of light, or view directly. Be especially careful that children do not stare directly in to the beam of light.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO MOISTURE OR WET LOCATIONS.



CAUTION

RISK OF ELECTRIC SHOCK.
DO NOT REMOVE SCREWS
EXCEPT SPECIFIED USER
SERVICE SCREW



The lighting flash with arrowhead within a triangle is intended to tell the user that parts inside the product are risk of electric shock to persons.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE CABINET.
NO USER-SERVICEABLE PARTS EXCEPT LAMP UNIT.
REFER SERVICING TO QUALIFIED SERVICE
PERSONNEL.



The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the manual with the projector.

CAUTION (POWER Unit)



For continued
protection against a
risk of fire, replace
only with same type
6.3A, AC250V fuse.
(F701)

AVERTISSEMENT: Source lumineuse de grande intensité. Ne pas fixer le faisceau lumineux ou le regarder directement. Veiller particulièrement à éviter que les enfants ne fixent directement le faisceau lumineux.

AVERTISSEMENT: AFIN D'ÉVITER TOUT RISQUE D'INCENDIE OU D'ELECTROCUTION, NE PAS PLACER CET APPAREIL DANS UN ENDROIT HUMIDE OU MOUILLE.



ATTENTION

RISQUE
D'ELECTROCUTION NE
PAS RETIRER LES VIS, A
L'EXCEPTION DES VIS DE
REPARATION UTILISATEUR
SPECIFIEES



L'éclair terminé d'une flèche à l'intérieur d'un triangle indique à l'utilisateur que les pièces se trouvant dans l'appareil sont susceptibles de provoquer une décharge électrique.

ATTENTION: POUR ÉVITER TOUT RISQUE
D'ELECTROCUTION, NE PAS RETIRER LE CAPOT.
AUCUNE DES PIÈCES INTÉRIEURES N'EST RÉPARABLE
PAR L'UTILISATEUR, À L'EXCEPTION DE L'UNITÉ DE
LAMPE. POUR TOUTE RÉPARATION, S'ADRESSER À UN
TECHNICIEN D'ENTRETIEN QUALIFIÉ.



Le point d'exclamation à l'intérieur d'un triangle indique à l'utilisateur que les instructions de fonctionnement et d'entretien sont détaillées dans les documents fournis avec le projecteur.

PRECAUTION

(Unité de PUTSSANCE)



Pour assurer une
longue protection
contre l'incendie,
utiliser seulement un
fusible de même type
(6,3A, 250V CA).
(F701)

Precautions for using lead-free solder

1 Employing lead-free solder

"Main and R/C Receiver PWBs" of these models employs lead-free solder. The LF symbol indicates lead-free solder, and is attached on the PWBs and service manuals. The alphabetical character following LF shows the type of lead-free solder.

Example:

LFa

Sn-Ag-Cu

Indicates lead-free solder of tin, silver and copper.

2 Using lead-free wire solder

When fixing the PWB soldered with the lead-free solder, apply lead-free wire solder. Repairing with conventional lead wire solder may cause damage or accident due to cracks.

As the melting point of lead-free solder (Sn-Ag-Cu) is higher than the lead wire solder by 40°C, we recommend you to use a dedicated soldering bit, if you are not familiar with how to obtain lead-free wire solder or soldening bit, contact our service station or service ranch in your area.

3 Soldering

As the melting point of lead-free solder (Sn-Ag-Cu) is about 220°C which is higher than the conventional lead solder by 40°C, and as it has poor solder wettability, you may be apt to keep the soldering bit in contact with the PWB for extended period of time. However, Since the land may be peeled off or the maximum heat-resistance temperature of parts may be exceeded, remove the bit from the PWB as soon as you conurm the steady soldering condition. Lead-free solder contains more tin, and the end of the soldering bit may be easily corroded. Make sure to tum on and off the power of the bit as required.

if a different type of solder stays on the tip of the soldering bit, it is alloyed with lead-free solder. Clean the bit after every use of it.

When the tip of the soldering bit is blackened during use, file it with steel wool or fine sandpaper.


Becareful when replacing parts with polarity indication on the PWB silk.

Lead-free wire solder for servicing


Part No.	★	Description	Code
ZHNDAi123250E	J	φ0.3mm 250g(1roll)	BL
ZHNDAi126500E	J	φ0.6mm 500g(1roll)	BK
ZHNDAi12801KE	J	φ1.0mm 1kg(1roll)	BM

Operation Manual


Projector (Front and Top View)

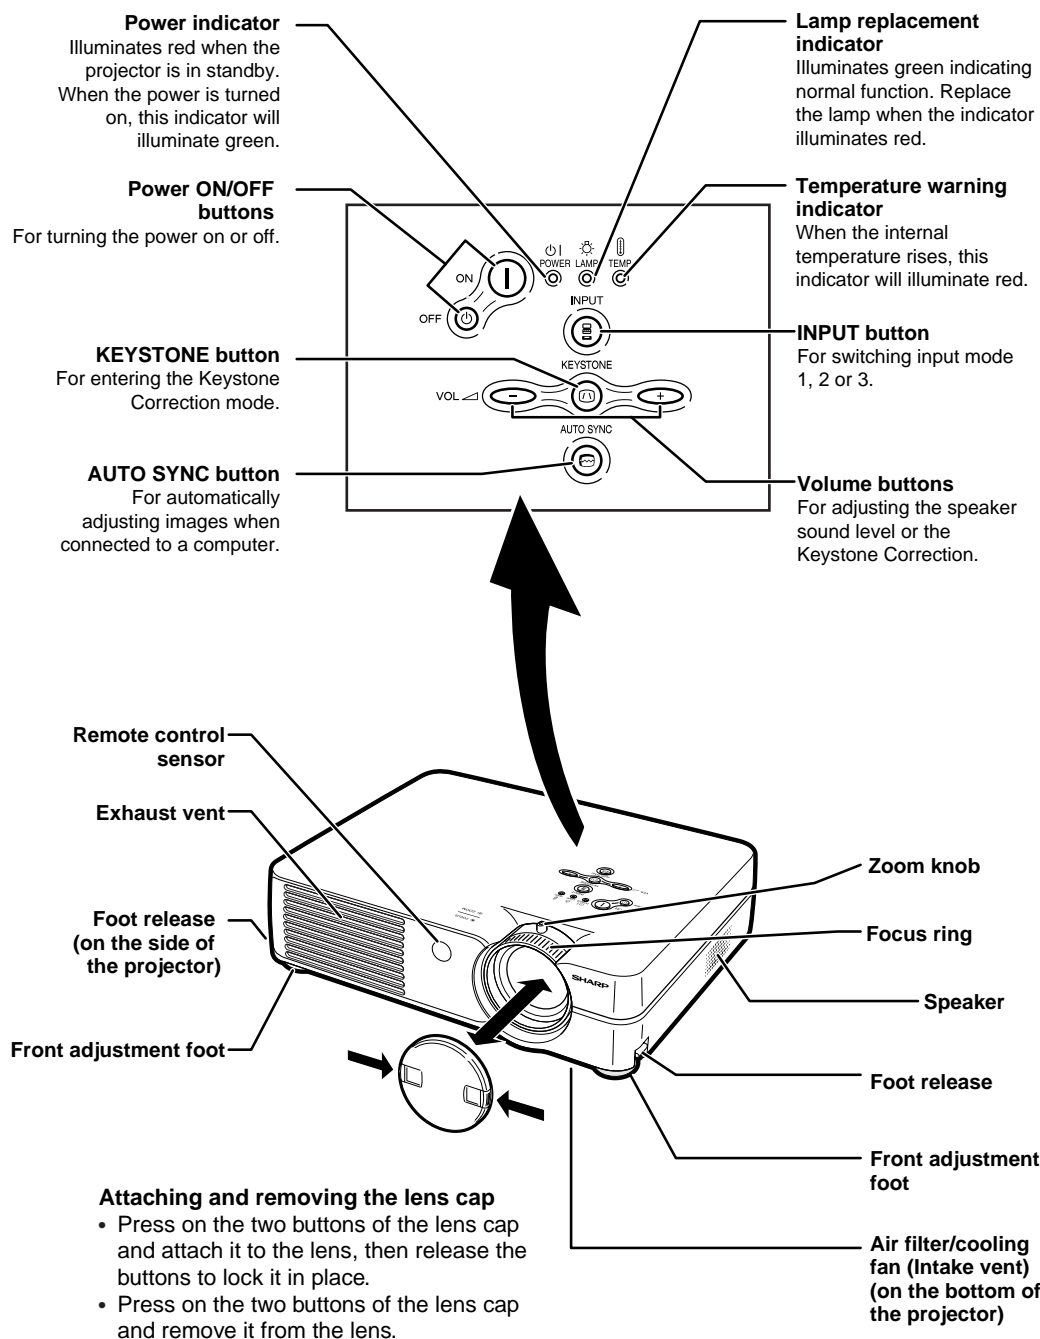

Projector (Rear View)

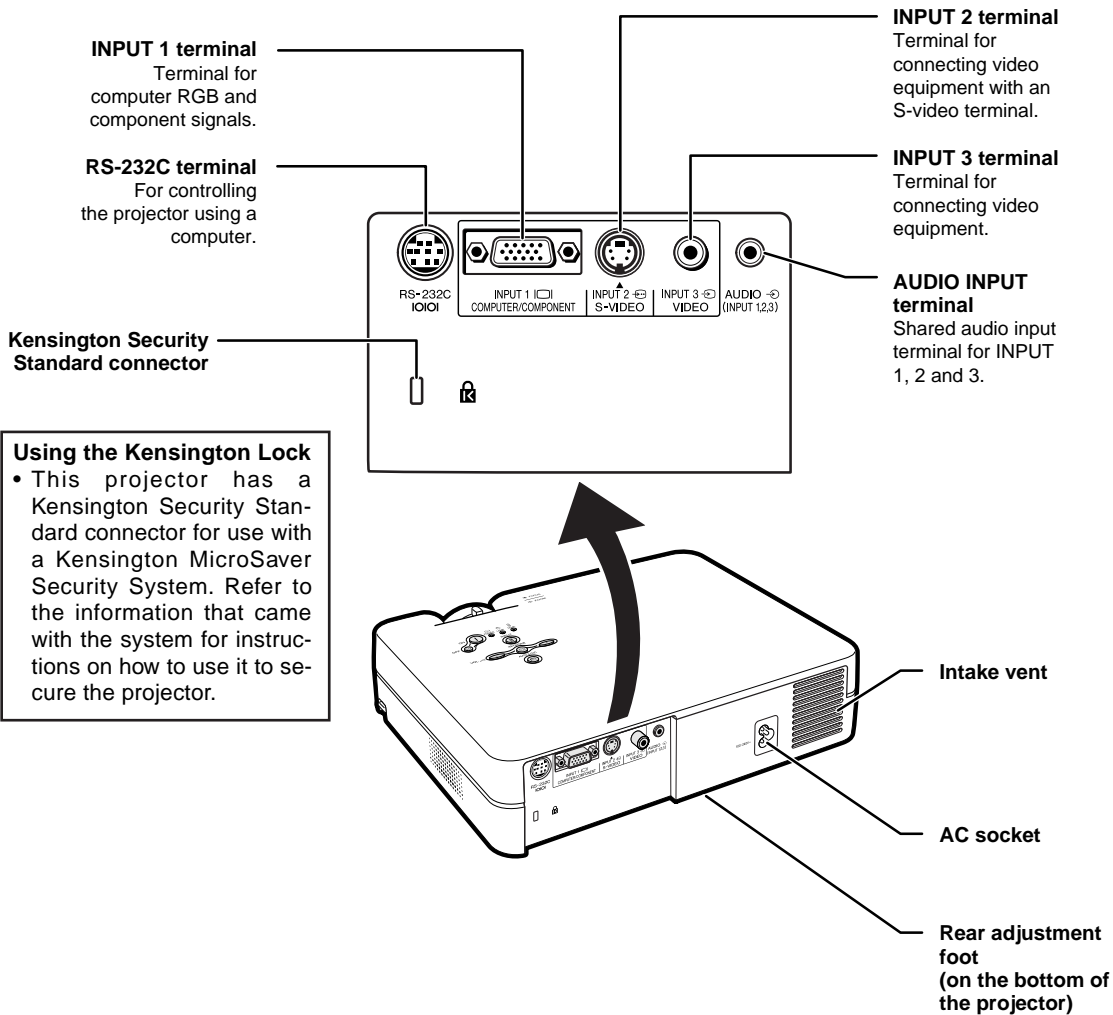

Remote Control (Front View)

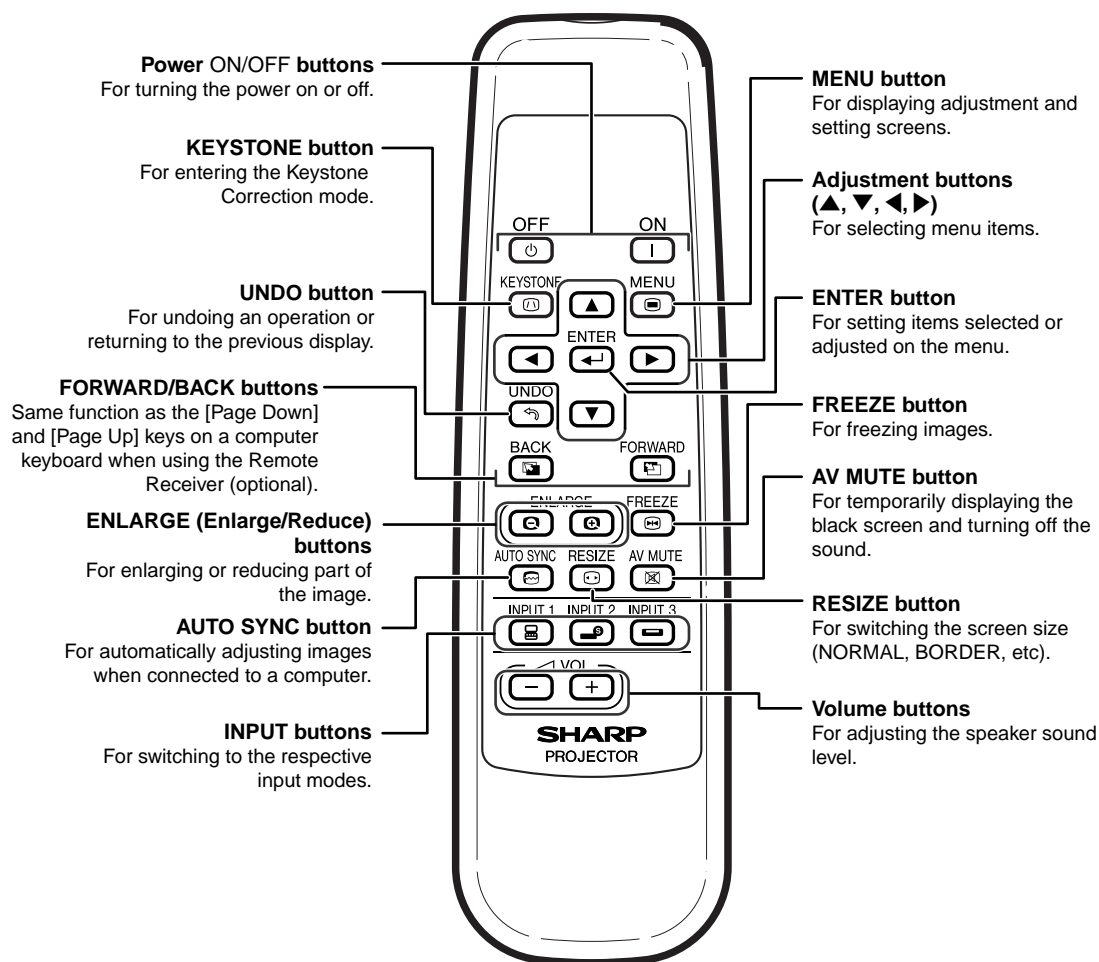

Usable Range

- The remote control can be used to control the projector within the ranges shown in the illustration.




Note

- The signal from the remote control can be reflected off a screen for easy operation. However, the effective distance of the signal may differ depending on the screen material.

When using the remote control:


- Be sure not to drop, expose to moisture or high temperature.
- The remote control may malfunction under a fluorescent lamp. In this case, move the projector away from the fluorescent lamp.

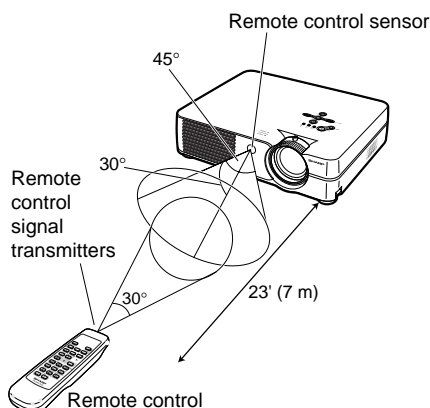

Inserting the Batteries

The batteries (two R-6 batteries ("AA" size, UM/SUM-3, HP-7 or similar)) are supplied in the package.

- 1 Press the ▲ mark on the cover and slide it in the direction of the arrow.
- 2 Insert the batteries.
 - Insert the batteries making sure the polarities correctly match the ⊕ and ⊖ marks inside the battery compartment.
- 3 Attach the cover and slide it until it clicks into place.

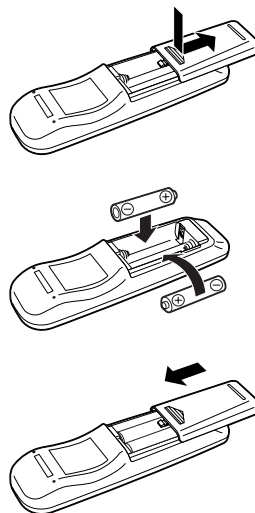

Incorrect use of the batteries may cause them to leak or explode. Please follow the precautions below.

⚠ Caution

- Insert the batteries making sure the polarities correctly match the ⊕ and ⊖ marks inside the battery compartment.
- Batteries of different types have different properties, therefore do not mix batteries of different types.
- Do not mix new and old batteries.
This may shorten the life of new batteries or may cause old batteries to leak.
- Remove the batteries from the remote control once they have run out, as leaving them in can cause them to leak. Battery fluid from leaked batteries is harmful to skin, therefore be sure to first wipe them and then remove them using a cloth.

- The batteries included with this projector may run down in a short period, depending on how they are kept. Be sure to replace them as soon as possible with new batteries.
- Remove the batteries from the remote control if you will not be using the remote control for a long time.

RS-232C Specifications and Command Settings

PC control

A computer can be used to control the projector by connecting an RS-232C serial control cable (cross type, sold separately) to the projector.

Communication conditions

Set the serial port settings of the computer to match that of the table.

Signal format: Conforms to RS-232C standard.

Baud rate: 9,600 bps

Data length: 8 bits

Parity bit: None

 
Stop bit: 1 bit

Flow control: None

Basic format


Commands from the computer are sent in the following order: command, parameter, and return code. After the projector processes the command from the computer, it sends a response code to the computer.

Command format



Response code format

 Normal response



Problem response (communication error or incorrect command)

 


Info

- When more than one code is being sent, send each command only after the response code for the previous command from the projector is verified.

Commands

Example: When turning on the projector, make the following setting.



BUTTONS & REMOTE CONTROL KEY	CONTROL CONTENTS	COMMAND	PARAMETER	RETURN
	Power Off (Standby)	P O W R	_ _ _ 0	OK or ERR
	Power On	P O W R	_ _ _ 1	OK or ERR
	INPUT1	I R G B	_ _ _ 1	OK or ERR
	INPUT2	I V E D	_ _ _ 1	OK or ERR
	INPUT3	I V E D	_ _ _ 2	OK or ERR
	Lamp Usage Time (hour)	T L T T	_ _ _ 1	0~9999
	Remaining Lamp Life (Percentage)	T L T L	_ _ _ 1	0~100
	Lamp Status	T L P S	_ _ _ 1	0:Off, 1:On, 2:Retry, 3:Waiting, 4:Lamp Error
	Unit Status	T A B N	_ _ _ 1	0:Normal, 1:Temp High, 2:Fan Err, 4:Filter Cover Err, 8:Lamp 100 hours, 16:Lamp Burnt-out, 32:Lamp Not Lit, 64:Temp Abnormally High
	Model Name Check	T N A M	_ _ _ 1	PROJECTOR NAME
	AV Mute Off	I M B K	_ _ _ 0	OK or ERR
	AV Mute On	I M B K	_ _ _ 1	OK or ERR
	Auto Sync Start	A D J S	_ _ _ 1	OK or ERR

 


Note

- If an underbar (_) appears in the parameter column, enter a space. If an asterisk (*) appears, enter a value in the range indicated in brackets under CONTROL CONTENTS.


Connection Pin Assignments

INPUT 1 RGB Signal Terminal: 15-pin Mini D-sub female connector




RGB Input	Component Input
1. Video input (red)	1. P _R (C _R)
2. Video input (green/sync on green)	2. Y
3. Video input (blue)	3. P _B (C _B)
4. Not connected	4. Not connected
5. Not connected	5. Not connected
6. Earth (red)	6. Earth (P _R)
7. Earth (green/sync on green)	7. Earth (Y)
8. Earth (blue)	8. Earth (P _B)
9. Not connected	9. Not connected
10. GND	10. Not connected
11. Not connected	11. Not connected
12. Bi-directional data	12. Not connected
13. Horizontal sync signal	13. Not connected
14. Vertical sync signal	14. Not connected
15. Data clock	15. Not connected

RS-232C Terminal: 9-pin Mini DIN female connector

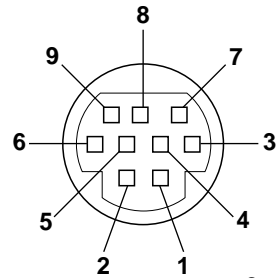


Pin No.	Signal	Name	I/O	Reference
1				Not connected
2	RD	Receive Data	Input	Connected to internal circuit
3	SD	Send Data	Output	Connected to internal circuit
4				Not connected
5	SG	Signal Ground		Connected to internal circuit
6				Not connected
7				Not connected
8				Not connected
9				Not connected

9-pin D-sub male connector of the DIN-D-sub RS-232C adaptor

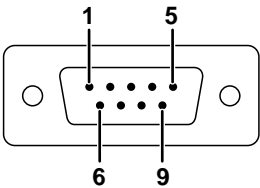

Pin No.	Signal	Name	I/O	Reference
1				Not connected
2	RD	Receive Data	Input	Connected to internal circuit
3	SD	Send Data	Output	Connected to internal circuit
4				Not connected
5	SG	Signal Ground		Connected to internal circuit
6				Not connected
7				Not connected
8				Not connected
9				Not connected

RS-232C Cable recommended connection: 9-pin D-sub female connector

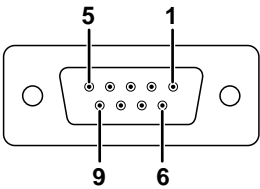


Pin No.	Signal	Pin No.	Signal
1	CD	1	CD
2	RD	2	RD
3	SD	3	SD
4	ER	4	ER
5	SG	5	SG
6	DR	6	DR
7	RS	7	RS
8	CS	8	CS
9	CI	9	CI

Note

- Depending on the controlling device used, it may be necessary to connect Pin 4 and Pin 6 on the controlling device (e.g. PC).



Dimensions

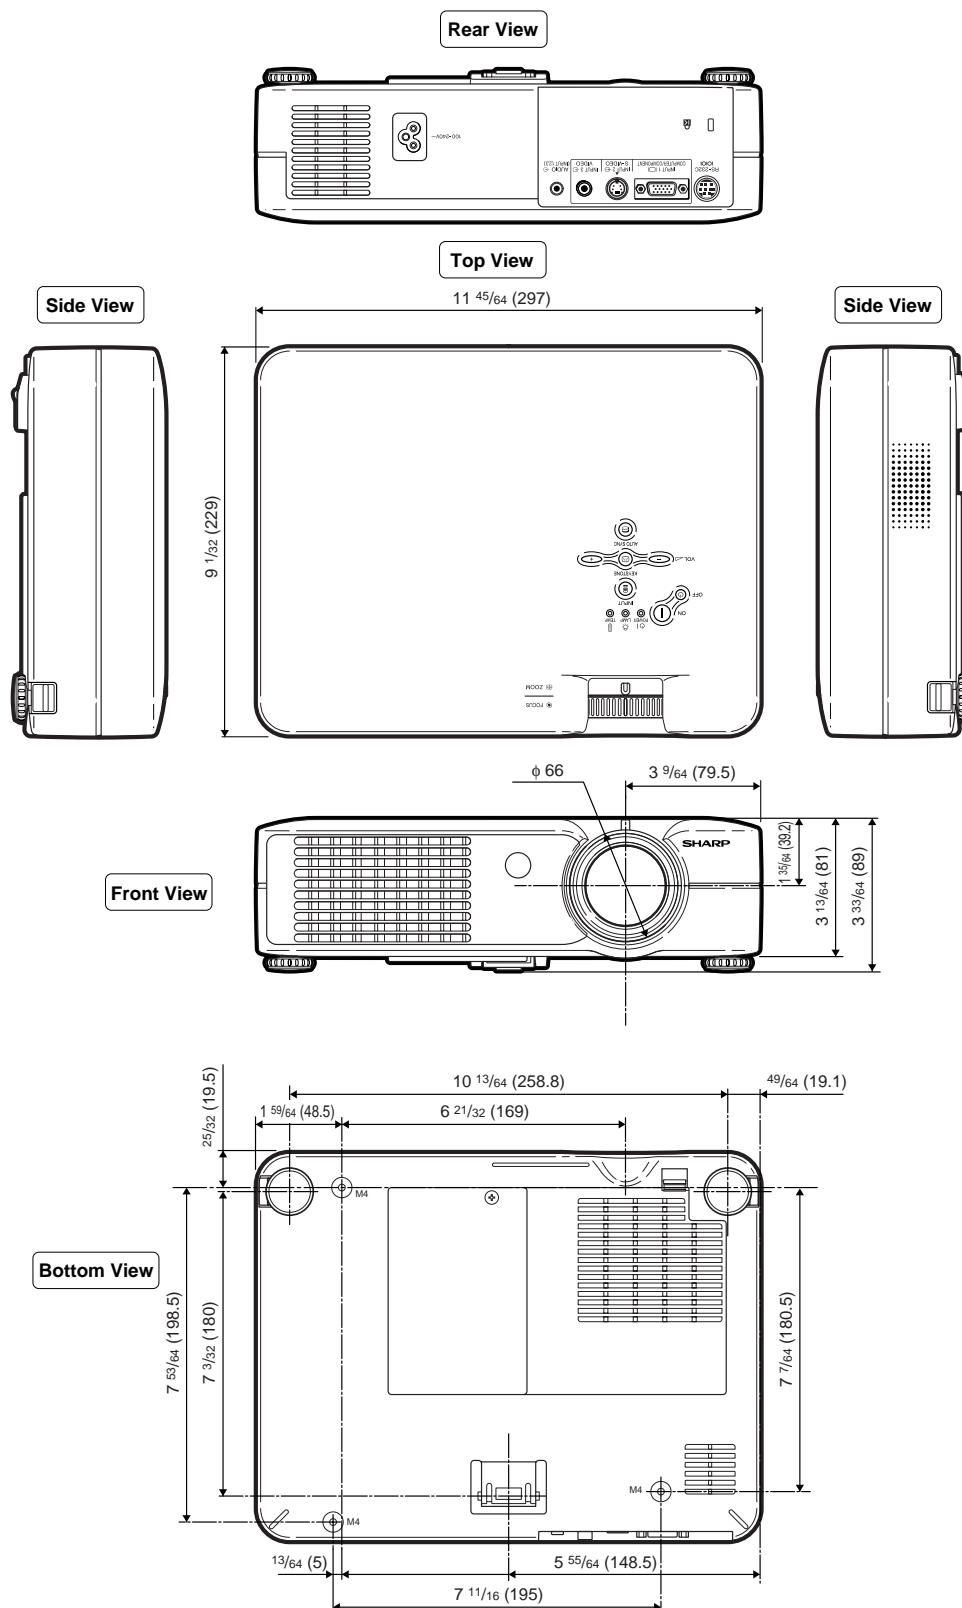


Unit: inches (mm)

REMOVING OF MAJOR PARTS


1. Removing the lamp unit.

- 1-1. Loosen a screw and detach the lamp door.
- 1-2. Loosen the two screws. Hold the lamp unit by the handle and pull it in the direction of allow.

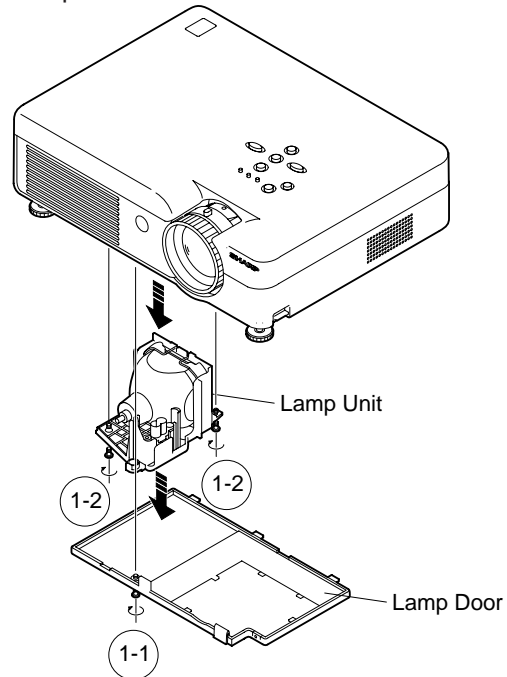


2. Removing the top body

- 2-1. Remove a screw from behind of the set.
- 2-2. Remove the six lock screws from bottom of the set.
- 2-3. Remove the two hooks and detach the top body.

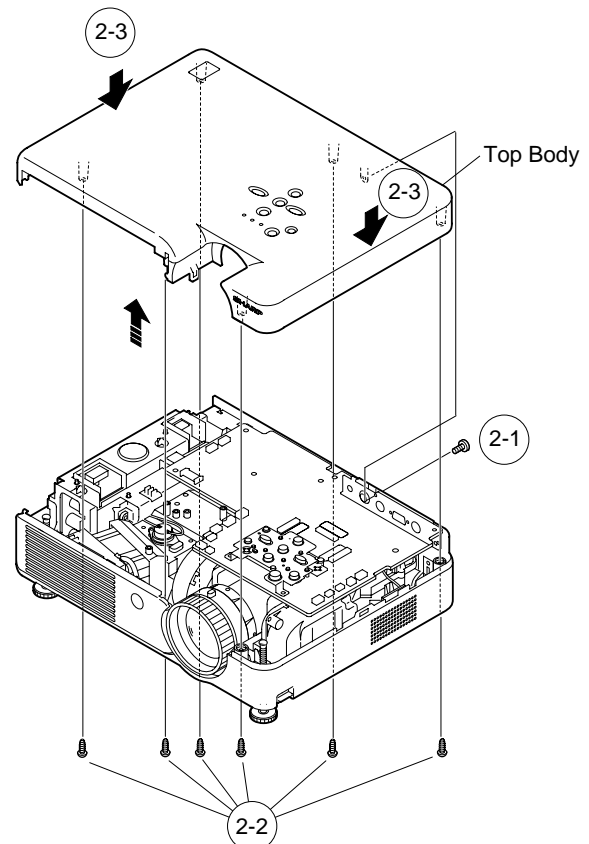


3. Removing the main PWB unit

- 3-1. Remove the seven screws.
- 3-2. Remove all the connectors from main PWB.
- 3-3. Detach the main PWB.
- 3-4. Remove the two screws and detach the operation button unit.

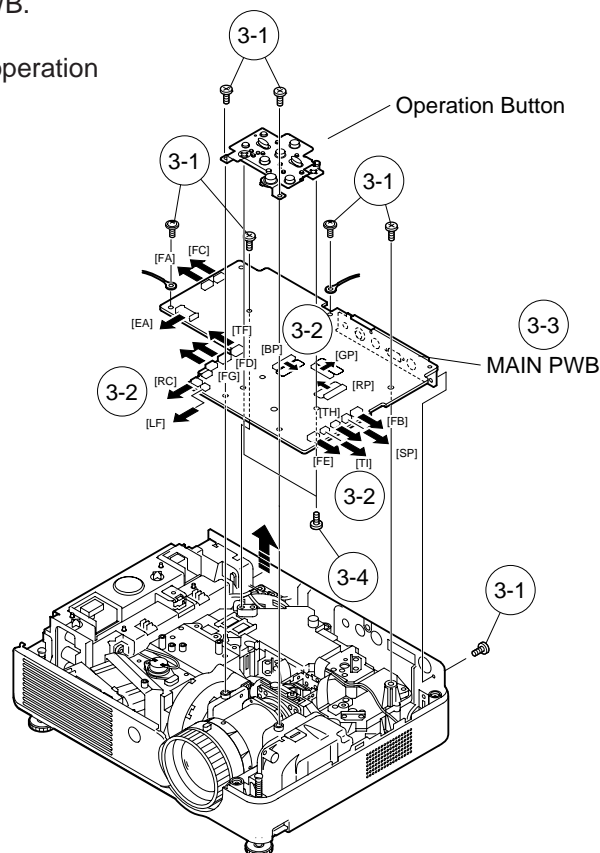


4. Removing the exhaust cover, optical mechanism unit, R/C receiver PWB and speaker

- 4-1. Remove the two screws and detach the lamp socket.
- 4-2. Detach the Power/Ballast holder cover.
- 4-3. Remove all the connectors from optical mechanism unit.
- 4-4. Remove the nine screws and take out of the optical mechanism unit and the exhaust cover.
- 4-5. Detach the R/C receiver PWB.
- 4-6. Detach the Speaker.

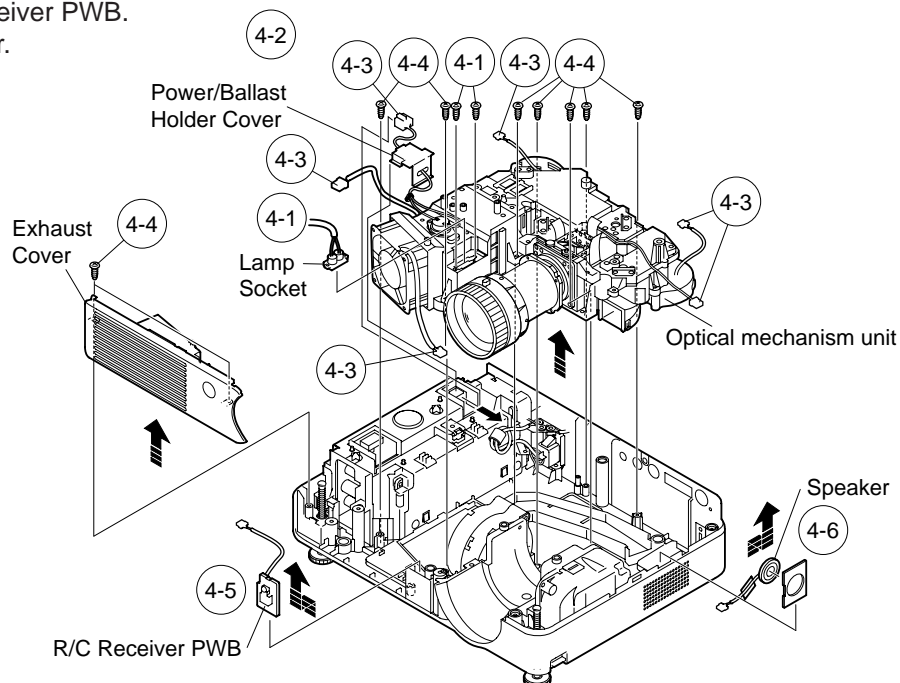


5. Removing the AC inlet, power/ballast unit and cooling fan

- 5-1. Remove a screw from behind of the set.
- 5-2. Remove a screw and take out of the power/ballast assembly.
- 5-3. Detach the bottom shield and shield cover.
- 5-4. Remove a connector and detach the AC inlet.
- 5-5. Remove the two hooks and take out of the ballast unit from power/ballast case. Remove the all connectors from power PWB.
- 5-6. Remove the two screws and detach the power PWB.
- 5-7. Remove the two screws and cooling fan.

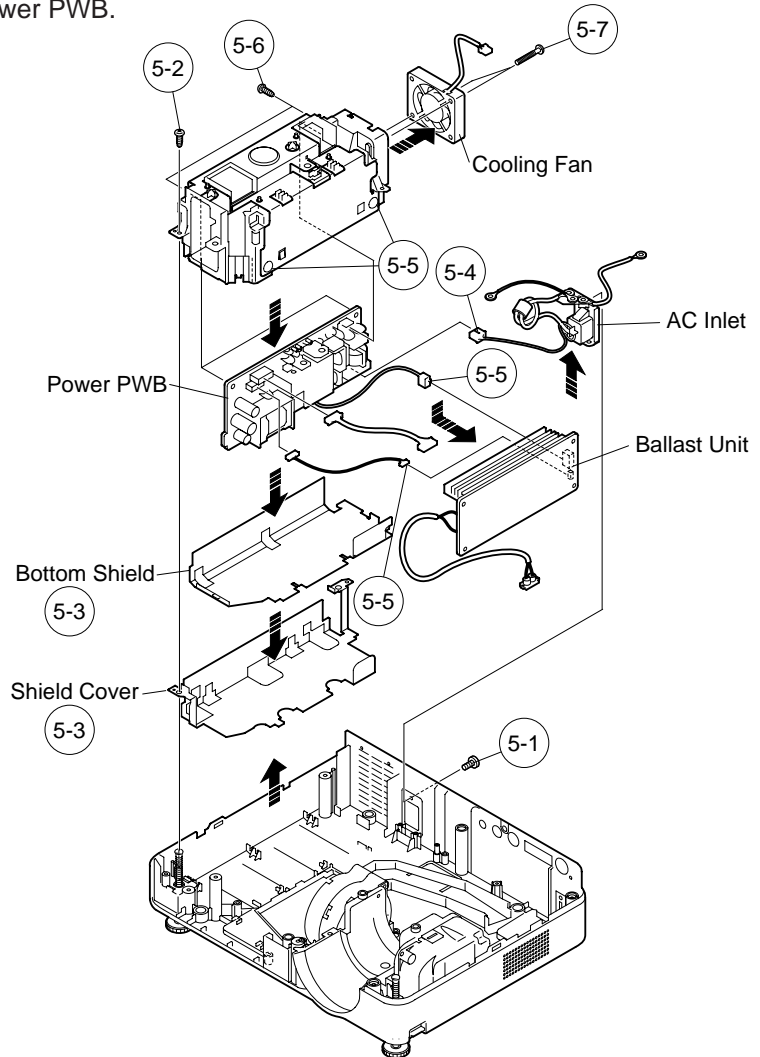

Note: When mounting the shield (bottom) for power supply/ballast (PSLDMA189WJFW) on the power supply/ballast holder ass'y (CHLDZA135WJ01), make sure that it is inserted into the following place.

Be sure to insert the claw of the bottom shield into the gap between the upper shield and holder.

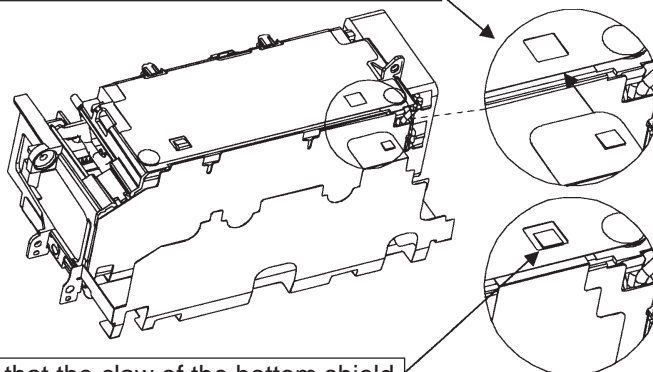


* Never insert the claw between the insulating plate and holder since the insulating distance to the ballast PWB becomes inadequate.

After assembly, make sure that the claw of the bottom shield is visible from the square hole on the upper shield.

6. Removing the intake duct assembly

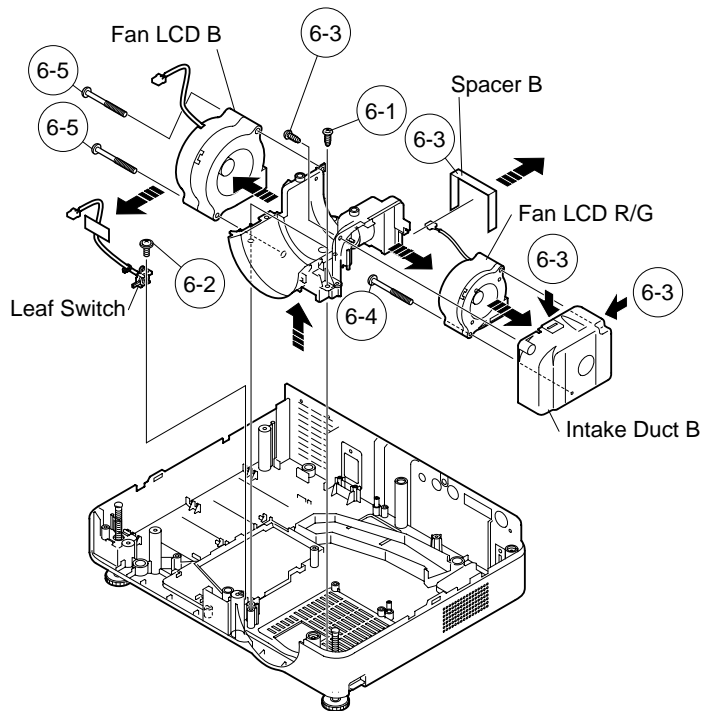

 

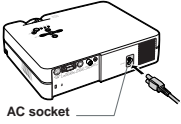
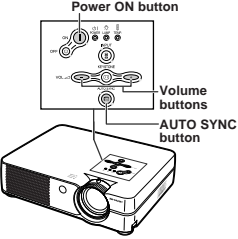
- 6-1. Remove the two screws and take out of the intake duct assembly.
- 6-2. Remove a screw and detach the leaf switch.
- 6-3. Remove a screw and two hooks. Detach the the spacer B. Take out of the fan LCD R/G-intake duct B assembly.
- 6-4. Remove a screw and detach the fan LCD R/G.
- 6-5. Remove the two screws and detach the fan LCD B.



Resetting the TOTAL LAMP TIMER

● Resetting the total lamp timer

When replacing the lamp, reset the total lamp timer in the procedure below.

1 Connect the power cord. • Plug the power cord into the AC socket of the projector.	2 Reset the lamp timer. • While simultaneously holding down  and  on the projector, press  and  on the projector. • "LAMP 0000H" is displayed, indicating that the lamp timer is reset.	Info • Make sure to reset the lamp timer only when replacing the lamp. If you reset the lamp timer and continue to use the same lamp, this may cause the lamp to become damaged or explode.
 <p>AC socket</p>	 <p>Power ON button Volume buttons AUTO SYNC button</p>	

■ The warning lights on the projector indicate problems inside the projector.

■ If a problem occurs, either the temperature warning indicator or the lamp replacement indicator will illuminate red, and the power will turn off. After the power has been turned off, follow the procedures given below.



	Maintenance indicator		Condition	Problem	Possible Solution
	Normal	Abnormal			
Temperature warning indicator	Off	Red on/ Power off	The internal temperature is abnormally high.	• Blocked air intake • Cooling fan breakdown • Internal circuit failure • Clogged air intake	• Relocate the projector to an area with proper ventilation. • Take the projector to your nearest Sharp Authorized Projector Dealer or Service Center for repair.
Lamp replacement indicator	Green on Green blinks when the lamp is active.	Red on Red on/ Power off	Time to change the lamp The lamp does not illuminate.	• Remaining lamp life becomes 5% or less. • Burnt-out lamp • Lamp circuit failure	• Carefully replace the lamp. • Take the projector to your nearest Sharp Authorized Projector Dealer or Service Center for repair. • Please exercise care when replacing the lamp.
Power indicator	Green on/ Red on	Red blinks	The power indicator blinks in red when the projector is on.	• The filter/lamp unit cover is open.	• Securely install the cover. • If the power indicator blinks even when the filter/lamp unit cover is securely installed, contact your nearest Sharp Authorized Projector Dealer or Service Center for advice.



■ Replacing the Air Filter

- This projector is equipped with air filters to ensure the optimal operating condition of the projector.
- The air filters should be cleaned every 100 hours of use. Clean the filters more often when the projector is used in a dusty or smoky location.
- Ask your nearest Sharp Authorized Projector Dealer or Service Center to exchange the filter (PFILDA008WJZZ) when it is no longer possible to clean.

Cleaning and Replacing the Air Filter


1 Turn off the power and disconnect the power cord.

- Press  on the projector or  on the remote control. Wait until the cooling fan stops.

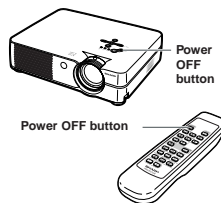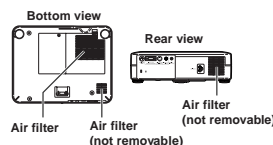


2 Remove the filter/lamp unit cover.

- Turn the projector over. Loosen the user service screw (1) that secures the filter/lamp unit cover. Pressing the tab (2), remove the filter/lamp unit cover (3).

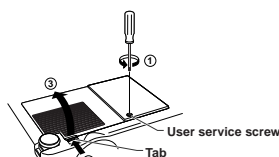


3 Remove the air filter.

- Pick the air filter up with your fingers and lift it out of the filter/lamp unit cover.

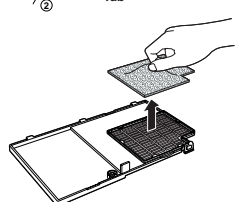


4 Clean the air filter.

- Clean the dust off the air filter and cover with a vacuum cleaner extension hose.

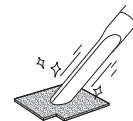


5 Replace the air filter.

- Place the air filter underneath the tabs on the filter/lamp unit cover.

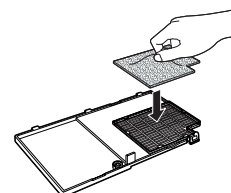


6 Replace the filter/lamp unit cover.

 - Align the tab on the filter/lamp unit cover (1) and place it while pressing the tab (2) to close it. Then tighten the user service screw (3) to secure the filter/lamp unit cover.




Note

- Be sure the filter/lamp unit cover is securely installed. The power will not turn on unless it is correctly installed.
- If dust or dirt has collected inside the rear and bottom air filters (not removable), clean the filter with a vacuum cleaner extension hose.

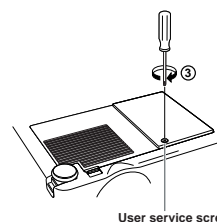

THE OPTICAL UNIT OUTLINE


Layout for proper setup of the optical components and parts (top view)

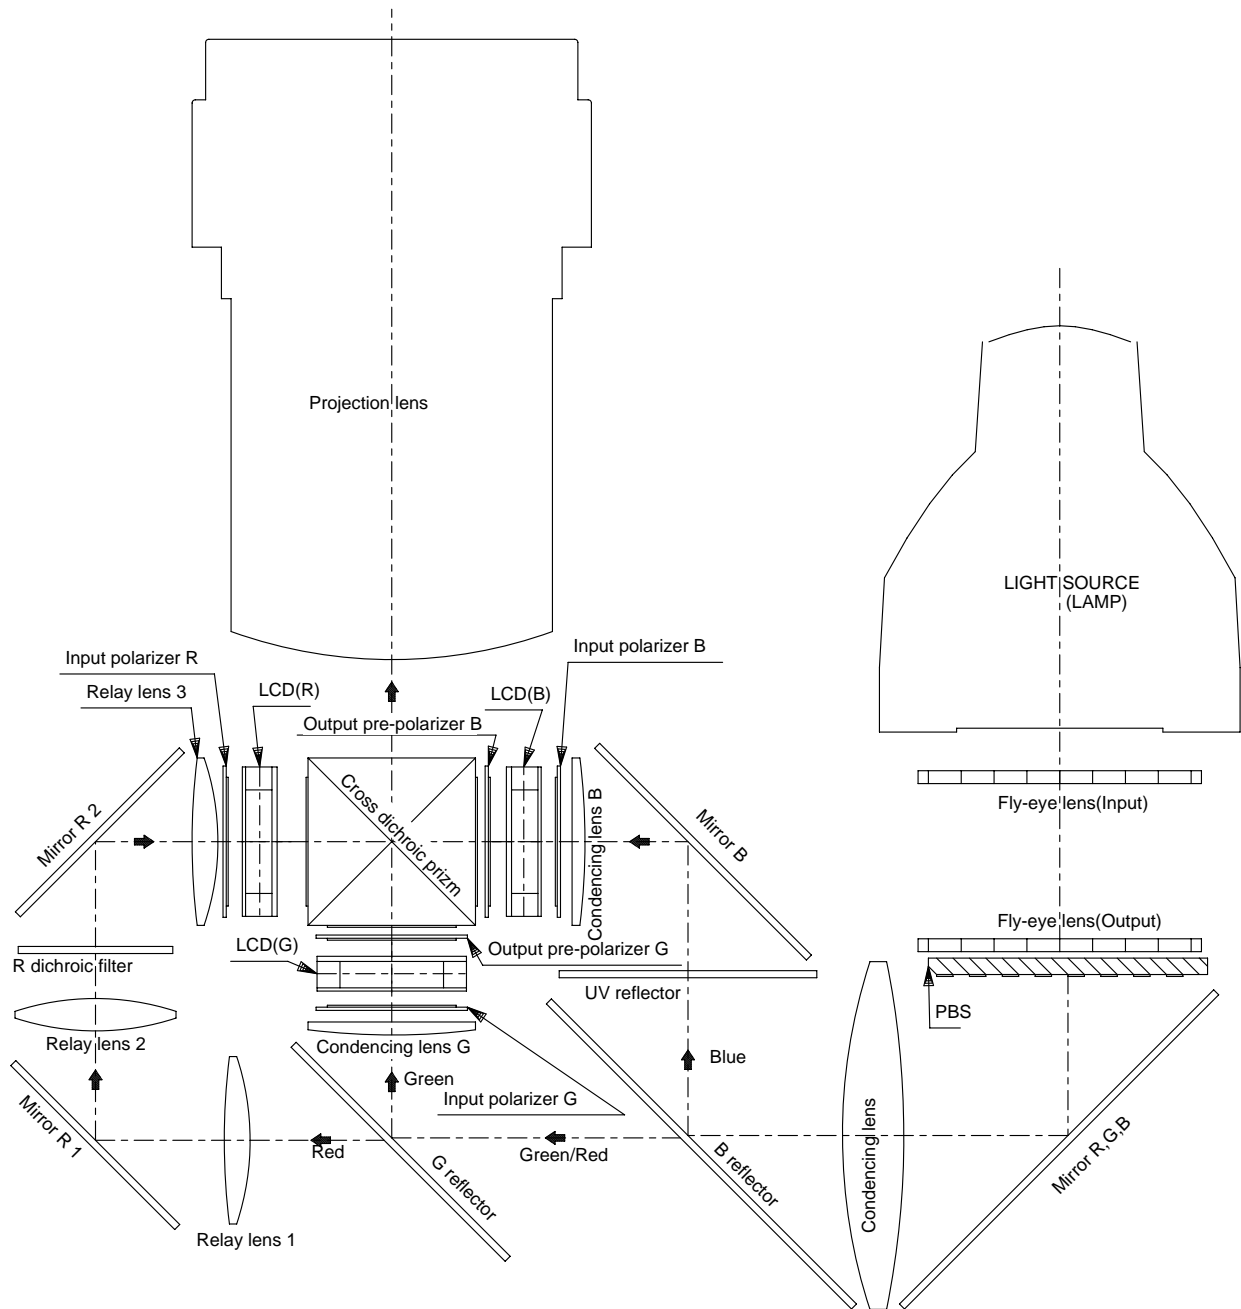

Replacing the prism holder unit



1. Remove the two lock screws, and take the prism holder unit and the projection lens assembly out of the optical unit.
2. Remove the four lock screws, separate the prism holder unit and the projection lens assembly from each other.
3. Replace the prism holder unit with new one. Take the above steps 1 and 2 in reverse order.

Note: Even if just one of the LCD panels is defective, it is necessary to replace the entire prism holder unit. Do not replace just the defective LCD panel only.

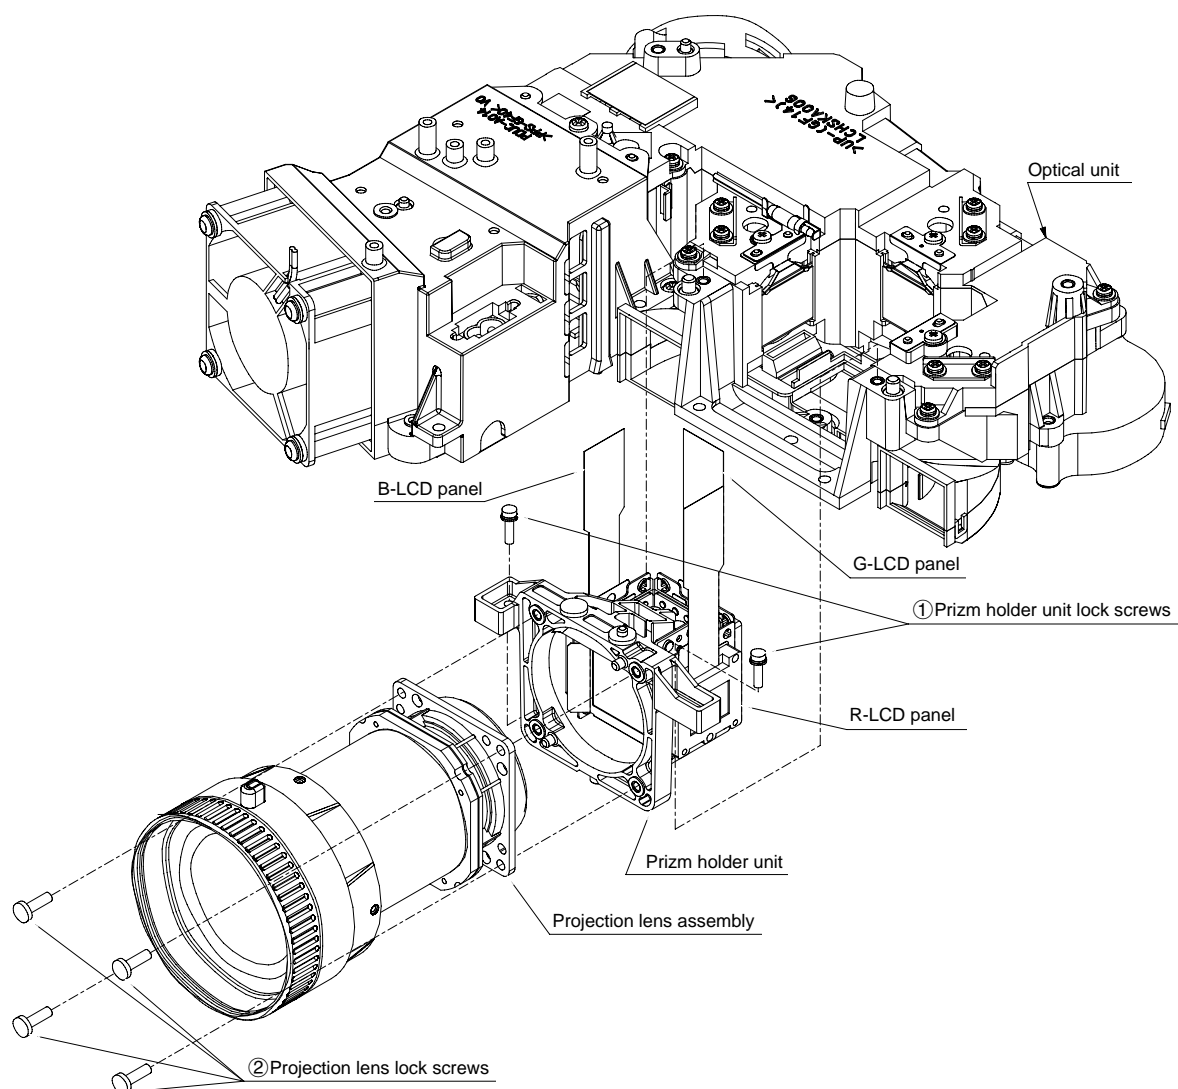


ELECTRICAL ADJUSTMENT

No.	Adjusting point	Adjusting conditions	Adjusting procedure
1	EEPROM initialization	1. Turn on the power (with the lamp on) and warm up the set for 15 minutes.	<ul style="list-style-type: none"> Make the following settings. Press S2002 to call the process mode and execute "SS2" on SS menu.
2-1	R/G/B Brightness adjustment	1. Select the following group and subjects. Group : AD Subject : R-Bright G-Bright B-Bright (Process GAMMA interlock) 2. Feed the XGA 16-step signal with an amplitude level of 50% (0.35 Vp-p).	1. Watching the screen, adjust the R-, G- and B-Bright settings so that the second tone (3% level step) on the black side should have some pixel dropouts and the bright color zone should become just about a half.
2-2	R/G/B Contrast adjustment	1. Select the following group and subjects. Group : AD Subject : R-Contrast G-Contrast B-Contrast (Process GAMMA interlock) 2. Feed the XGA white signal with an amplitude level of 96% (0.67 Vp-p).	1. Watching the screen, adjust the R-, G- and B-Contrast settings so that because of some pixel dropouts, the bright color zone should become just about a half.
3	DTV Brightness/Contrast adjustment	1. Feed a 480P component 10-step signal with 100% amplitude. 2. Select the following group and subjects. Group : DTV Subject : Bright Contrast (Process GAMMA interlock)	1. Check the setting value. Contrast (White Level): 7 Bright (Black Level): 6
4	DVD Brightness/Contrast adjustment	1. Feed a 480PI component 10-step signal with 100% amplitude. 2. Select the following group and subjects. Group : DVD Subject : Bright Contrast (Process GAMMA interlock)	1. Check the setting value. Contrast (White Level): 6 Bright (Black Level): 8

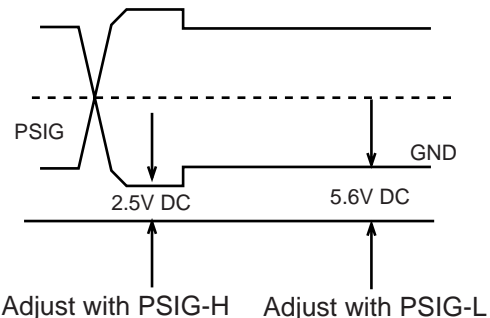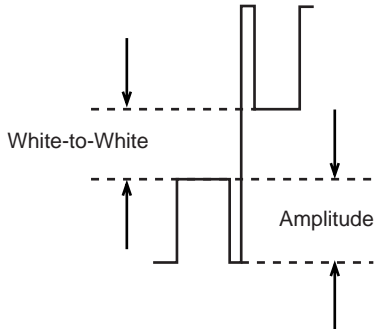No.	Adjusting point	Adjusting conditions	Adjusting procedure
5	Video Brightness/Contrast adjustment	<ol style="list-style-type: none"> 1. Feed an NTSC composite video 10-step signal (no setup) with 100% amplitude. 2. Select the following group and subjects. Group : DVD Subject : Bright Contrast (Process GAMMA interlock) 	<ol style="list-style-type: none"> 1. Check the setting value. Contrast (White Level): 5 Bright (Black Level): 8
6	PSIG adjustment	<ol style="list-style-type: none"> 1. Select the following group and subjects. Group : OUTPUT2 Subject : PSIG-H PSIG-L 2. Check the fixed value. PSIG-H: 64 PSIG-L: 146 	<ol style="list-style-type: none"> 1. Feed the XGA signal and adjust to make the following PSIG waveform. (TP1101, TP1201 and TP1301) 
7	R/G/B Black Level Signal Amplitude adjustment	<ol style="list-style-type: none"> 1. Select the following group and subjects. Group : OUTPUT1 Subject : On Green adjustment G1-BLK G1-GAIN On Red Adjustment R1-BLK R1-GAIN On Blue Adjustment B1-BLK B1-GAIN 2. Make sure the process adjustment color bags appear onscreen. 3. Connect a synchroscope to P1301-2P for the G setting. 4. Connect the synchroscope to P1301-1P and P1301-3P for the R and B settings, respectively. 	<ol style="list-style-type: none"> 1. Select G1-GAIN. Using the set's control switch or the remote controller's button, adjust the signal amplitude to $4.05 \text{ Vp-p} \pm 0.05 \text{ V}$. 2. Now select G1-BLK. Using the set's control switch or the remote controller's button, adjust the white-to-white level to $1.70 \text{ Vp-p} \pm 0.05 \text{ V}$. 3. Do the same for the R and B settings. 

No.	Adjusting point	Adjusting conditions	Adjusting procedure
8	RGB countervoltage adjustment	1. Feed the countervoltage adjustment signal. (XGA) 2. Select the following group and subjects. Group : OUTPUT3 Subject : RC (R) GC (G) BC (B)	1. Using the set's control switch or the remote controller's button, adjust the setting so that the flickering be minimum. 2. Adjust the setting so that the image comes to the center of the screen.
9	RGB white balance adjustment	1. Feed the RGB 50% gray signal. (XGA) 2. Select the following group and subjects. Group : OUTPUT1 Subject : R1-BLK(R) B1-BLK(B)	1. Adjust the R1-BLK and B1-BLK settings to have the chromacity of $x = 285 \pm 5$ and $y = 323 \pm 5$. (8500K)
10	sRGB adjustment	1. Feed the RGB 50% gray signal. (XGA) 2. Select the following group and subjects. Group : OUTPUT1 Subject : S-R1-BLK S-R1-GAIN S-G1-BLK S-G1-GAIN S-B1-BLK S-B1-GAIN	1. Adjust the S-R1-BLK and S-B1-BLK settings to have the chromacity of $x = 313 \pm 5$ and $y = 344 \pm 5$. (6500K)
11	Automatic color irregularity correction	1. Apply the automatic color correction using the automatic color irregularity correction system.	1. Make sure that no remarkable uneven color remains on the screen.
12	Video Tint adjustment	1. Select the following group and subject. Group : VIDEO Subject : N-Tint P-Tint S-Tint	1. Check the fixed value. N-Tint : 8 P-Tint : 8 S-Tint : 8
13	Video Color saturation adjustment	1. Select the following group and subject. Group : VIDEO Subject : N-Color P-Color S-Color	1. Check the fixed value. N-Color : 10 P-Color : 10 S-Color : 10
14	DTV Tint adjustment	1. Select the following group and subject. Group : DTV Subject : Tint	1. Check the fixed value. Tint : 8

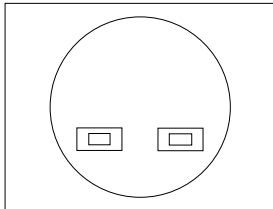No.	Adjusting point	Adjusting conditions	Adjusting procedure
15	DTV Color saturation adjustment	1. Select the following group and subject. Group : DTV Subject : Color	1. Check the fixed value. Color : 13
16	DVD Tint adjustment	1. Select the following group and subject. Group : DVD Subject : Tint	1. Check the fixed value. Tint : 8
17	DVD Color saturation adjustment	1. Select the following group and subject. Group : DVD Subject : Color	1. Check the fixed value. Color : 10
18	Sample hold pulse phase checking	1. Feed the XGA 75-Hz black signal. 2. Select the following group and subjects. Group : OUTPUT3 Subject : GCK-PHASE	1. Check the fixed value. Fixed Value : 8
19	RGB tone reproduction adjustment	1. Feed the SMPTE pattern signal.	1. Make sure the 100% and 95% white as well as the 0% and 5% black gradations are visible. 
20	White balance checking	1. Use the adjustment conditions in the item 9 for RGB input and item 10 for sRGB input.	Check that there is no deviation of white balance with the monitor.
21	Color-related performance checking	1. Feed the color bar signal.	1. Select L1 of the process mode. Operation check of Color and Tint.
22	Video-related performance checking	1. Feed the monoscope pattern signal.	1. Select L2 of the process mode. Operation check of Picture, Bright and Sharpness.
23	RGB performance checking	1. Feed the RGB signal.	1. Select L4 of the process mode. Operation check of Picture, Bright, Red, Blue, Clock, Phase, H-POS and V-POS.

No.	Adjusting point	Adjusting conditions	Adjusting procedure				
24	Off-timer performance		1. Select OFF from the process mode. Make sure the off-timer starts with 5 minutes onscreen and count one minute in one second. And then indication is 0 minute, the power supply of the set is cut off. .				
25	Thermistor performance checking	1. Heat the thermistor with a hair dryer.	1.Make sure that the temperature is indicated.				
26	Auto sync performance checking	1. Feed the phase check pattern signal.	1.In the VGA, SVGA and XGA modes, make sure the Clock, Phase, H-Pos and V-Pos settings can be automatically adjusted.				
27	Delivery settings		1.Make the following settings. <table><tr><td>Process adjustment</td><td>Remote control adjustment</td></tr><tr><td>S3</td><td>Factory setting at 3</td></tr></table>	Process adjustment	Remote control adjustment	S3	Factory setting at 3
Process adjustment	Remote control adjustment						
S3	Factory setting at 3						

1. Calling and quitting the process mode with the control keys on this model.


1-1. Calling and quitting

With no menu onscreen, press the "UP", "UP", "DOWN", "DOWN", "RIGHT", "LEFT" and "ENTER" keys, in this order, on the remote controller (Type A10, or C50/45 and P25/20 series remote controllers).

1-2. Others

Press the S2002 process key (toggle) on the main PWB to call and quit the process menu.

2. Resetting the lamp timer for this model

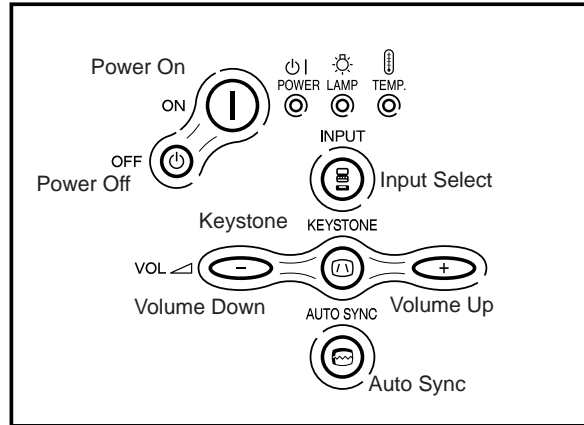

2-1. Resetting procedure

While holding down the Vol+ and AUTOSYNC keys, press the POWER ON and Vol- keys. The "LAMP 000H" indicator appears for 60 seconds after the power is turned on.

3. Forced disabling of the Anti-Seft of this model


3-1. Disabling procedure

With Anti-Seft input window onscreen, press the "MENU", "ENTER", "ENTER", "MENU", "UNDO", "UNDO" and "MENU" keys, in this order, on the remote controller.

4. Forced disabling of the password of this model

1-1. Disabling procedure

In whatever state, press the "ON", "+", "-", "ON", "+", "-" and "INPUT" keys in this order.

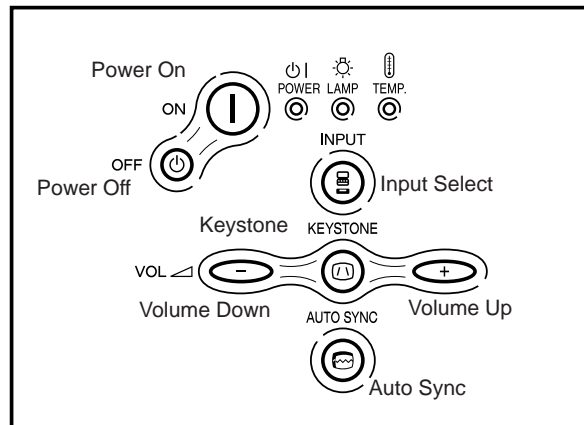

Process menu1

	Adjustment Process Menu	
First layer	DTV	Pedestal
	DVD	VERSION
	VIDEO	SS
	AD	TEMP
	OUTPUT1	PATTERN
	OUTPUT2	LAMP
	OUTPUT3	LINE
	VIDEO1	EXIT


second layer		Initial Value
DTV	Contrast	4
	Tint	5
	Color	13
	Sharpness	1
	CTI-Level	1
	LTI-Level	0
	CB-Offset	7
	CR-Offset	7
	Bright	15
	B-DRIVE	41
	R-DRIVE	41
	EXIT	
DVD	Contrast	3
	Tint	5
	Color	10
	Sharpness	1
	CTI-Level	1
	LTI-Level	0
	CB-Offset	7
	CR-Offset	7
	Bright	16
	B-DRIVE	41
	R-DRIVE	41
	EXIT	
VIDEO	Contrast	2
	N-Tint	5
	P-Tint	5
	S-Tint	5
	N-Color	10
	P-Color	10
	S-Color	10
	Sharpness	1
	CTI-Level	1
	LTI-Level	0
	CB-Offset	7


VIDEO	CR-Offset	7
	Bright	16
	B-DRIVE	41
	R-DRIVE	41
	EXIT	
AD	R-Bright	67
	G-Bright	67
	B-Bright	67
	R-Contrast	167
	G-Contrast	167
	B-Contrast	167
	EXIT	
OUTPUT1	R1-BLK	120
	R1-GAIN	152
	G1-BLK	140
	G1-GAIN	152
	B1-BLK	160
	B1-GAIN	152
	S-R1-BLK	120
	S-R1-GAIN	152
	S-G1-BLK	140
	S-G1-GAIN	152
	S-B1-BLK	160
	S-B1-GAIN	152
	EXIT	
OUTPUT2	PSIG-H	64
	PSIG-L	146
	EXIT	
OUTPUT3	RC	135
	GC	135
	BC	135
	GCK-PHASE	8
	CC	1
	EXIT	
VIDEO1	N-Contrast	14
	P-Contrast	14
	S-Contrast	15
	Color	17
	NT3.58 Delay	1
	NT4.43 Delay	1
	PAL Delay	1
	SECAM Delay	3
	EXIT	
Pedestal	R-Bright	-10
	G-Bright	-10
	B-Bright	-10


Process menu2



Pedestal	R-Contrast	+10
	G-Contrast	+10
	B-Contrast	+10
	EXIT	
VERSION	Build	
	Boot Code	
	Config	
	Rom Code	
	GUI	
	EXIT	
SS	SS2	
	SS3 EU	
	SS4 US	
	SS5 JPN	
	SS6 CHIN	
	EXIT	
TEMP	Temp1	Parameter of sensor 1
	Temp2	Parameter of sensor 2
	Temp3	No Use
	Temp4	No Use
	EXIT	
PATTERN	Cross Hatch	
	Color Bar	
	EXIT	
LAMP	Current Time	Current time of use
	History1	One earlier
	History2	Two earlier
	History3	Three earlie
	History4	Four earlier
	TOTAL TIME	Total operating hours
	EXIT	
LINE	OFF	
	LED CHECK	
	EXIT	


TROUBLE SHOOTING TABLE

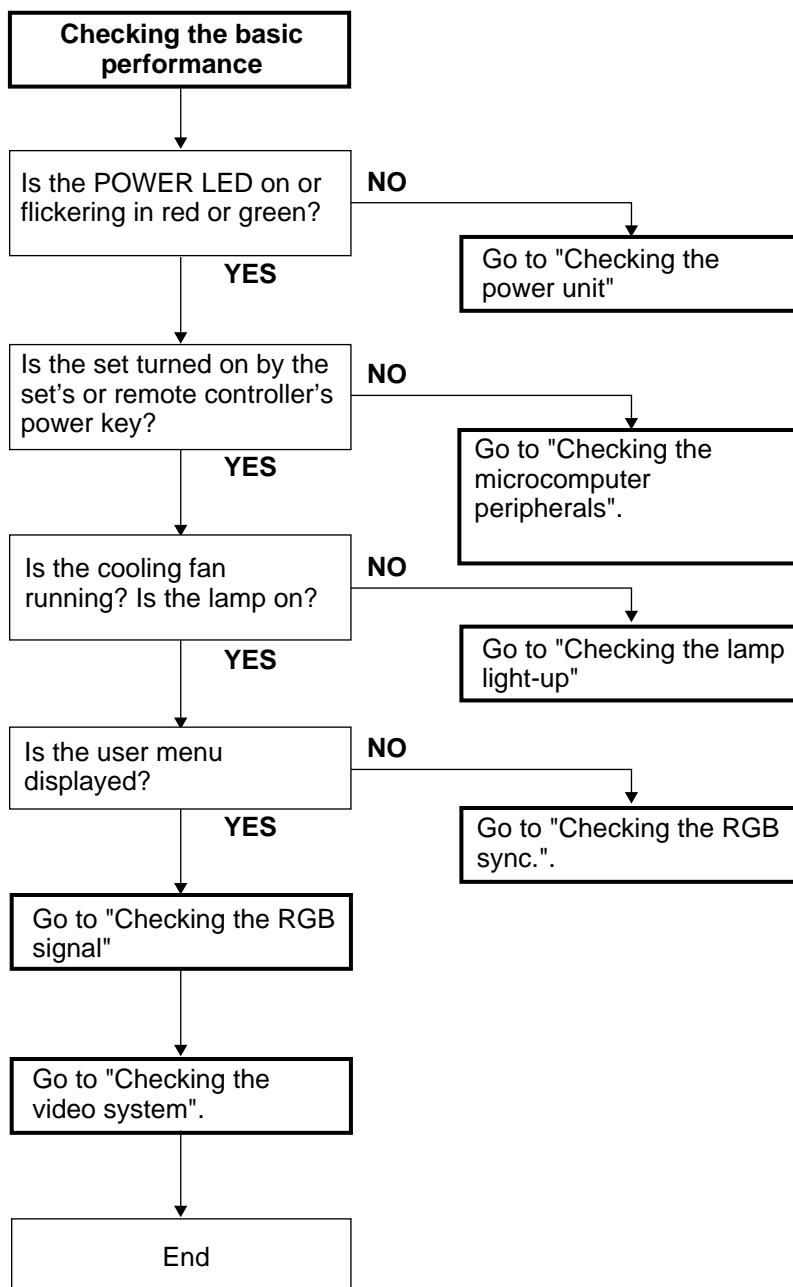



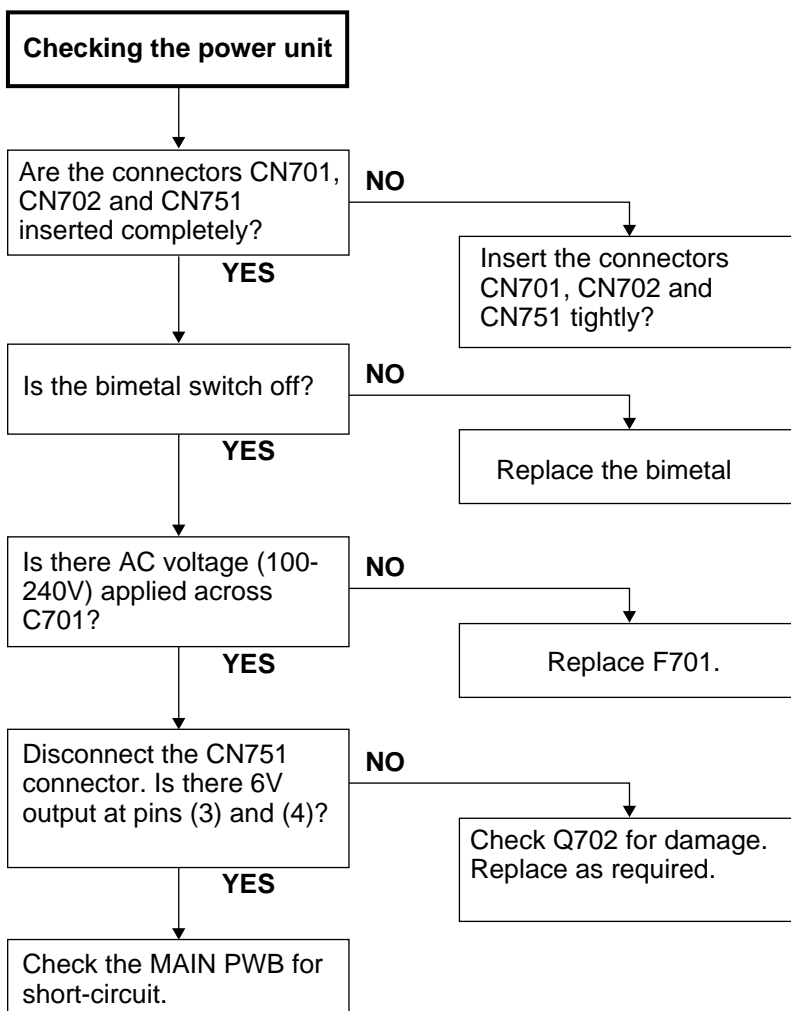


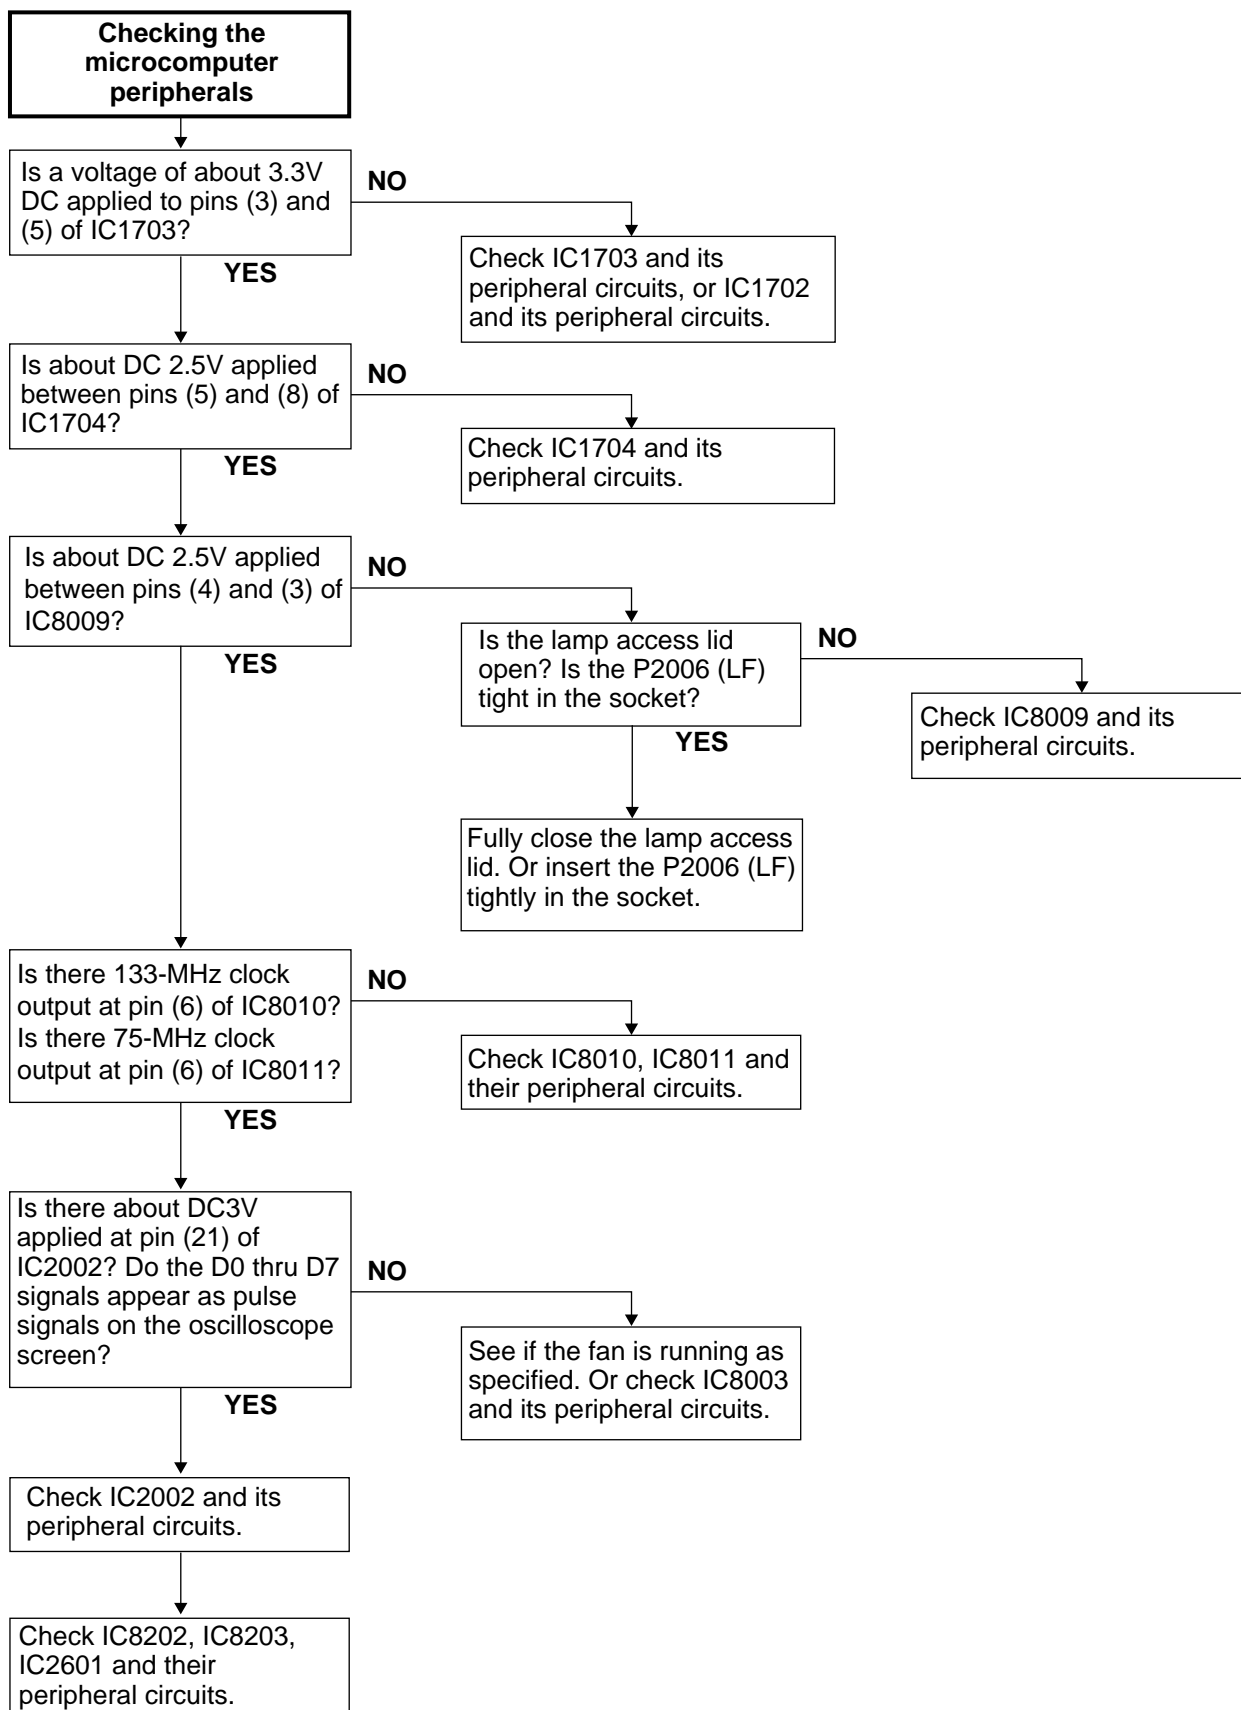

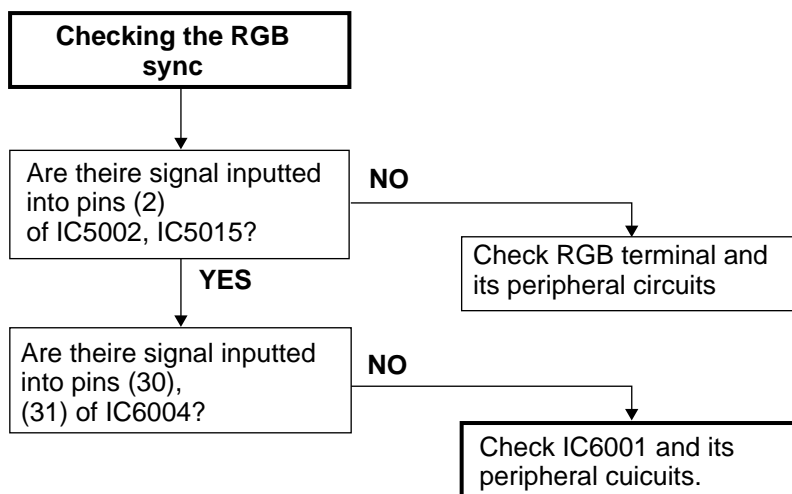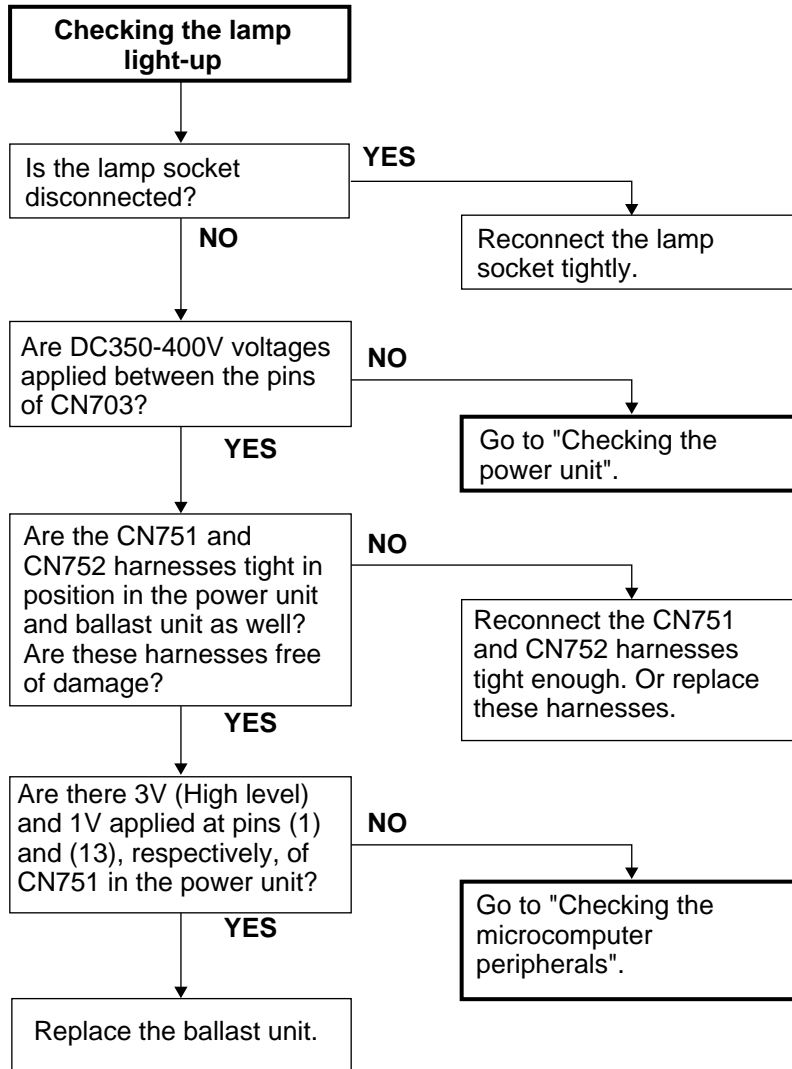

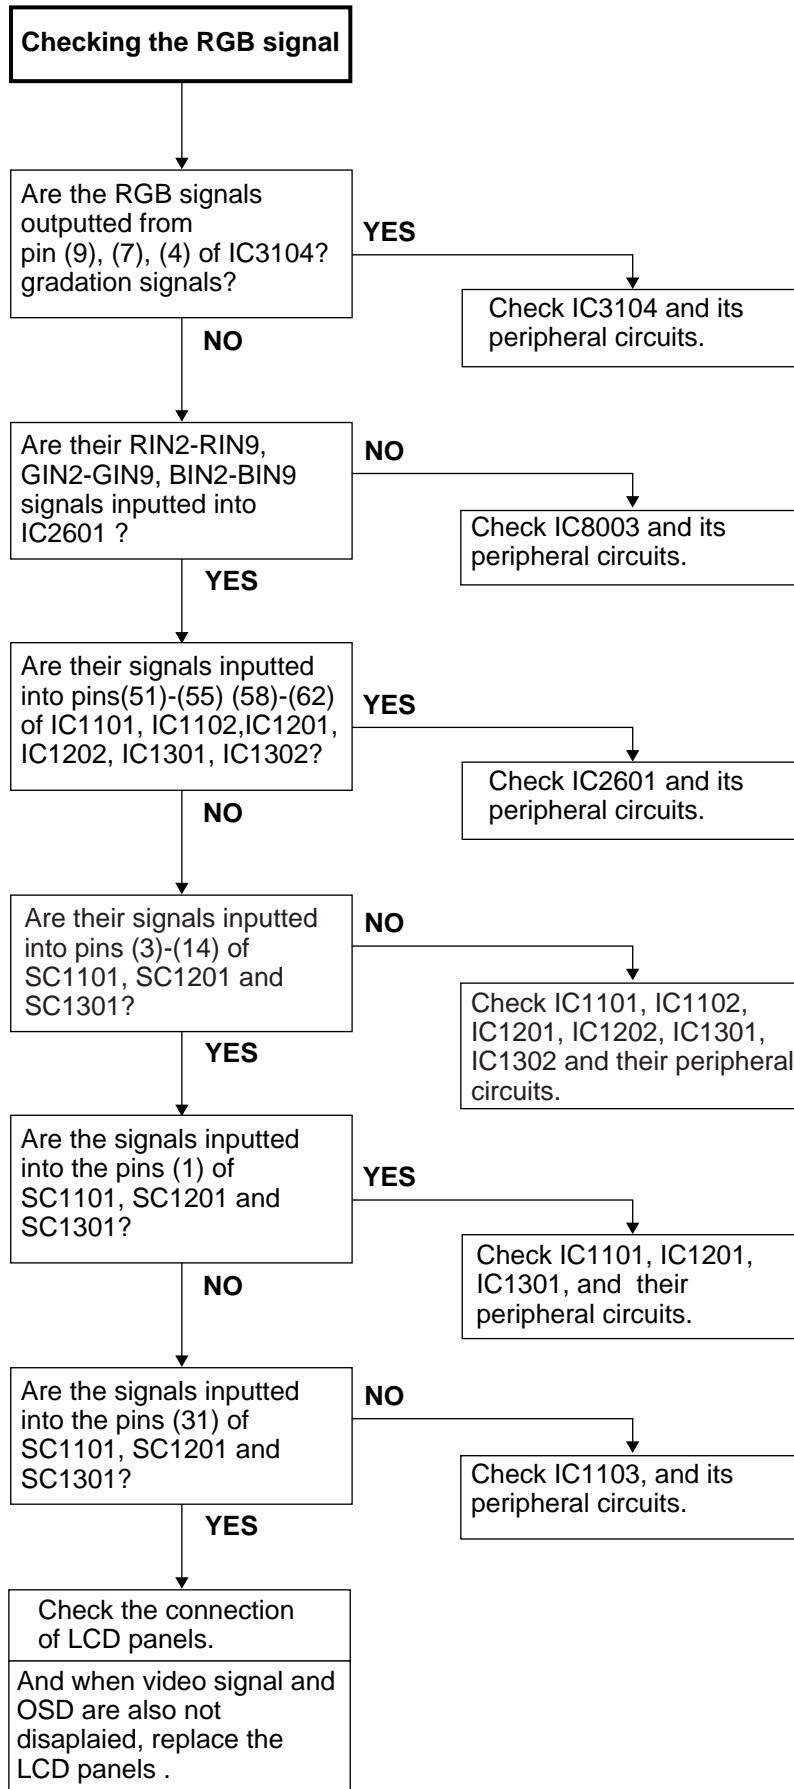

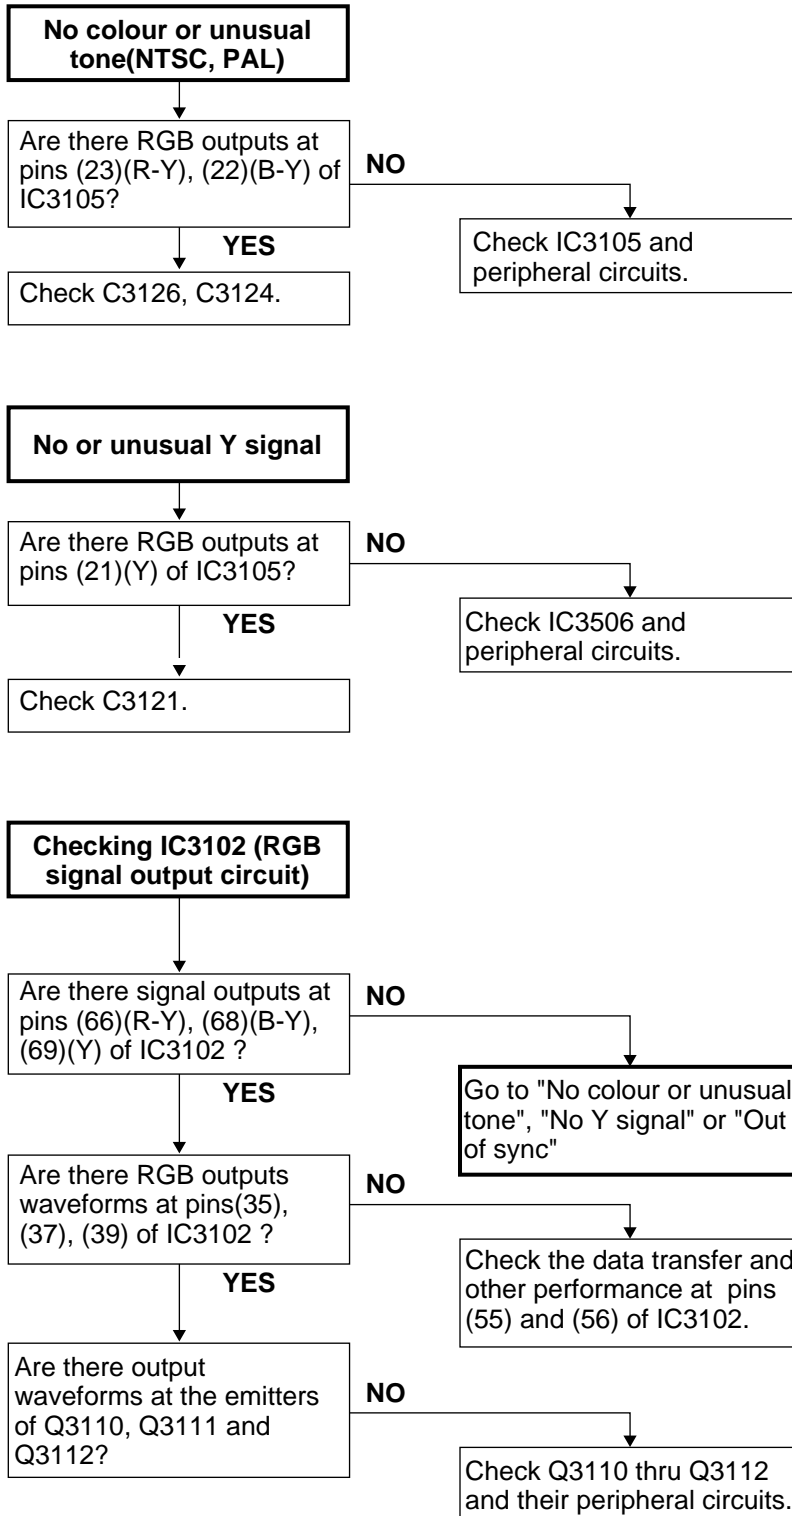

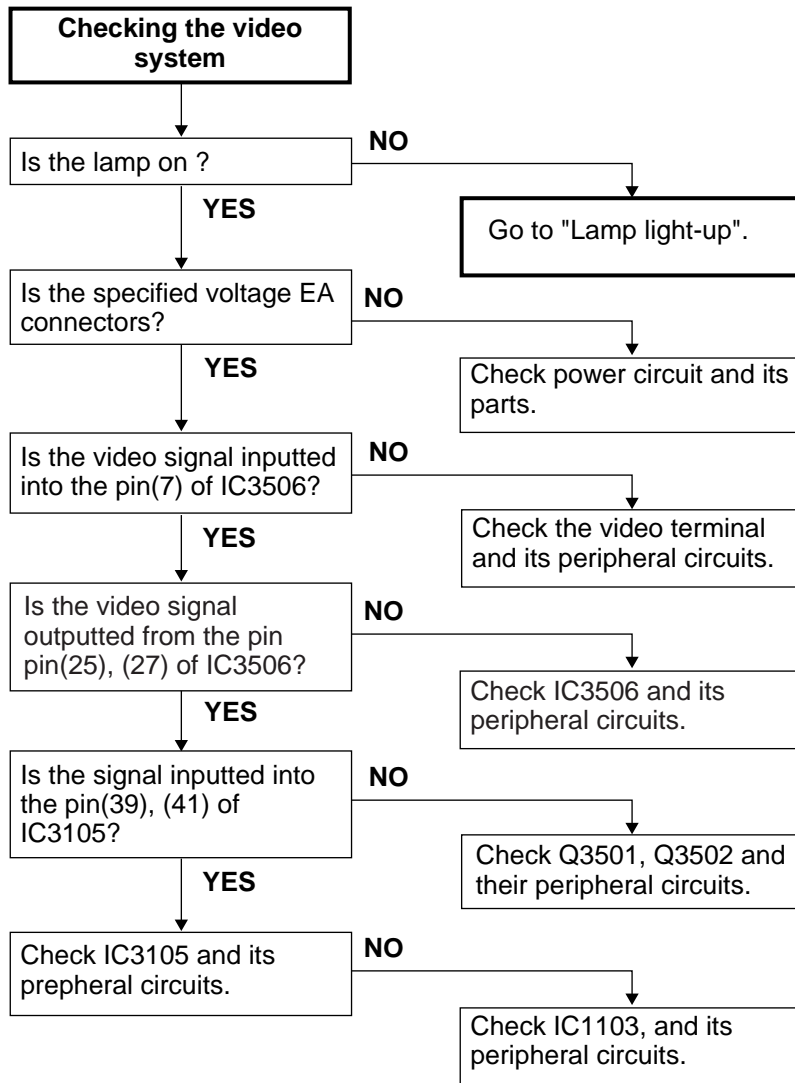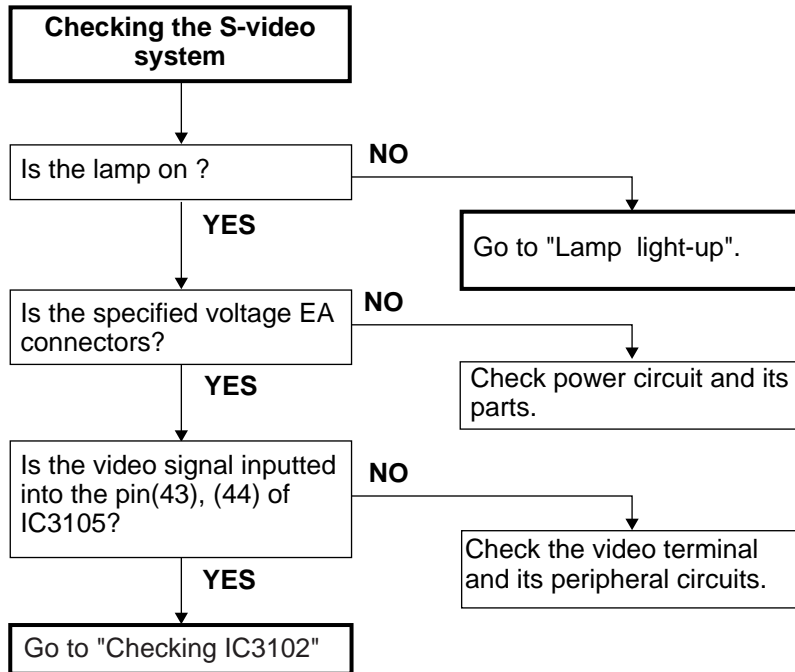

Technische Daten

Produkttyp	LCD-Projektor
Modell	PG-A10X / PG-A10X-SL
Videosystem	NTSC3.58/NTSC4.43/PAL/M/PAL-N/PAL-60/SECAM/ DTV480I/DTV480P/DTV540P/DTV580I/DTV580P/DTV720P/DTV1035I/DTV1080I
Anzeigeverfahren	LCD-Panel × 3,optische RGB-Verschlußmethode
LCD-Panel	Panel-Größe:0,79tum(20,0 mm)(12 [H] × 16 [B] mm)) Anzahl der Bildpunkte:786.432 Bildpunkte (1.024 [H] × 768 [V])
Standard-Objektiv	1 –1,2 × Zoom-Objektiv,F1,9 –2,2,f =26 –31 mm
Projektionslampe	Wechselstromlampe SHP 165 W-Lampe
Komponenten-Eingangssignale	15-Pin-Mini-D-Sub-Anschluss
(INPUT 1)	Y:1,0 Vp-p,negatives Sync.,75 Ω terminiert Pb:0,7 Vp-p,75 Ω terminiert Pr:0,7 Vp-p,75 Ω terminiert
Horizontale Auflösung	700 Fernsehzeilen (DTV720P)
Computer-RGB-Eingangssignal	15-Pin-Mini-D-Sub-Anschluss
(INPUT 1)	RGB getrennt/Sync.auf Grün-Typ analoger Eingang:0-0,7 Vp-p,positiv,75 Ω terminiert HORIZONTALES SYNC.-SIGNAL:TTL-Pegel (positiv/negativ) VERTIKALES SYNC.-SIGNAL:Wie oben
S-Videoeingangssignal	4-pin-Mini-DIN-Anschluss
(INPUT 2)	Y (Luminanzsignal):1,0 Vp-p,negatives Sync.,75 Ω terminiert C (Chrominanzsignal):Stoß 0,286 Vp-p,75 Ω terminiert
xVideoeingangssignal	RCA-Anschluss:VIDEO,Verbund-Video,1,0 Vp-p,negatives Sync.,75 Ω terminiert
(INPUT 3)	
Computer-Steuerungssignal (RS-232C)	9-Pin-Mini-DIN-Stecker
Pixeltakt	12-108 MHz
Vertikale Frequenz	43-85 Hz*
Horizontale Frequenz	15-70 kHz
Audioeingangssignal	ø 3,5 mm-Minibuchse:AUDIO,0,5 Vrms,mehr als 47 kΩ (Stereo)
Audioausgang	1,0 W (Mono)
Lautsprechersystem	2,8 cm rund × 1
Nennspannung	100-240 V Wechselstromspannung
Eingangsstrom	2,4 A
Nennfrequenz	50/60 Hz
Leistungsaufnahme	240 W (Standard-Modus)/190 W (Eco-Modus)bei AC 100 V 226 W (Standard-Modus)/182 W (Eco-Modus)bei AC 240 V
Leistungsaufnahme	5 W (bei AC 100 V)-8 W (bei AC 240 V)
(Bereitschaft)	900 BTU/Stunde (Standard-Modus)/710 BTU/stunde (Eco-Modus)bei AC 100 V
Wärmeableitung	850 BTU/Stunde (Standard-Modus)/680 BTU/stunde (Eco-Modus)bei AC 240 V 41 °F bis 95 °F (+5 °C bis +35 °C)
Betriebstemperatur	– 4 °F bis 140 °F (–20 °C bis +60 °C)
Lagertemperatur	Plastik
Gehäuse	38 kHz
I/R-Trägerfrequenz	11 45/64" × 3 13/64" × 9 1/32" (297 (B) × 81 (H) × 229 (T)mm)(nur Hauptgerät)
Abmessungen (ca.)	11 45/64" × 3 33/64" × 9 1/32" (297 (B) × 89 (H) × 229 (T)mm)(einschließlich Einstellfüße und Projektionsteile)
Gewicht (ca.)	6,4 lbs.(2,9 kg)
Mitgeliefertes Zubehör	Fernbedienung, zwei R6-Batterien, Netzkabel für USA,Kanada usw. (6',1,8 m), Netzkabel für Europa, außer Großbritannien (6',1,8 m), Netzkabel für Großbritannien,Hongkong und Singapur (6', 1,8 m), Netzkabel für Australien, Neuseeland und Ozeanien (6', 1,8 m), RGB-Kabel (9'10", 3,0 m), DIN-D-Sub RS-232C-Adapter (5 57/64", 15 cm), Tragetasche, Objektivkappe (befestigt), zusätzlicher Luftfilter, Projektorhandbuch-und technische Referenz-CD-ROM, "QUICK GUIDE (Schnellanleitung)"-Aufkleber, Bedienungsanleitung
Ersatzteile	Lampeneinheit (Lampen-/Gehäusemodul)(BQC-PGA10X/1), Fernbedienung (RRMCGA138WJSA), zwei R 6-Batterien ("AA",UM/SUM-3,HP-7 oder entsprechend), Netzkabel für USA,Kanada usw.(QACCLDA016WJPZ), Netzkabel für Europa, außer Großbritannien (QACCAV006WJPZ), Netzkabel für Großbritannien, Hongkong und Singapur (QACCA015WJPZ), Netzkabel für Australien,Neuseeland und Ozeanien (QACCLA005WJPZ), RGB-Kable (QCNWGA012WJPZ),DIN-D- Sub RS-232C-Adapter (QCNWGA015WJPZ),Tragetasche (GCASNA006WJSA),Objektivkappe (CCAPHA007WJ01), Luftfilter (PFILDA008WJZZ), Projektorhandbuch-und-technische Referenz-CD-ROM (UDSKAA022WJN1), "QUICK GUIDE (Schnellanleitung)"-Aufkleber (TLABZA191WJZZ), Bedienungsanleitung (TiNS-A505WJN1)

Dieser SHARP-Projektor verwendet eine LCD (Liquid Crystal Display)-Anzeige. Diese hochmoderne Anzeige enth ä lt 786.432 Pixel (x RGB) TFTs (Thin Film Transistors). Wie bei allen technologisch fortschrittlichen,elektronischen Ger ä ten,z.B.Großbild-Fernsehern, Videosystemen bzw.Videokameras,sind bestimmte Toleranzgrenzen für die Funktionen gegeben.

Dieses Ger ä t hat einige inaktive,innerhalb akzeptierter Toleranzgrenzen liegende Bildpunkte,die als leuchtende oder als nicht aktive Punkte auf der Bildwand wiedergegeben werden.Dies hat keinen Einfluss auf die Bildqualit ä t oder die Lebensdauer des Ger ä tes.

Änderungen der technischen Daten ohne vorherige Ankündigung vorbehalten.

HINWEISE FÜR DAS WARTUNGSPERSONAL

ACHTUNG: UV-STRAHLUNG

Die Beleuchtungsquelle des LCD-Projektors, eine UHP-Lampe, emittiert eine geringe Menge UV-Strahlung.


**DIREKTE BESTRAHLUNG AUF AUGEN
UND HAUT MUSS VERMIEDEN WERDEN.**

Zur Gewährleistung der Sicherheit muß folgendes beachtet werden:


1. Bei Arbeiten am Projektor bei eingeschalteter Lampe und abgenommenem oberen Gehäuse muß unbedingt eine Sonnenbrille getragen werden.



2. Die Lampe darf nicht außerhalb des Lampengehäuses eingeschaltet werden.

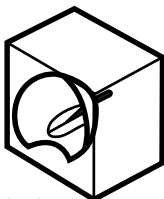

3. Betrieb für länger als 2 Stunden bei abgenommenem Gehäuse ist nicht zulässig.

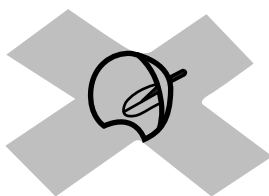

Zur Beachtung bei UV-Strahlung und Mitteldruck-Lampen

1. Vor dem Auswechseln der Lampe muß der Netzstecker gezogen werden.
2. Vor Durchführung von Wartungsarbeiten muß das Gerät eine Stunde abkühlen.
3. Die Lampe darf nur gegen eine der gleichen Art ausgetauscht werden. Typ BQC-PGA10X//1, bemessen für 100 V/200 W.
4. Die Lampe gibt eine geringe UV-Strahlung ab, daher muß direkter Augenkontakt vermieden werden.
5. Die Mitteldruck-Lampe weist ein Explosionsrisiko auf. Daher müssen die nachstehenden Installationsanweisungen beachtet werden, und die Lampe muß vorsichtig behandelt werden.


■ Auswechseln der Lampe

Hinweis:

Da die Lampe während des Betriebs sehr heiß wird, sollte die Lampe erst ausgetauscht werden, nachdem das Gerät mindestens eine Stunde ausgeschaltet war, damit die Lampe ausreichend abkühlen kann.

Beim Installieren der neuen Lampe muß darauf geachtet werden, die Lampe selbst (Glaskolben) nicht zu berühren. Vielmehr muß die Lampe am Reflektor ② gehalten werden.

[Es darf nur ein Original-Ersatzteil verwendet werden.]

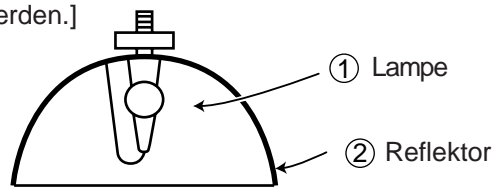

GEFAHR! — Niemals die Spannungsversorgung einschalten, ohne daß eine Lampe vorhanden ist, um elektrische Schläge und Schäden am Gerät zu vermeiden, da der Stabilisator anfangs hohe Spannungen erzeugt.

Da eine geringe Menge UV-Strahlung an der Öffnung zwischen den Lüftern austritt, wird empfohlen, während der Wartungsarbeiten die Abdeckkappe des Zusatzobjektivs an dieser Öffnung anzubringen, um Augen und Haut vor den UV-Strahlen zu schützen.

Vorsichtsmaßnahmen für bleifreies Lötzin

1 Verwendung von bleifreiem Lötzin

Bei den Platinen für Haupt und Fernbedienungsempfänger dieses Modells wird bleifreies Lot verwendet. Das Symbol LF kennzeichnet bleifreies Lot und findet sich an den Platinen und in den Wartungshandbüchern. Der Buchstabe hinter LF bezieht sich auf die Art des bleifreien Lots.

Beispiel:



Sn-Ag-Cu

Zeigt bleifreies Lötzin aus Zinn, Silber und Kupfer an.

2 Bei Reparatur der mit bleifreiem Lötzin gelöteten Platine immer bleifreies Lötzin verwenden. Reparatur mit herkömmlichem Lötzin kann zu Schäden oder Unfällen aufgrund von Rissen führen.

Da der Schmelzpunkt bleifreien Lötzinns (Sn-Ag-Cu) um 40°C höher als der von Bleidraht-Lötzin ist, empfehlen wir die Verwendung einer speziellen Lötspitze. Wenn Fragen über den Beschaffung leitfreien Lötzinns oder spezieller Lötspitzen bestehen, wenden Sie sich an unsere Kundendienstvertretung in Ihrem Gebiet.

3 Löten

Da der Schmelzpunkt bleifreien Lötzinns (Sn-Ag-Cu) etwa 220°C beträgt, was um 40°C höher als der von bleihaltigem Lötzin ist, und außerdem schlechte Löt-Benetzbarkeit aufweist, kann es erforderlich werden, die Lötspitze längere Zeit in Kontakt mit der Platine zu halten. Da die Lötlaug abfließen kann oder der maximale Hitzewiderstand von Teilen überschritten werden kann, die Lötspitze sofort von der Platine nehmen, sobald eine gute Lötung erzielt ist. Bleifreies Lötzin enthält mehr Zinn, und das Ende der Lötspitze kann leicht angegriffen werden. Immer sicherstellen, dass der LötKolben nur bei Bedarf eingeschaltet wird.

Wenn ein anderer Typ von Lötzin an der Lötspitze haften bleibt, verschmilzt er mit dem bleifreien Lötzin. Die Lötspitze nach jeder Verwendung reinigen.

Wenn die Lötspitze bei der Verwendung geschwärzt wird, die Spitze mit Stahlwolle oder feinem Sandpapier abschmirgeln.


Immer beim Austausch von Teilen vorsichtig sein, und die Polaritätsanzeige auf der Platinenbeschriftung beachten.

Bleifreies Lötzin zur Wartung


Teile-Nr.	★	Beschreibung	Code
ZHNDai123250E	J	φ0.3mm 250g(1roll)	BL
ZHNDai126500E	J	φ0.6mm 500g(1roll)	BK
ZHNDai12801KE	J	φ1.0mm 1 Rolle	BM

Bedienungsanleitung


Projektor (Vorderansicht- und Draufsicht)

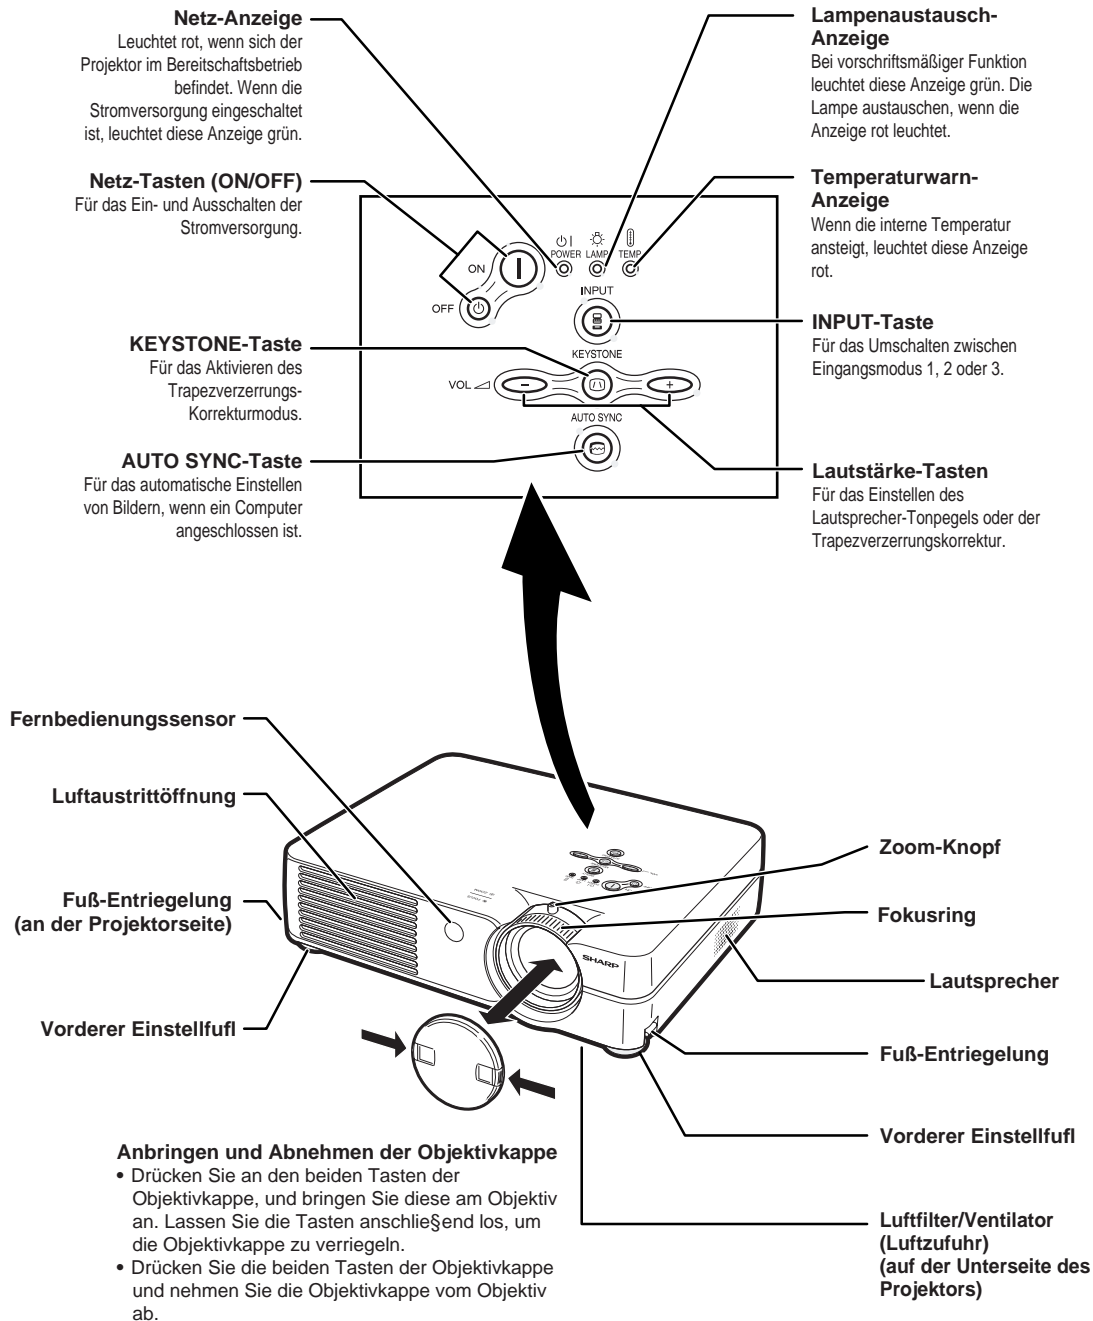

Projektor (Hintersicht)

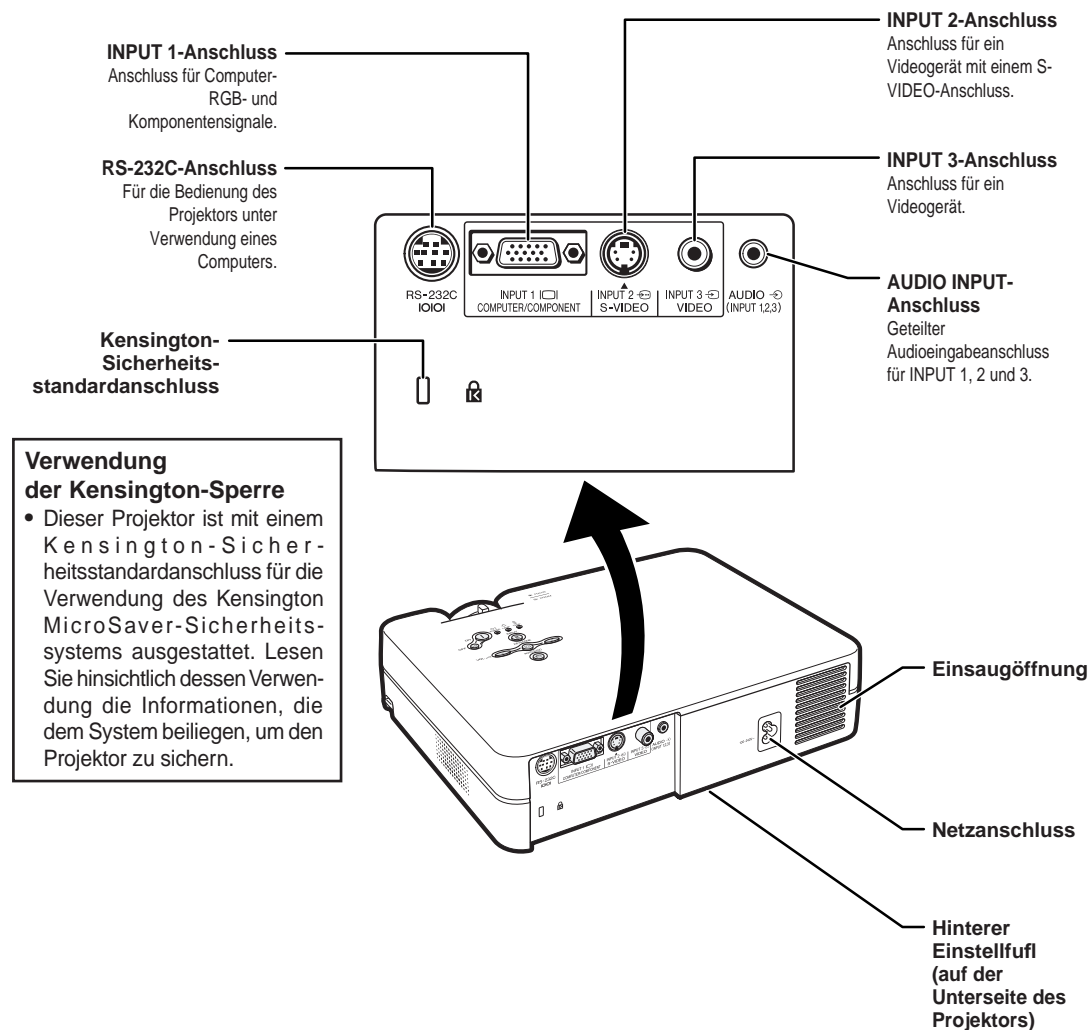

Fernbedienung (Vordersicht)

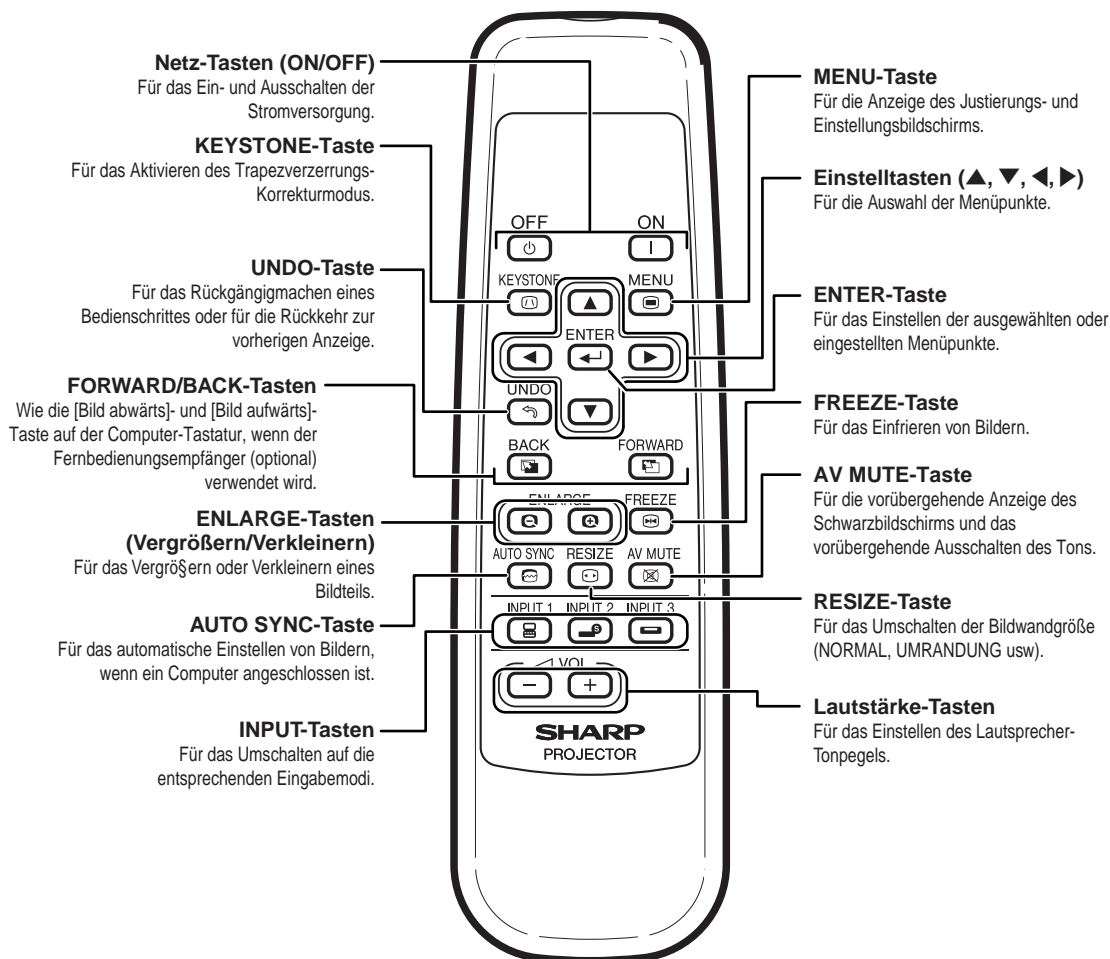

Reichweite

- Der Projektor kann mittels der Fernbedienung innerhalb der in der Abbildung dargestellten Bereiche gesteuert werden.




Hinweis

- Das Signal von der Fernbedienung kann für eine einfache Bedienung von der Bildwand reflektiert werden. Die tatsächliche Reichweite des Signals kann je nach Bildwandmaterial unterschiedlich sein.

Bei Verwendung der Fernbedienung:

- Nicht fallen lassen, keiner Feuchtigkeit oder hohen Temperatur aussetzen.
- Die Fernbedienung funktioniert unter Umständen nicht unter einer Fluoreszenzlampe. Unter diesen Umständen den Projektor von der Fluoreszenzlampe entfernt aufstellen.

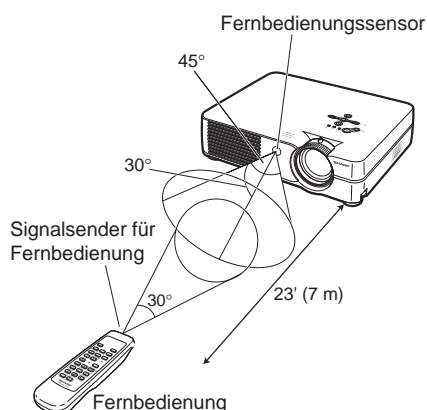

Einlegen der Batterien


Die Batterien (zwei R 6-Batterien ("AA", UM/SUM-3, HP-7 oder entsprechend)) sind in der Packung enthalten.

- 1 Auf die -Markierung auf der Abdeckung drücken und in Pfeilrichtung schieben.

- 2 Die Batterien einlegen.

Die Batterien einlegen und sicherstellen, dass die Pole mit den Markierungen \oplus und \ominus im Batteriefach übereinstimmen.

- 3 Die Abdeckung anlegen und schieben, bis sie einrastet.

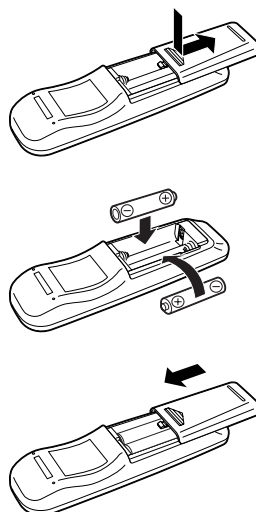

Falsche Verwendung der Batterien kann eine Leckage oder Explosion zur Folge haben. Bitte befolgen Sie die unten stehenden Vorsichtsmaßnahmen.

⚠ Achtung

- Die Batterien einlegen und sicherstellen, dass die Pole mit den Markierungen \oplus und \ominus im Batteriefach übereinstimmen.
- Batterien unterschiedlichen Typs haben unterschiedliche Eigenschaften, verwenden Sie deshalb keine Batterien unterschiedlichen Typs zusammen.
- Verwenden Sie keine neuen und alten Batterien zusammen.
Dadurch könnte die Lebensdauer der neuen Batterien reduziert oder ein Auslaufen der Batterien verursacht werden.
- Nehmen Sie leere Batterien aus der Fernbedienung heraus, da sie ansonsten auslaufen könnten.
Aus den Batterien ausgelaufene Batterieflüssigkeit ist für Ihre Haut schädlich, wischen Sie die Batterien deshalb unbedingt zuerst ab und nehmen Sie sie dann mit einem Tuch heraus.
- Die diesem Projektor beiliegenden Batterien können unter Umständen, je nach Handhabung, nach kurzer Zeit aufgebraucht sein. Stellen Sie sicher, dass sie so bald wie möglich durch neue Batterien ersetzt werden.
- Nehmen Sie die Batterien heraus, wenn die Fernbedienung lange nicht verwendet wird.

RS-232C-Spezifikationen und Befehlseinstellungen

PC-Steuerung

Der Projektor kann durch einen Anschluss an einen Computer über ein serielles RS-232C-Steuerkabel (im Handel erhältlich) über den Computer gesteuert werden.

Kommunikationsbedingungen

Legen Sie die seriellen Porteneinstellungen des Computers so fest, dass sie denen der Tabelle entsprechen.

Signalformat: Entspricht dem RS-232C-Standard.

Baud-Rate: 9.600 Bps

Datenlänge: 8 Bit

Paritätsbit: Keine

 
Stopp-Bit: 1 Bit

Flusssteuerung: Keine

Grundformat

Computerbefehle werden in folgender Reihenfolge gesendet: **Befehl, Parameter und Rückcode**. Nachdem der Projektor den Computerbefehl ausgeführt hat, sendet er einen Antwortcode an den Computer.

Befehlsformat



Antwortcodeformat

Normalantwort



Problemantwort (Kommunikationsfehler oder inkorrekt Befehl)

 


Info

- Wird mehr als ein Code gesendet, dann wird jeder Befehl erst nach der Verifizierung des Empfangs der Antwort für den vorangegangenen Befehl vom Projektor gesendet.

Befehle

Beispiel: Wenn der Projektor eingeschaltet wird, folgende Einstellung durchführen:



TASTEN- UND FERNBEDIENUNGSSCHLÜSSEL	STEUERUNGSMENÜ	BEFEHL	PARAMETER	RÜCKCODE
	Strom Aus (Bereitschaft)	P O W R	-- --	0 OK oder ERR
	Strom Ein	P O W R	-- --	1 OK oder ERR
	EINGANG 1	I R G B	-- --	1 OK oder ERR
	EINGANG 2	I V E D	-- --	1 OK oder ERR
	EINGANG 3	I V E D	-- 2	2 OK oder ERR
	Lampen-Betriebsdauer (Stunden)	T L T T	-- --	1 0-9999
	Verbleibende Lampen-Lebensdauer (Prozent)	T L T L	-- --	1 0-100
	Lampenstatus	T L P S	-- --	1 0:Aus, 1:Ein, 2:Neuversuch, 3:Warten, 4:Lampenfehler
	Gerätestatus	T A B N	-- --	1 0: Normal, 1: Hohe Temp., 2: Gebläsefehler, 4: Filterabdeckungs-Fehler, 8: Lampe 100 Stunden, 16: Lampe ausgebrannt, 32: Lampe leuchtet nicht, 64: Temp. unnorm. hoch
	Modellnamen-Prüfung	T N A M	-- --	1 PROJEKTORNAME
	AV-Stimmlaut Aus	I M B K	-- --	0 OK oder ERR
	AV-Stimmlaut Ein	I M B K	-- --	1 OK oder ERR
	Auto-Sync-Start	A D J S	-- --	1 OK oder ERR

 


Hinweis

- Wenn in der Tabellensparte Parameter ein Unterstrich (_) erscheint, geben Sie bitte ein Leerzeichen ein. Wenn ein Stern (*) erscheint, geben Sie einen Wert innerhalb der in Klammern unter STEUERUNGSMENÜ angegebenen Spanne ein.

Pin-Belegung

INPUT-1-RGB-Signalanschluss: 15-Pin Mini-D-Sub weiblich




RGB-Eingang

- 1. Videoeingang (rot)
- 2. Videoausgang (grün/Sync. auf grün)
- 3. Videoausgabe (blau)
- 4. Nicht angeschlossen
- 5. Nicht angeschlossen
- 6. Erde (rot)
- 7. Erde (grün/Sync. auf grün)
- 8. Erde (blau)
- 9. nicht angeschlossen
- 10. GND
- 11. Nicht angeschlossen
- 12. Bi-direktionale Daten
- 13. Horizontal-Sync-Signal
- 14. Vertikal-Sync-Signal
- 15. Datentakt

Komponenteneingang


- 1. P_R (C_R)
- 2. Y
- 3. P_B (C_B)
- 4. Nicht angeschlossen
- 5. Nicht angeschlossen
- 6. Erde (P_R)
- 7. Erde (Y)
- 8. Erde (P_B)
- 9. Nicht angeschlossen
- 10. Nicht angeschlossen
- 11. Nicht angeschlossen
- 12. Nicht angeschlossen
- 13. Nicht angeschlossen
- 14. Nicht angeschlossen
- 15. Nicht angeschlossen

RS-232-Anschluss: 9-Pin Mini-DIN weiblich

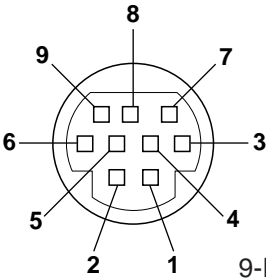


Pin-Nr.	Signal	Name	I/O	Referenz
1				Nicht angeschlossen
2	RD	Daten empfangen	Eingang	Interner Stromkreisanschluss
3	SD	Daten senden	Ausgang	Interner Stromkreisanschluss
4				Nicht angeschlossen
5	SG	Signalerde		Interner Stromkreisanschluss
6				Nicht angeschlossen
7				Nicht angeschlossen
8				Nicht angeschlossen
9				Nicht angeschlossen

9-Pin D-Sub männlich des DIN-D-Sub-RS-232C-Adapters

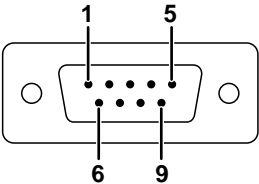

Pin-Nr.	Signal	Name	I/O	Referenz
1				Nicht angeschlossen
2	RD	Daten empfangen	Eingang	Interner Stromkreisanschluss
3	SD	Daten senden	Ausgang	Interner Stromkreisanschluss
4				Nicht angeschlossen
5	SG	Signalerde		Interner Stromkreisanschluss
6				Nicht angeschlossen
7				Nicht angeschlossen
8				Nicht angeschlossen
9				Nicht angeschlossen

RS-232C Kabel empfohlene Verbindung: 9-Pin-D-Sub weiblich

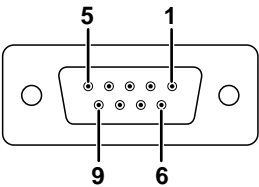


Pin-Nr.	Signal	Pin-Nr.	Signal
1	CD	1	CD
2	RD	2	RD
3	SD	3	SD
4	ER	4	ER
5	SG	5	SG
6	DR	6	DR
7	RS	7	RS
8	CS	8	CS
9	CI	9	CI

Hinweis

- Je nach verwendetem Steuergerät ist es unter Umständen erforderlich, Pin 4 und Pin 6 am Steuergerät (z.B. am PC) anzuschließen.



Abmessungen

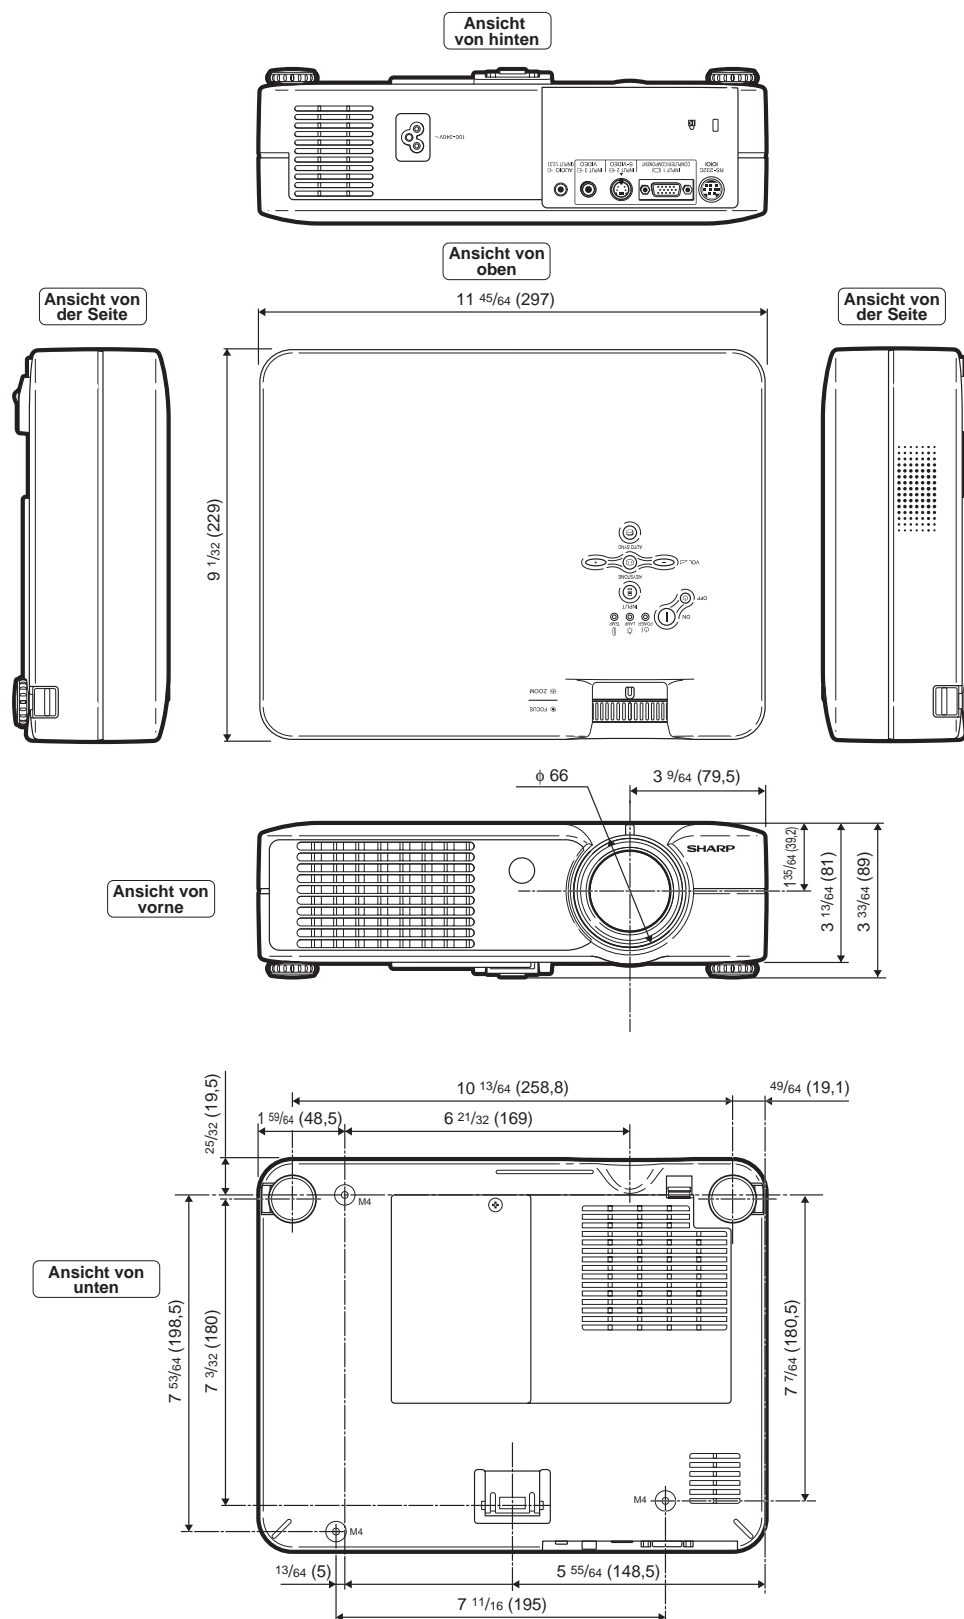


Einheit:mm

ENTFERNEN DER HAUPTTEILE


1. Ausbau der Lampen-Einheit.

- 1-1. Die Schraube lösen, dann die Lampenabdeckung abnehmen.
- 1-2. Die beiden Schrauben lösen. Die Lampen-Einheit am Griff anfassen, dann in Pfeilrichtung ziehen.

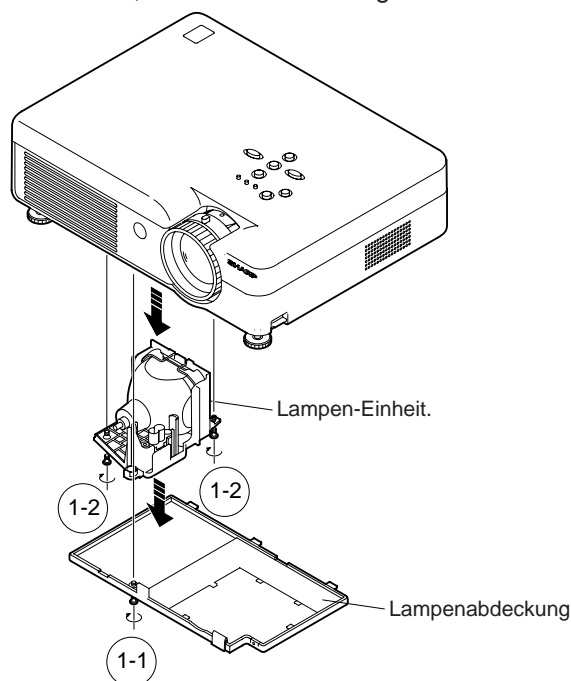


2. Ausbau des oberen Gehäuses.

- 2-1. Die Schraube an der Rückseite des Geräts entfernen.
- 2-2. Die sechs Halteschrauben an der Unterseite des Geräts entfernen.
- 2-3. Die beiden Haken lösen, dann das obere Gehäuse abnehmen.

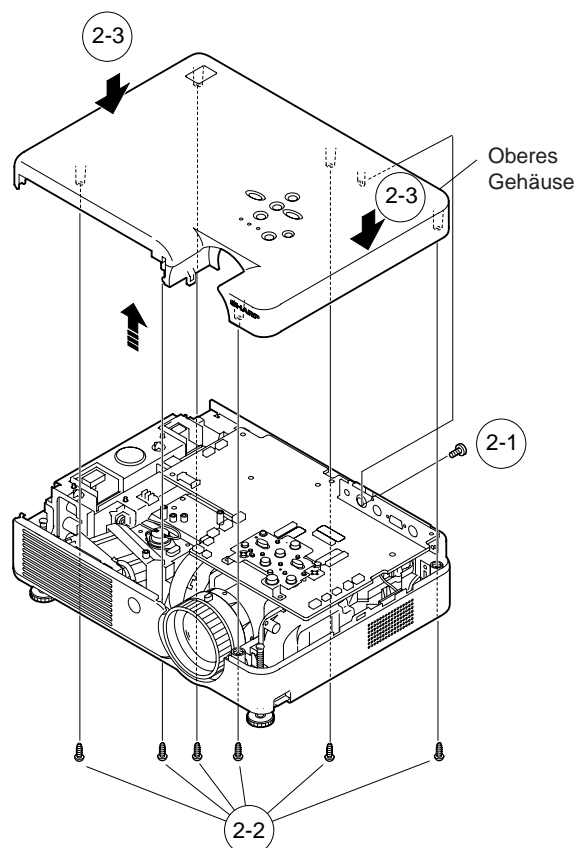


3. Ausbau der Hauptleiterplatte

- 3-1. Die sieben Schrauben entfernen.
- 3-2. Alle Stecker von der Hauptleiterplatte abziehen.
- 3-3. Die Hauptleiterplatte abnehmen.
- 3-4. Die beiden Schrauben entfernen, dann die Bedienungstasten-Einheit abnehmen.

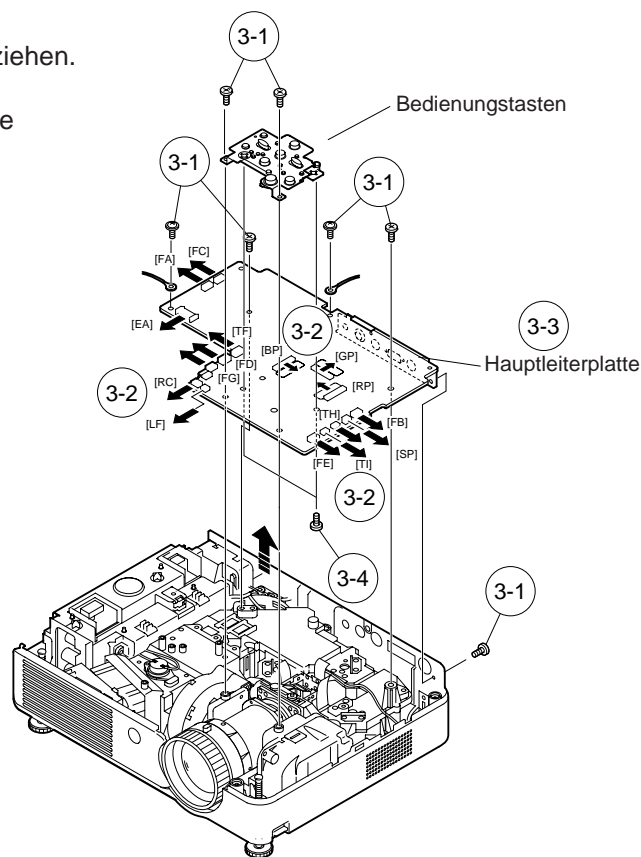


4. Ausbau der Auslaßabdeckung, der Optikmechanismus-Einheit, R/C-Receiver-Leiterplatte und des Lautsprechers

- 4-1. Die beiden Schrauben entfernen, dann den Lampensockel abnehmen.
- 4-2. Die Abdeckung für den Netzgerät-/Vorschaltwiderstands-Halter abnehmen.
- 4-3. Alle Stecker von der Optikmechanismus-Einheit und der Auslaßabdeckung abziehen.
- 4-4. Die neun Schrauben entfernen, dann die Optikmechanismus-Einheit herausnehmen.
- 4-5. Die R/C-Receiver-Leiterplatte abnehmen.
- 4-6. Den Lautsprecher abnehmen.

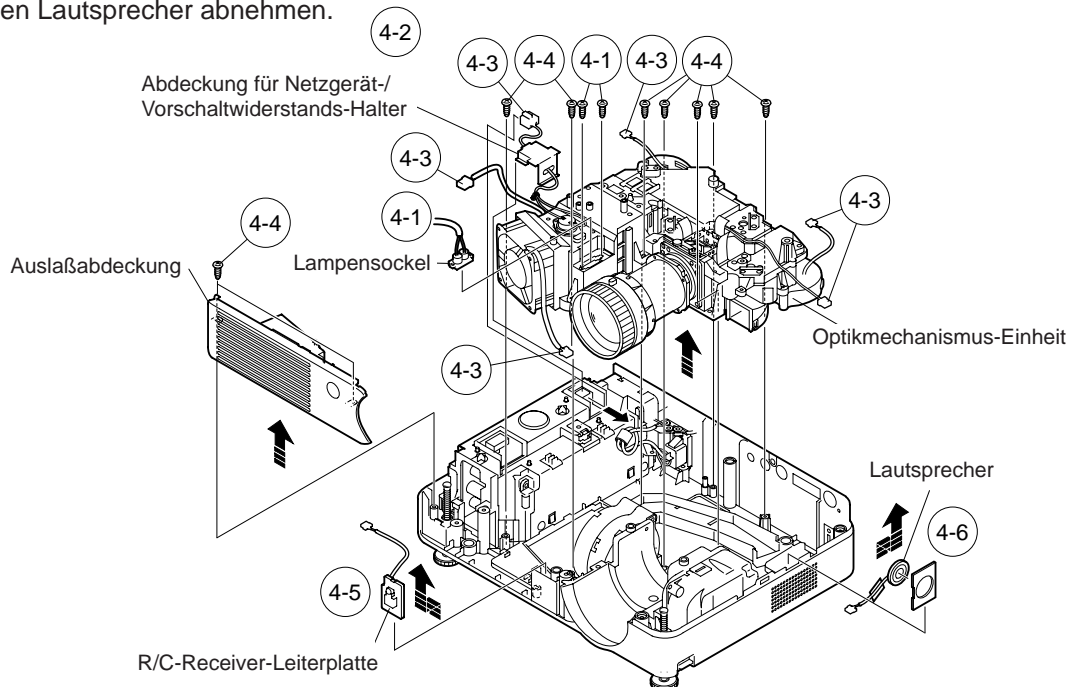

5. Ausbau der AC-Netzsteckdose, Netzgerät-/Vorschaltwiderstands-Einheit und des Kühlgebläses


- 5-1. Die Schraube an der Rückseite des Geräts entfernen.
- 5-2. Die Schraube entfernen, dann die Netzgerät-/Vorschaltwiderstands-Einheit herausnehmen.
- 5-3. Die untere Abschirmung und die Abschirmungsabdeckung entfernen.
- 5-4. Den Stecker abziehen, dann die AC-Netzsteckdose abnehmen.
- 5-5. Die beiden Haken lösen, dann die Vorschaltwiderstands-Einheit aus dem Gehäuse der Netzgerät-/Vorschaltwiderstands-Einheit herausnehmen. Alle Stecker von der Leistungsleiterplatte abziehen.
- 5-6. Die beiden Schrauben entfernen, dann die Leistungsleiterplatte abnehmen.
- 5-7. Die beiden Schrauben entfernen, dann das Kühlgebläse herausnehmen.

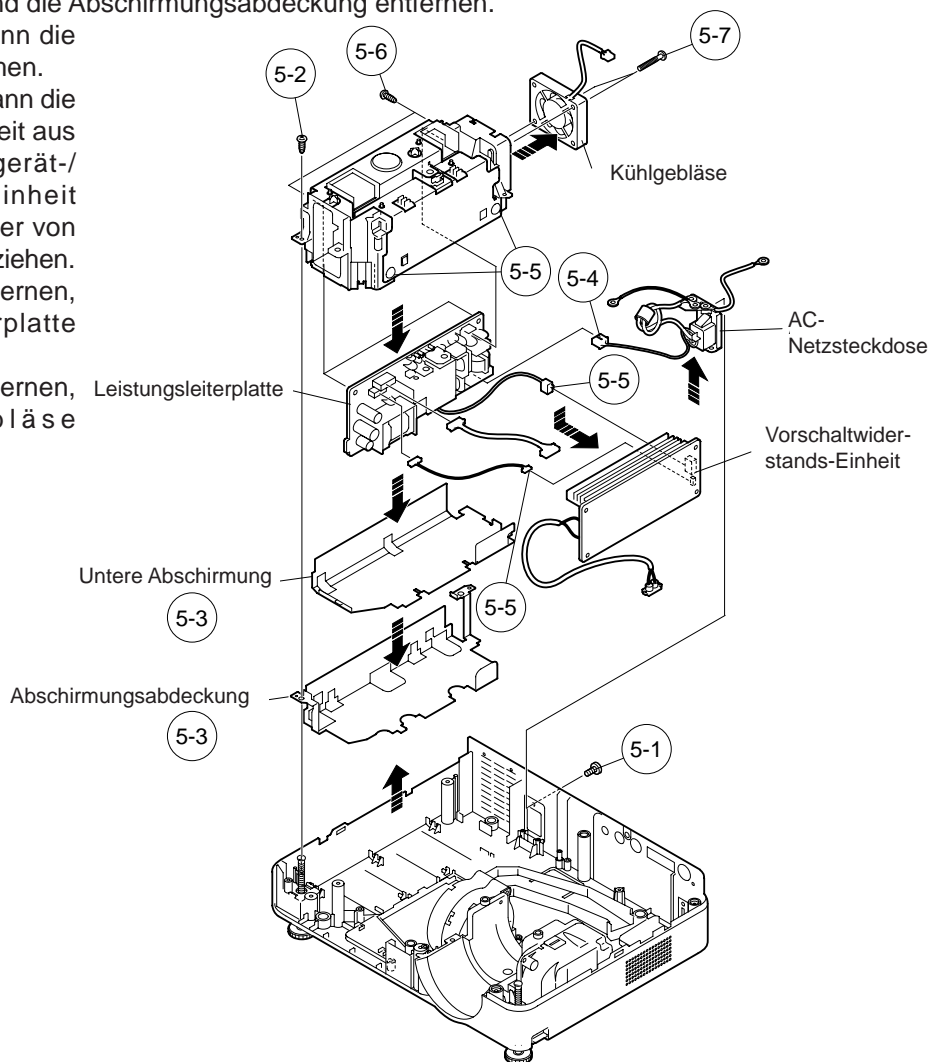

Hinweis: Wenn die Abschirmung (unten) der Netzgerät-/Vorschaltwiderstands-Einheit (PSLDMA 189WJFW) an der Halter-Baugruppe des Netzgerät-/Vorschaltwiderstands (CHLDZA 135WJ01) montiert wird, muß sichergestellt werden, daß diese wie unten beschrieben angebracht wird.

Unbedingt die Klaue der unteren Abschirmung in den Spalt zwischen der oberen Abschirmung und dem Halter einführen.


* Niemals die Klaue zwischen der Isolierplatte und dem Halter einpassen, da in diesem Fall ein zu geringer Isolierabstand zur Vorschaltwiderstands-Leiterplatte besteht.

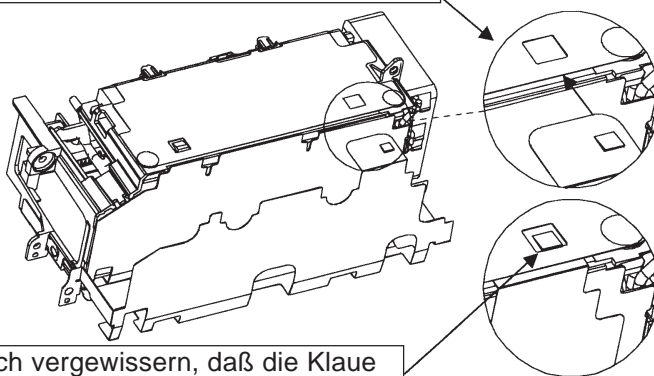

Nach dem Zusammenbau sich vergewissern, daß die Klaue der unteren Abschirmung in der viereckigen Öffnung der oberen Abschirmung sichtbar ist.

6. Ausbau der Einlaßluftführungs-Einheit

- 6-1. Die beiden Schrauben entfernen, dann die Einlaßluftführung herausnehmen.
- 6-2. Die Schraube entfernen, dann den Blattschalter abnehmen.
- 6-3. Die Schraube und die beiden Haken entfernen. Das Abstandsstück B abnehmen. Die Baugruppe Kühlgebläse-LCD R/G und die Einlaßluftführungs-Einheit B herausnehmen.
- 6-4. Die Schraube entfernen, dann die Baugruppe Kühlgebläse-LCD R/G ausbauen.
- 6-5. Die beiden Schrauben entfernen, dann die Kühlgebläse-LCD B herausnehmen.

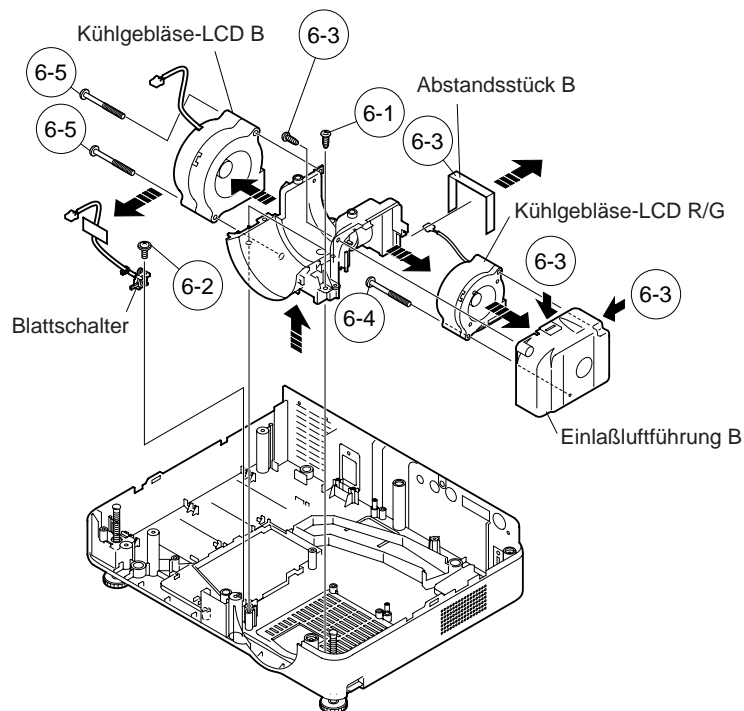


Rückstellen des Lampenbetriebszeit-Timers

● Rückstellung des Lampen-Timers

Den Lampen-Timer nach dem Lampenaustausch zurückstellen.

1 Das Netzkabel anschließen.


- Das Netzkabel am Netzeanschluss des Projektors anschließen.



Netzeanschluss

2 Den Lampen-Timer zurückstellen.

- Während und auf dem Projektor gleichzeitig gedrückt werden, auf dem Projektor drücken.
- "LAMP 0000H" erscheint und zeigt damit an, dass der Lampen-Timer zurückgestellt wurde.

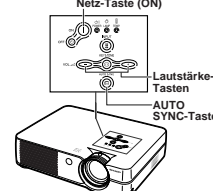

Netz-Taste (ON)
Lautstärke-Tasten
AUTO SYNC-Taste

Info

- Stellen Sie sicher, dass Sie den Lampen-Timer nur nach dem Austausch der Lampe zurücksetzen. Wenn Sie den Lampen-Timer zurückstellen und dieselbe Lampe weiterhin verwenden, könnte die Lampe beschädigt werden oder explodieren.


■ Die Warnleuchten auf dem Projektor weisen auf Fehlfunktionen im Projektor hin.

■ Falls ein Problem auftritt, leuchtet entweder die Temperaturwarn-Anzeige oder die Lampenaustausch-Anzeige rot auf, und die Stromversorgung wird ausgeschaltet. Nach dem Ausschalten des Gerätes die unten aufgeführten Verfahren befolgen.

	Wartungsanzeige		Symptom	Problem	Mögliche Abhilfe
	Normal	Unnormal			
Temperaturwarn-Anzeige	Aus	Rot ein / Strom aus	Die Temperatur im Inneren des Gerätes ist zu hoch.	<ul style="list-style-type: none"> Lüftungsöffnungen blockiert. Kühlventilator beschädigt Interne Schaltkreise beschädigt Lüftungsöffnungen verstopft 	<ul style="list-style-type: none"> Den Projektor an einem besser belüfteten Ort aufstellen. Den Projektor einem von Sharp autorisierten Händler für Projektoren oder dem Kundendienst zur Reparatur geben.
Lampenaustausch-Anzeige	Grün ein / Grün blinkt, wenn die Lampe aktiviert ist.	Rot ein / Rot ein / Strom aus	Die Lampe muss ausgetauscht werden. Die Lampe leuchtet nicht.	<ul style="list-style-type: none"> Restliche Lebensdauer der Lampe sinkt auf 5% oder weniger ab. Ausgebrannte Lampe Lampen-Schaltkreis beschädigt 	<ul style="list-style-type: none"> Lüftungsöffnungen Den Projektor einem von Sharp autorisierten Händler für Projektoren oder dem Kundendienst zur Reparatur geben. Beim Austausch der Lampe bitte die nötige Vorsicht walten lassen.
Netz-Anzeige	Grün ein / Rot ein	Rot blinkt	Die Netz-Anzeige blinkt bei eingeschaltetem Projektor rot auf.	<ul style="list-style-type: none"> Die Abdeckung der Filter-/Lampeneinheit ist geöffnet. 	<ul style="list-style-type: none"> Die Abdeckung sicher befestigen. Sollte die Netz-Anzeige auch bei korrekt eingesetzter Filterabdeckung rot aufblinken, wenden Sie sich bitte an einen von Sharp autorisierten Händler für Projektoren oder an den Kundendienst.


■ Austausch des Luftfilters

- Um optimale Arbeitsbedingungen für den Projektor zu gewährleisten, wurde das Gerät mit einem Luftfilter ausgestattet.
- Die Luftfilter sollten jeweils nach 100 Betriebsstunden gereinigt werden. Falls der Projektor in einer sehr staubigen oder verrauchten Umgebung verwendet wird, sollten die Luftfilter öfters gereinigt werden.
- Wenn sich der Luftfilter nicht mehr reinigen lässt, wenden Sie sich bitte an Ihren hinsichtlich eines Ersatzfilters (PFILDA008WJZZ) an einen von Sharp autorisierten Händler für Projektoren oder an den Kundendienst.

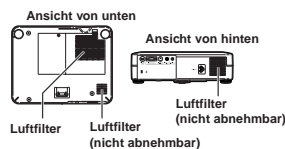


4 Luftfilter reinigen.

- Den Staub auf dem Luftfilter und der Abdeckung mit einem Staubsaugeraufsatz entfernen.

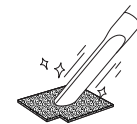

5 Den Luftfilter wieder einsetzen.


- Den Luftfilter unter den Laschen auf der Abdeckung der Filter-/Lampeneinheit platzieren.

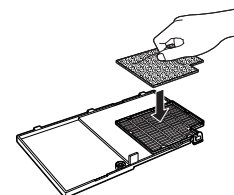

Reinigung und Austausch des Luftfilters


1 Das Gerät ausschalten und den Netzstecker abtrennen.

- OFF auf dem Projektor oder auf der Fernbedienung drücken. Warten, bis die Kühlung abschaltet.

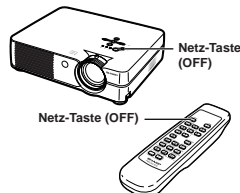


2 Die Abdeckung der Filter-/Lampeneinheit abnehmen.

- Den Projektor herum drehen. Die Benutzer-Wartungsschraube (①) lösen, die die Abdeckung der Filter-/Lampeneinheit sichert. Wenn auf die Lasche (②) gedrückt wird, kann die Abdeckung der Filter-/Lampeneinheit (③) abgenommen werden.

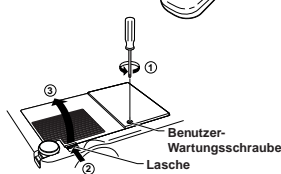


3 Den Luftfilter abnehmen.

- Den Luftfilter mit den Fingern anheben und aus der Abdeckung der Filter-/Lampeneinheit heraus nehmen.

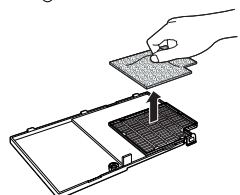


6 Die Abdeckung der Filter-/Lampeneinheit wieder einsetzen.

 - Die Lasche auf der Abdeckung der Filter-/Lampeneinheit (①) ausrichten und so platzieren, während auf die Lasche (②) gedrückt wird, um sie zu schließen. Anschließend die Benutzer-Wartungsschraube (③) anziehen, um die Abdeckung der Filter-/Lampeneinheit zu sichern.




Hinweis

- Sicherstellen, dass die Abdeckung der Filter-/Lampeneinheit sicher installiert ist. Die Stromversorgung lässt sich nicht einschalten, wenn dies nicht der Fall ist.
- Falls sich Staub oder Schmutz im unteren Bereich des Luftfilters (nicht abnehmbar) angesammelt hat, dies mit einem Staubsaugeraufsatz entfernen.

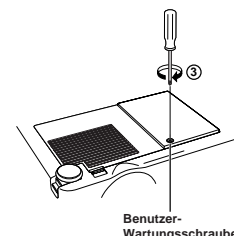

Beschreibung der Optik-Einheit


Erläuterungen für das korrekte Setup der optischen Komponenten und Baugruppen (Ansicht von oben)

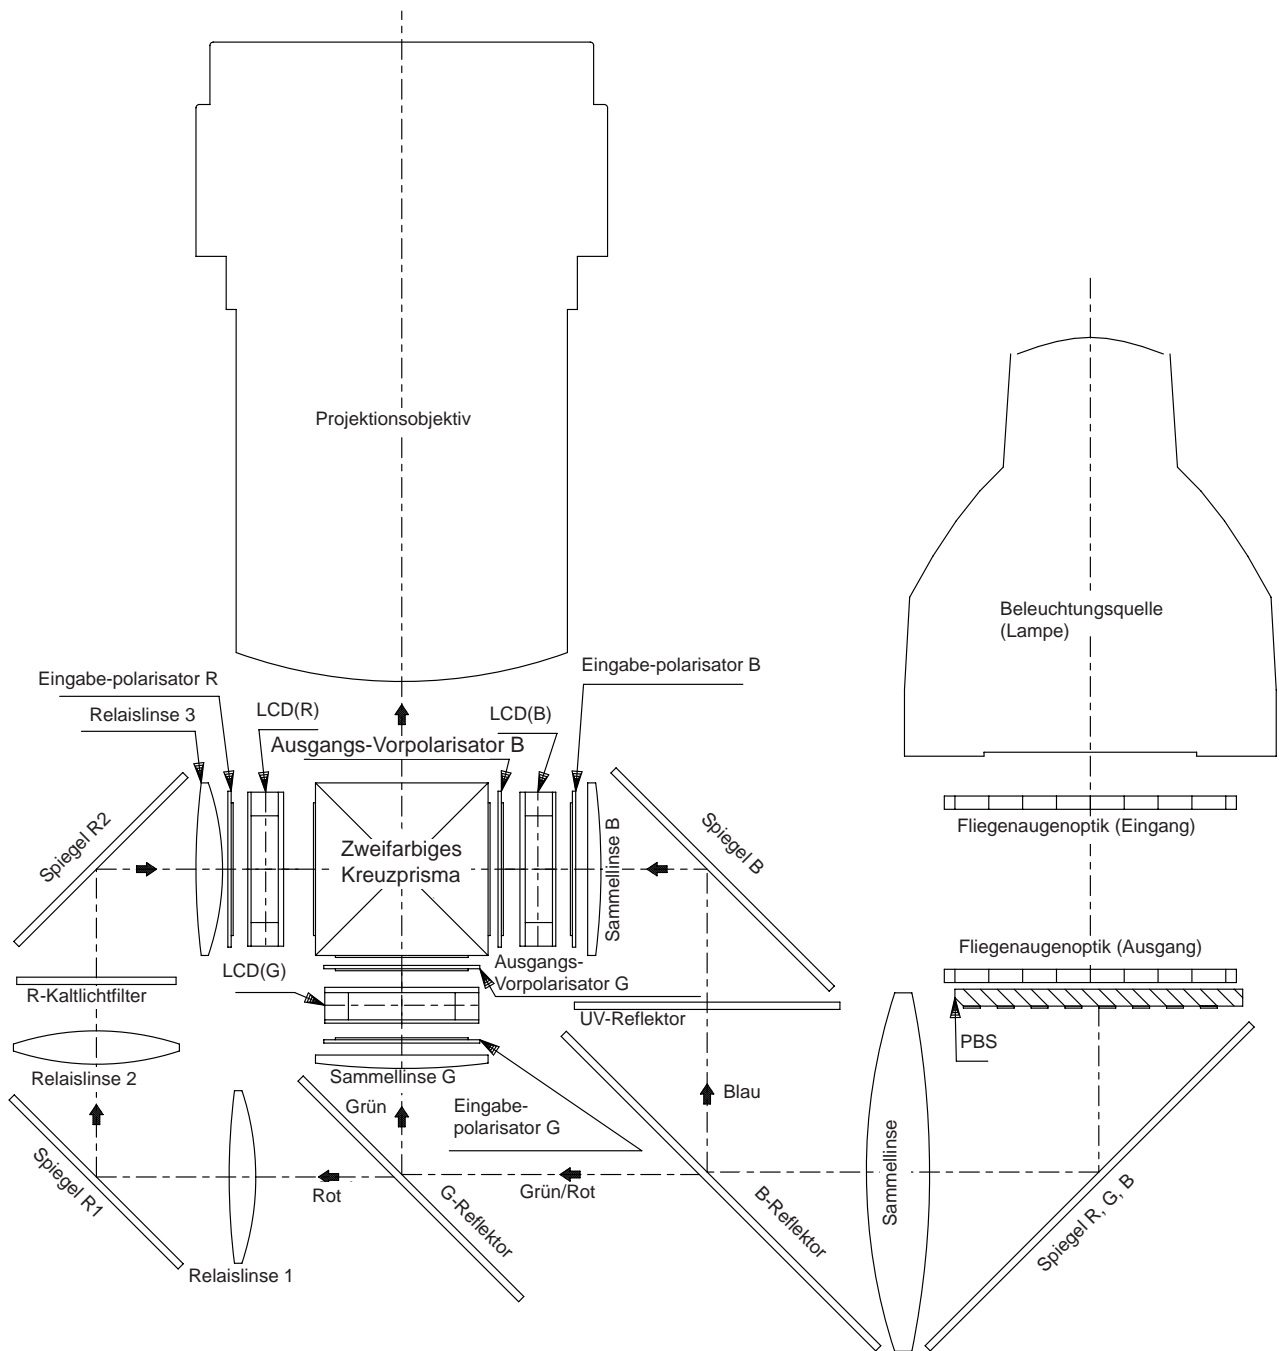

Auswechseln der Prismenhalter-Einheit



1. Die beiden Halteschrauben entfernen, dann den Prismenhalter und die Projektionslinsen-Einheit aus der Optik-Einheit herausnehmen.
2. Die vier Halteschrauben entfernen, dann die Prismenhalter-Einheit und die Objektiv-Einheit trennen.
3. Die Prismenhalter-Einheit durch ein Neuteil ersetzen. Die obigen Schritte 1 und 2 in umgekehrter Reihenfolge ausführen.

Hinweis: Selbst wenn auch nur eine der LCD-Tafeln defekt ist, muß die Prismenhalter-Einheit ersetzt werden. Auf keinen Fall nur die defekte LCD-Tafel austauschen.

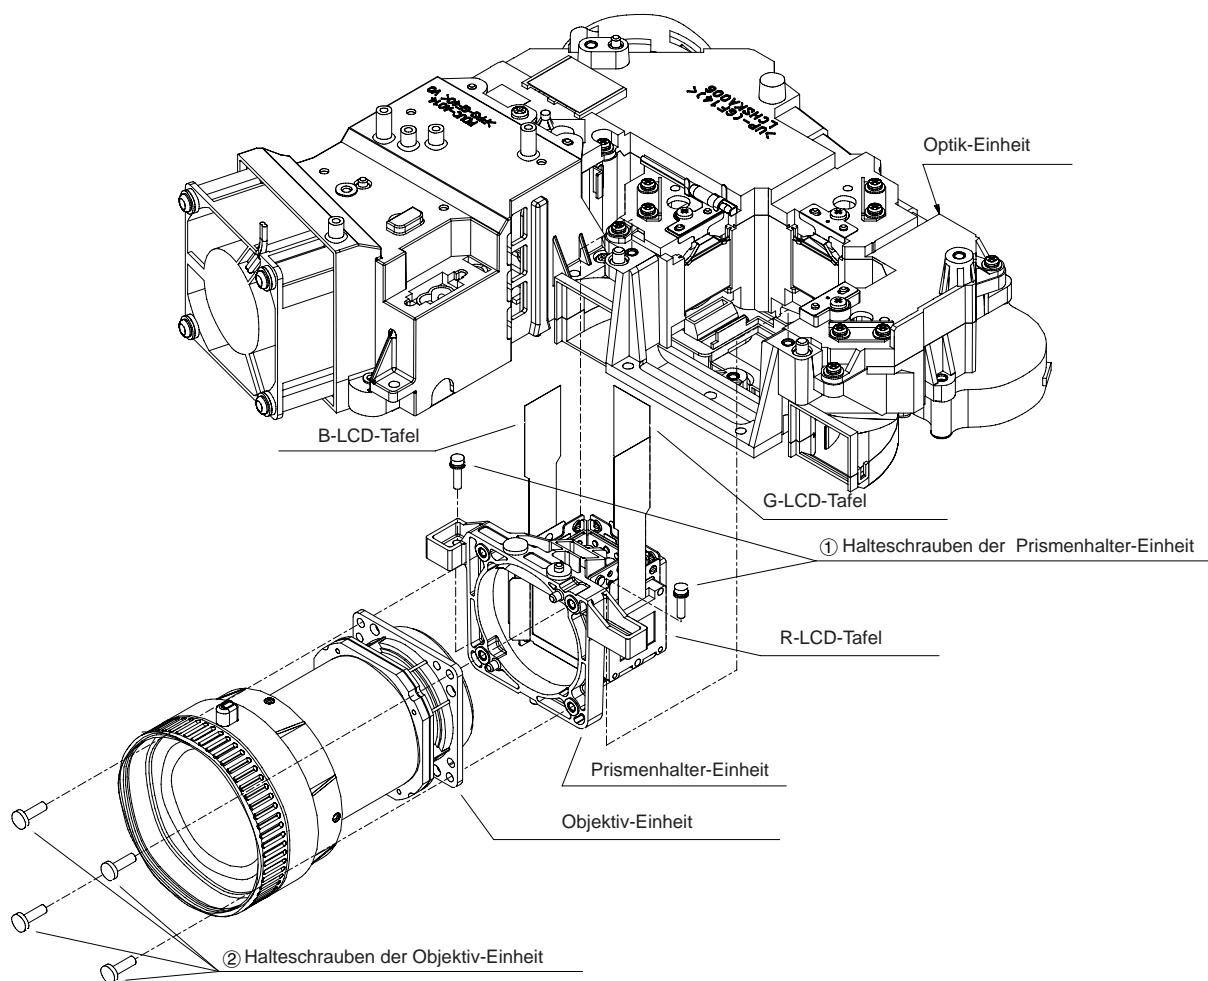


ELEKTRISCHE EINSTELLUNG

Nr.	Einstellgegenstand	Einstellbedingungen	Einstellverfahren
1	EEPROM wird initialisiert	1. Den Netzschalter einschalten und das Gerät für ca. 15 Minuten vorwärmen lassen. (Sicherstellen, daß die Kontrolllampe aufleuchtet.)	<ul style="list-style-type: none"> Die folgenden Einstellungen vornehmen: S2002 drücken, um den Bearbeitungsmodus aufzurufen und "SS2" am SS-Menü zu aktivieren.
2-1	Helligkeits-einstellung für R/G/B.	1. Die folgenden Gruppen und Positionen wählen: Gruppe : AD Position: R-Bright G-Bright B-Bright (GAMMA-Synchronisationsablauf) 2. Ein XGA-16-Stufensignal mit einem Schwingungspegel von 50% zuführen (0,35 Vp-p).	1. Den Bildschirm beobachten und die R-, G- und B-Helligkeitswerte so einstellen, daß die zweite Tönung (3%-Abstufung) auf der schwarzen Seite einen geringen Bildpunkteschwund zeigt, während sich die helle Farbzone auf ungefähr die Hälfte reduziert.
2-2	Einstellung des R/G/B-Kontrastes	1. Die folgenden Gruppen und Positionen wählen: Gruppe : AD Position: R-Contrast G-Contrast B-Contrast (GAMMA-Synchronisationsablauf) 2. Ein XGA-Weißsignal mit einem Amplitudenpegel von 96% (0,67 Vp-p) zuführen.	1. Den Bildschirm beobachten und die R-, G- und B-Kontrastwerte so einstellen, daß wegen eines geringen Bildpunkteschwunds sich die helle Farbzone auf ungefähr die Hälfte reduziert.
3	Einstellung der DTV-Helligkeit und des Kontrastes	1. Ein 480P-Komponenten-10-Stufensignal mit einem Amplitudenpegel von 100% zuführen. 2. Die folgenden Gruppen und Positionen wählen: Gruppe : DTV Position: Bright Contrast (GAMMA-Synchronisationsablauf)	1. Den Einstellwert überprüfen. Contrast (Weißpegel): 7 Bright (Schwarzpegel): 6
4	Einstellung der DVD-Helligkeit und des Kontrastes	1. Ein 480PI-Komponenten-10-Stufensignal mit einem Amplitudenpegel von 100% zuführen. 2. Die folgenden Gruppen und Positionen wählen: Gruppe : DVD Position: Bright Contrast (GAMMA-Synchronisationsablauf)	1. Den Einstellwert überprüfen. Contrast (Weißpegel): 6 Bright (Schwarzpegel): 8

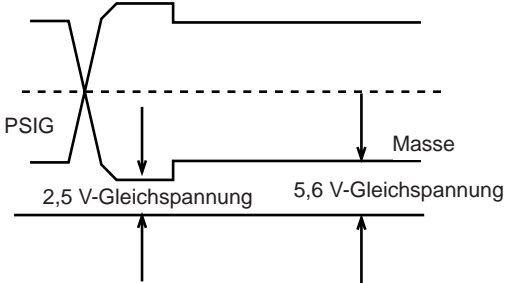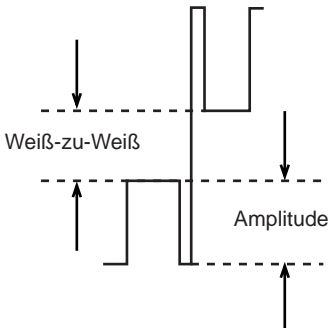Nr.	Einstellgegenstand	Einstellbedingungen	Einstellverfahren
5	Einstellung der Video-Helligkeit und des Kontrastes	1. Ein NTSC-Komposit-10-Stufensignal (ohne Setup) mit einem Amplitudenpegel von 100% zuführen. 2. Die folgenden Gruppen und Positionen wählen: Gruppe : DVD Position : Bright Contrast (GAMMA-Synchronisationsablauf)	1. Den Einstellwert überprüfen. Contrast (Weißpegel): 5 Bright (Schwarzpegel): 8
6	PSIG-Einstellung	1. Die folgenden Gruppen und Positionen wählen: Gruppe : OUTPUT2 Position : PSIG-H PSIG-L 2. Den Festwert überprüfen. PSIG-H: 64 PSIG-L: 146	1. Ein XGA-Signal zuführen, dann die Einstellung vornehmen, um die folgende PSIG-Wellenform zu erzeugen (TP1101; TP1201 und TP1301): 
7	Einstellung der R/G/B-Schwarzpegel-Signalamplitude	1. Die folgenden Gruppen und Positionen wählen: Gruppe : OUTPUT1 Position: Für Grün-Einstellung G1-BLK G1-GAIN Für Rot-Einstellung R1-BLK R1-GAIN Für Blau-Einstellung B1-BLK B1-GAIN 2. Sich vergewissern, daß die Farbmarkierungen für die Prozeßeinstellung am Bildschirm angezeigt werden. 3. Für die G-Einstellung ein Synchroskop mit P1301-2P verbinden. 4. Für die R- und B-Einstellungen ein Synchroskop mit P1301-1P bzw. P1301-3P verbinden	1. G1-GAIN wählen. Mit Hilfe des Gerätesteuerschalters oder der Fernbedienungstaste die Signalamplitude auf $4,05 \text{ V}_{p-p} \pm 0,05 \text{ V}$ einstellen. 2. Nun G1-BLK wählen. Mit Hilfe des Gerätesteuerschalters oder der Fernbedienungstaste den Weiß-zu-Weiß-Pegel auf $1,70 \text{ V}_{p-p} \pm 0,05 \text{ V}$ einstellen. 3. Die gleichen Einstellungen für R und B wiederholen. 

Nr.	Einstellgegenstand	Einstellbedingungen	Einstellverfahren
8	Einstellung der RGB-Gegenspannung	1. Ein Gegenspannungs-Einstellsignal im XGA-Modus zuführen 2. Die folgenden Gruppen und Positionen wählen: Gruppe : OUTPUT3 Position: RC (R) GC (G) BC (B)	1. Den Steuerschalter des Geräts oder die Taste der Fernbedienungseinheit verwenden, um die Einstellung so vorzunehmen, daß das Bildschirmflackern auf ein Minimum reduziert ist. 2. Die Einstellung so vornehmen, daß sich das Bild im Mittelpunkt des Bildschirms befindet.
9	RGB-Weißbalance-Einstellung	1. Ein RGB-Grausignal mit 50% zuführen (XGA). 2. Die folgenden Gruppen und Positionen wählen: Gruppe : OUTPUT1 Position: R1-BLK(R) B1-BLK(B)	1. Die Einstellungen für R1-BLK und B1-BLK so vornehmen, daß ein Farbwert von $x = 285 \pm 5$ bzw. $y = 323 \pm 5$ erhalten wird (8500K).
10	sRGB-Einstellung	1. Ein RGB-Grausignal mit 50% zuführen (XGA). 2. Die folgenden Gruppen und Positionen wählen: Gruppe : OUTPUT1 Position: S-R1-BLK S-R1-GAIN S-G1-BLK S-G1-GAIN S-B1-BLK S-B1-GAIN	1. Die Einstellungen für S-R1-BLK und B1-BLK so vornehmen, daß ein Farbwert von $x = 313 \pm 5$ bzw. $y = 344 \pm 5$ erhalten wird (6500K).
11	Automatische Korrektur von Farbabweichungen	1. Die automatische Korrektur von Farbabweichungen kann mit dem automatischen Farbabweichungs-Korrektur-system durchgeführt werden.	1. Sich vergewissern, daß keine auffällige Farbungleichheit am Bildschirm zu sehen ist.
12	Videofarbson-Einstellung	1. Die folgenden Gruppen und Positionen wählen: Gruppe : VIDEO Position: N-Tint P-Tint S-Tint	1. Den Festwert überprüfen. N-Tint: 8 P-Tint: 8 S-Tint: 8
13	Video-farbsättigungs-Einstellung	1. Die folgenden Gruppen und Positionen wählen: Gruppe : VIDEO Position: N-Color P-Color S-Color	1. Den Festwert überprüfen. N-Color : 10 P-Color : 10 S-Color : 10
14	DTV-Farbson-einstellung	1. Die folgenden Gruppen und Positionen wählen: Gruppe : DTV Position: Tint	1. Den Festwert überprüfen. Tint : 8

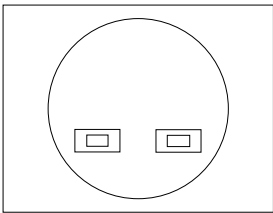Nr.	Einstellgegenstand	Einstellbedingungen	Einstellverfahren
15	DTV-Farbsättigungseinstellung	1. Die folgenden Gruppen und Positionen wählen: Gruppe : DTV Position : Color	1. Den Festwert überprüfen. Color : 13
16	DVD-Farbton-einstellung	1. Die folgenden Gruppen und Positionen wählen: Gruppe : DVD Position : Tint	1. Den Festwert überprüfen. Tint : 8
17	DVD-Farbsättigungseinstellung	1. Die folgenden Gruppen und Positionen wählen: Gruppe : DVD Position : Color	1. Den Festwert überprüfen. Color : 10
18	Muster- und Halteimpulsphase	1. Ein XGA-75-Hz-Schwarzsignal zuführen. 2. Die folgenden Gruppen und Positionen wählen: Gruppe : OUTPUT3 Position: GCK-PHASE	1. Den Festwert überprüfen. Festwert : 8
19	Einstellung der RGB-Farbtonwiedergabe	1. Das SMPTE-Testbildsignal zuführen.	1. Sich vergewissern, daß die 100- und 95%-Abstufungen für Weiß sowie die 0- und 5%-Abstufungen für Schwarz sichtbar sind. 
20	Überprüfen des Weißabgleichs	1. Die in Punkt 9 für die RGB-Eingabe sowie in Punkt 10 für die sRGB-Eingabe verwendeten Einstellungsparameter verwenden.	Sich vergewissern, daß am Monitor keine Abweichung des Weißabgleichs sichtbar ist.
21	Überprüfung der Farben-Leistungswerte	1. Das Farbbalkensignal zuführen.	1. Die Position L1 des Prozeßmodus wählen. Betriebsprüfung für Color und Tint.
22	Überprüfung der Video-Leistungswerte	1. Ein Monoskopmuster-signal zuführen.	1. Die Position L2 des Prozeßmodus wählen. Betriebsprüfung für Picture, Bright und Sharpness.
23	Überprüfung der RGB-Leistungswerte	1. Das RGB-Signal empfangen.	1. Die Position L4 des Prozeßmodus wählen. Betriebsprüfung für Picture, Bright, Red, Blue, Clock, Phase, H-POS und V-POS.

No.	Adjusting point	Adjusting conditions	Adjusting procedure				
24	Funktion des Ausschalt-Timers		1. Im Prozeßmodus die Position OFF wählen. Sich vergewissern, daß der Ausschalt-Timer mit einem am Bildschirm angezeigten Wert von 5 Minuten beginnt; danach eine Minute in 1-Sekunden-Intervallen abzählen. Wenn 0 Minuten angezeigt werden, muß die Stromversorgung zum Gerät unterbrochen werden.				
25	Thermistor-Leistungsprüfung	1. Den Thermistor mit einem Haartrockner erwärmen.	1.Sich vergewissern, daß die angegebene Temperatur erreicht ist.				
26	Überprüfung der Auto-Sync-Leistungswerte.	1. Ein Phasenprüfmuster-Signal zuführen.	1. Im VGA-, SVGA- und XGA-Modus sich vergewissern, daß die Werte für den Clock, Phase, H-POS und V-POS automatisch eingestellt werden können.				
27	Ausgabe-Einstellwerte		1.Die folgenden Einstellung vornehmen: <table><tr><td>Prozeß-Einstellung</td><td>Einstellung der Fernbedienung</td></tr><tr><td>S3</td><td>Werkseinstellung bei 3</td></tr></table>	Prozeß-Einstellung	Einstellung der Fernbedienung	S3	Werkseinstellung bei 3
Prozeß-Einstellung	Einstellung der Fernbedienung						
S3	Werkseinstellung bei 3						

1. Aktivieren und Deaktivieren des Prozeßmodus unter Verwendung der Steuertasten dieses Modells.


1-1. Aktivieren und Deaktivieren

Wenn am Bildschirm kein Menü angezeigt wird, in der angegebenen Reihenfolge an der Fernbedienungseinheit die Tasten "UP", "UP", "DOWN", "DOWN", "RIGHT", "LEFT" und "ENTER" drücken (Fernbedienungseinheiten des Typs A10 oder der Serie C50/45 und P25/20).

1-2. Andere Modelle

Die Prozeßtaste S2002 (Kippschalter) an der Hauptleiterplatte drücken, um das Prozeßmenü zu aktivieren bzw. zu deaktivieren.

2. Rückstellung des Lampen-Timers an diesem Modell

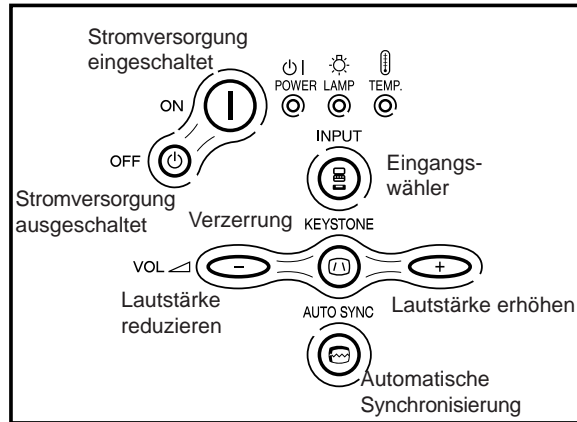

2-1. Vorgehensweise bei der Rückstellung

Die Tasten Vol+ und AUTOSYNC gedrückt halten, dann die Tasten POWER ON und Vol- drücken. Die Anzeige "LAMP 000H" erscheint nun für 60 Sekunden, nachdem die Stromversorgung eingeschaltet wurde.

3. Erzwungenes Deaktivieren der Diebstahlschutz-Funktion an diesem Modell


3-1. Vorgehensweise beim Deaktivieren

Während das Diebstahlschutz-Eingabemenü am Bildschirm angezeigt wird, an der Fernbedienungseinheit in der angegebenen Reihenfolge die Tasten "MENU", "ENTER", "ENTER", "MENU", "UNDO", "UNDO" und MENU drücken.

4. Erzwungenes Deaktivieren des Kennworts an diesem Modell

4-1. Vorgehensweise beim Deaktivieren

In einem beliebigen Betriebszustand die Tasten "ON", "+", "-", "ON", "+", "-" und "INPUT" in der angegebenen Reihenfolge drücken.

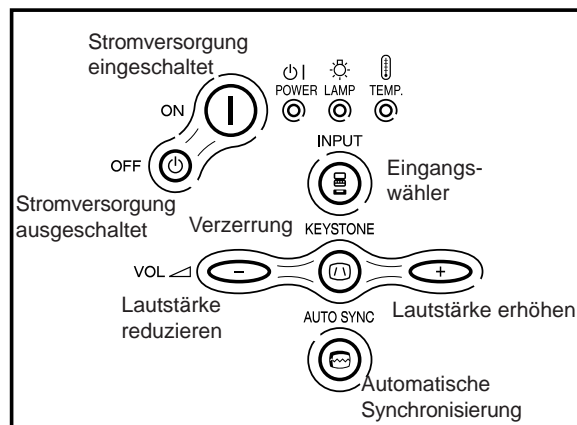

Prozeßmenü 1

	Prozeßmenü für Einstellungen	
Erste Schicht	DTV	Pedestal
	DVD	VERSION
	VIDEO	SS
	AD	TEMP
	OUTPUT1	PATTERN
	OUTPUT2	LAMP
	OUTPUT3	LINE
	VIDEO1	EXIT


Zweite Schicht		Anfangswert
DTV	Contrast	4
	Tint	5
	Color	13
	Sharpness	1
	CTI-Level	1
	LTI-Level	0
	CB-Offset	7
	CR-Offset	7
	Bright	15
	B-DRIVE	41
	R-DRIVE	41
	EXIT	
DVD	Contrast	3
	Tint	5
	Color	10
	Sharpness	1
	CTI-Level	1
	LTI-Level	0
	CB-Offset	7
	CR-Offset	7
	Bright	16
	B-DRIVE	41
	R-DRIVE	41
	EXIT	
VIDEO	Contrast	2
	N-Tint	5
	P-Tint	5
	S-Tint	5
	N-Color	10
	P-Color	10
	S-Color	10
	Sharpness	1
	CTI-Level	1
	LTI-Level	0
	CB-Offset	7


VIDEO	CR-Offset	7
	Bright	16
	B-DRIVE	41
	R-DRIVE	41
	EXIT	
AD	R-Bright	67
	G-Bright	67
	B-Bright	67
	R-Contrast	167
	G-Contrast	167
	B-Contrast	167
	EXIT	
OUTPUT1	R1-BLK	120
	R1-GAIN	152
	G1-BLK	140
	G1-GAIN	152
	B1-BLK	160
	B1-GAIN	152
	S-R1-BLK	120
	S-R1-GAIN	152
	S-G1-BLK	140
	S-G1-GAIN	152
	S-B1-BLK	160
	S-B1-GAIN	152
	EXIT	
OUTPUT2	PSIG-H	64
	PSIG-L	146
	EXIT	
OUTPUT3	RC	135
	GC	135
	BC	135
	GCK-PHASE	8
	CC	1
	EXIT	
VIDEO1	N-Contrast	14
	P-Contrast	14
	S-Contrast	15
	Color	17
	NT3.58 Delay	1
	NT4.43 Delay	1
	PAL Delay	1
	SECAM Delay	3
	EXIT	
Pedestal	R-Bright	-10
	G-Bright	-10
	B-Bright	-10


Prozeßmenü 2



Pedestal	R-Contrast	+10
	G-Contrast	+10
	B-Contrast	+10
	EXIT	
VERSION	Build	
	Boot Code	
	Config	
	Rom Code	
	GUI	
	EXIT	
SS	SS2	
	SS3 EU	
	SS4 US	
	SS5 JPN	
	SS6 CHIN	
	EXIT	
TEMP	Temp1	Parameter für Sensor 1
	Temp2	Parameter für Sensor 2
	Temp3	Nicht belegt
	Temp4	Nicht belegt
	EXIT	
PATTERN	Cross Hatch	
	Color Bar	
	EXIT	
LAMP	Current Time	Gegenwärtige Verwendungszeit
	History1	Vorheriger Zyklus
	History2	Zwei Zyklen vorher
	History3	Drei Zyklen vorher
	History4	Vier Zyklen vorher
	TOTAL TIME	Gesamtbetriebs- stunden
	EXIT	
LINE	OFF	
	LED CHECK	
	EXIT	


FEHLERSUCHTABELLE

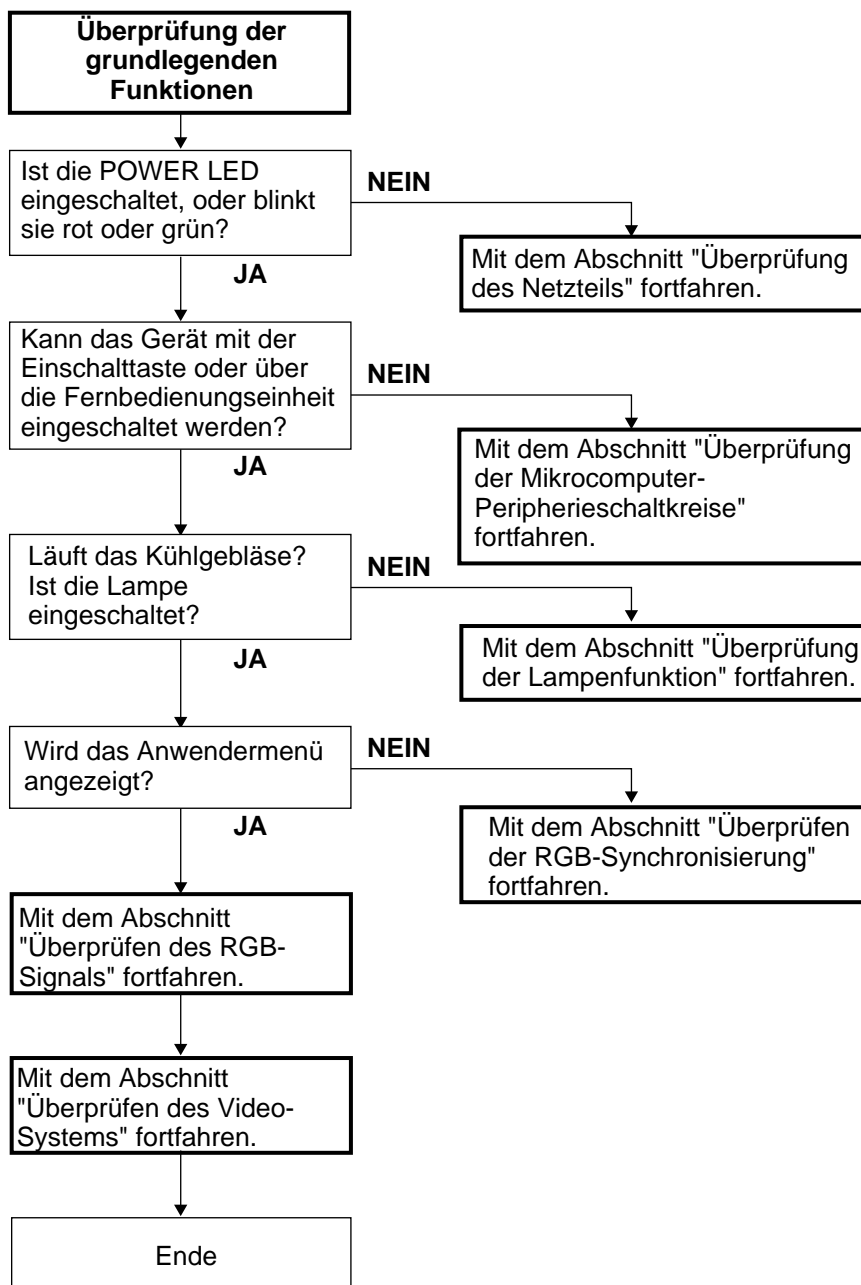



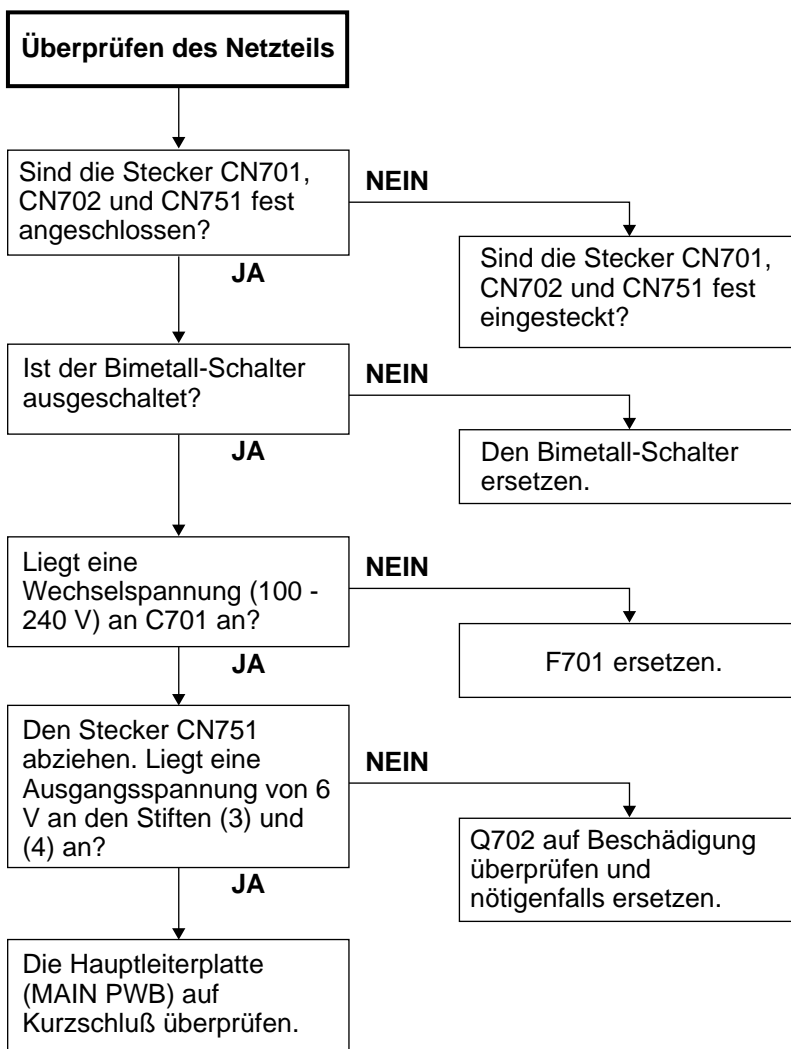


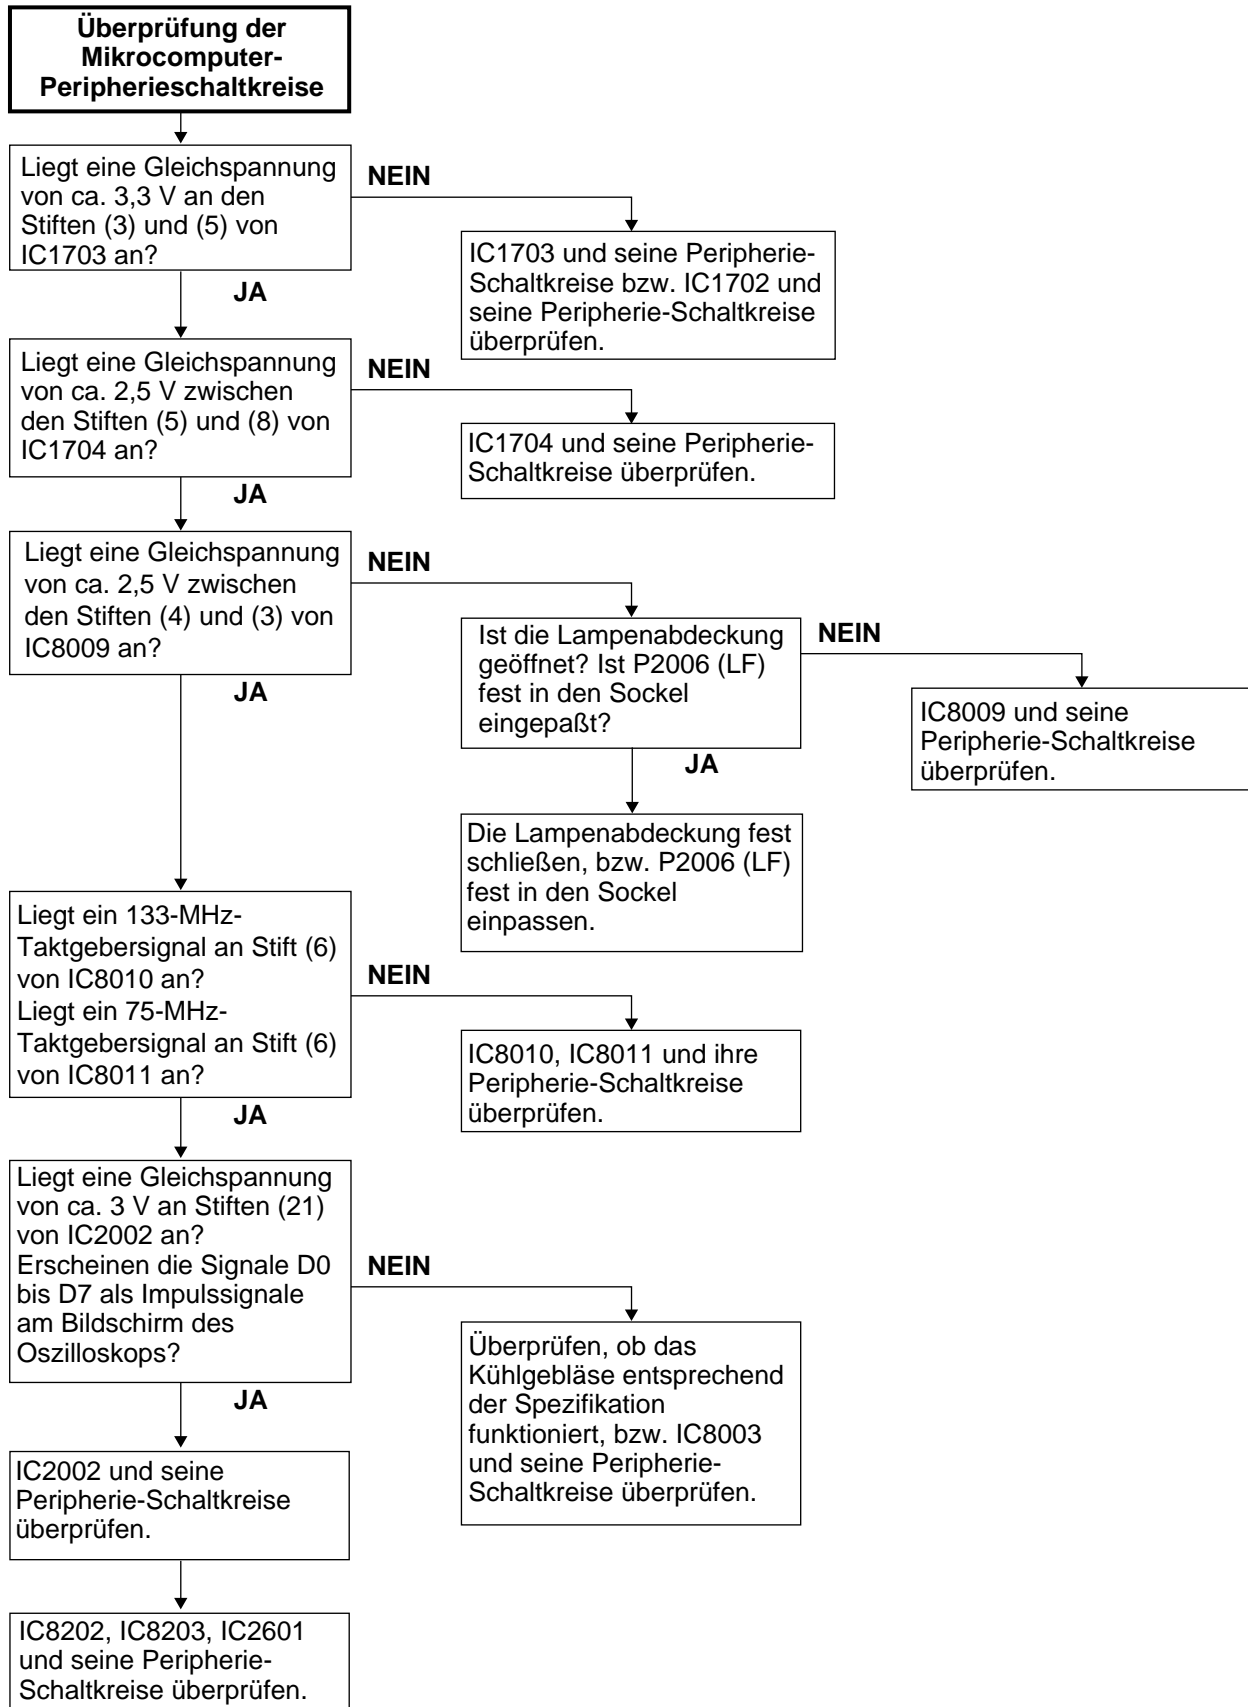

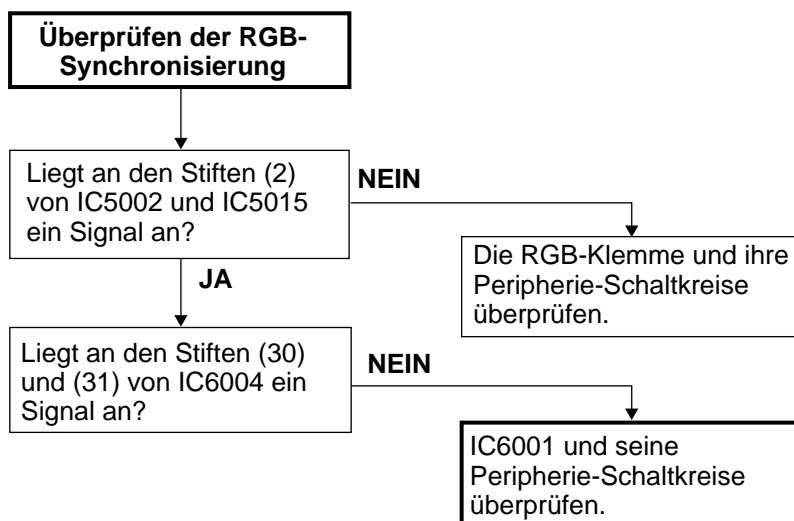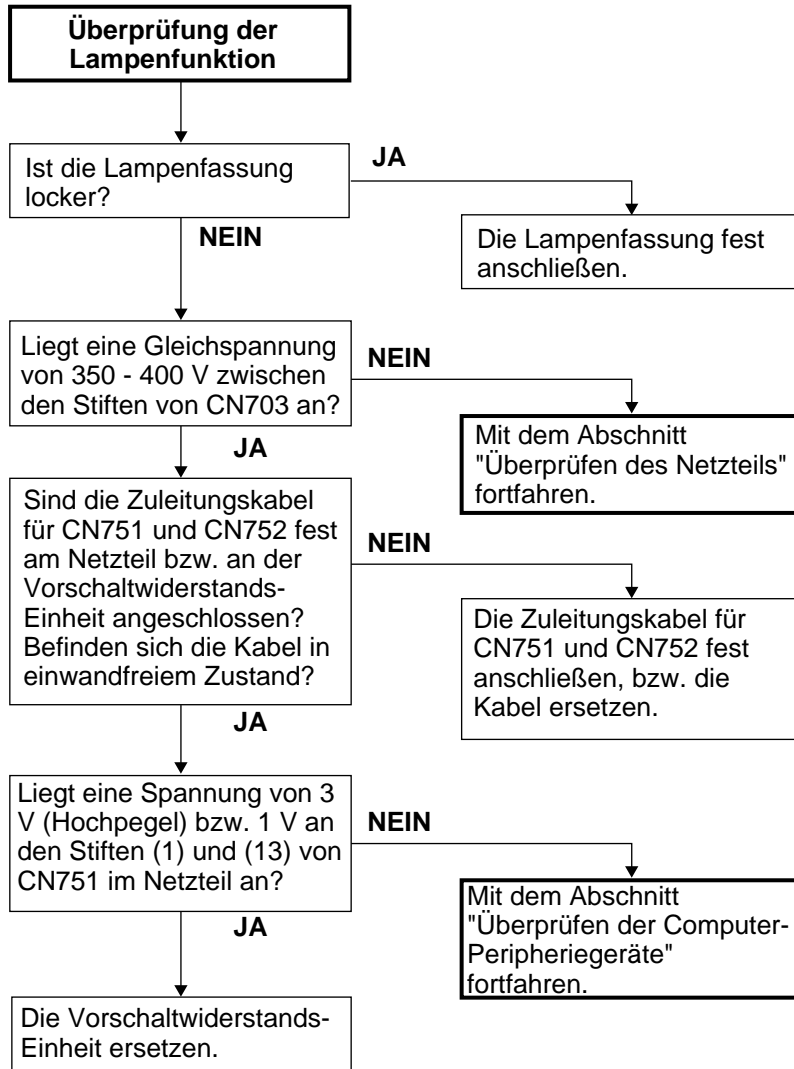

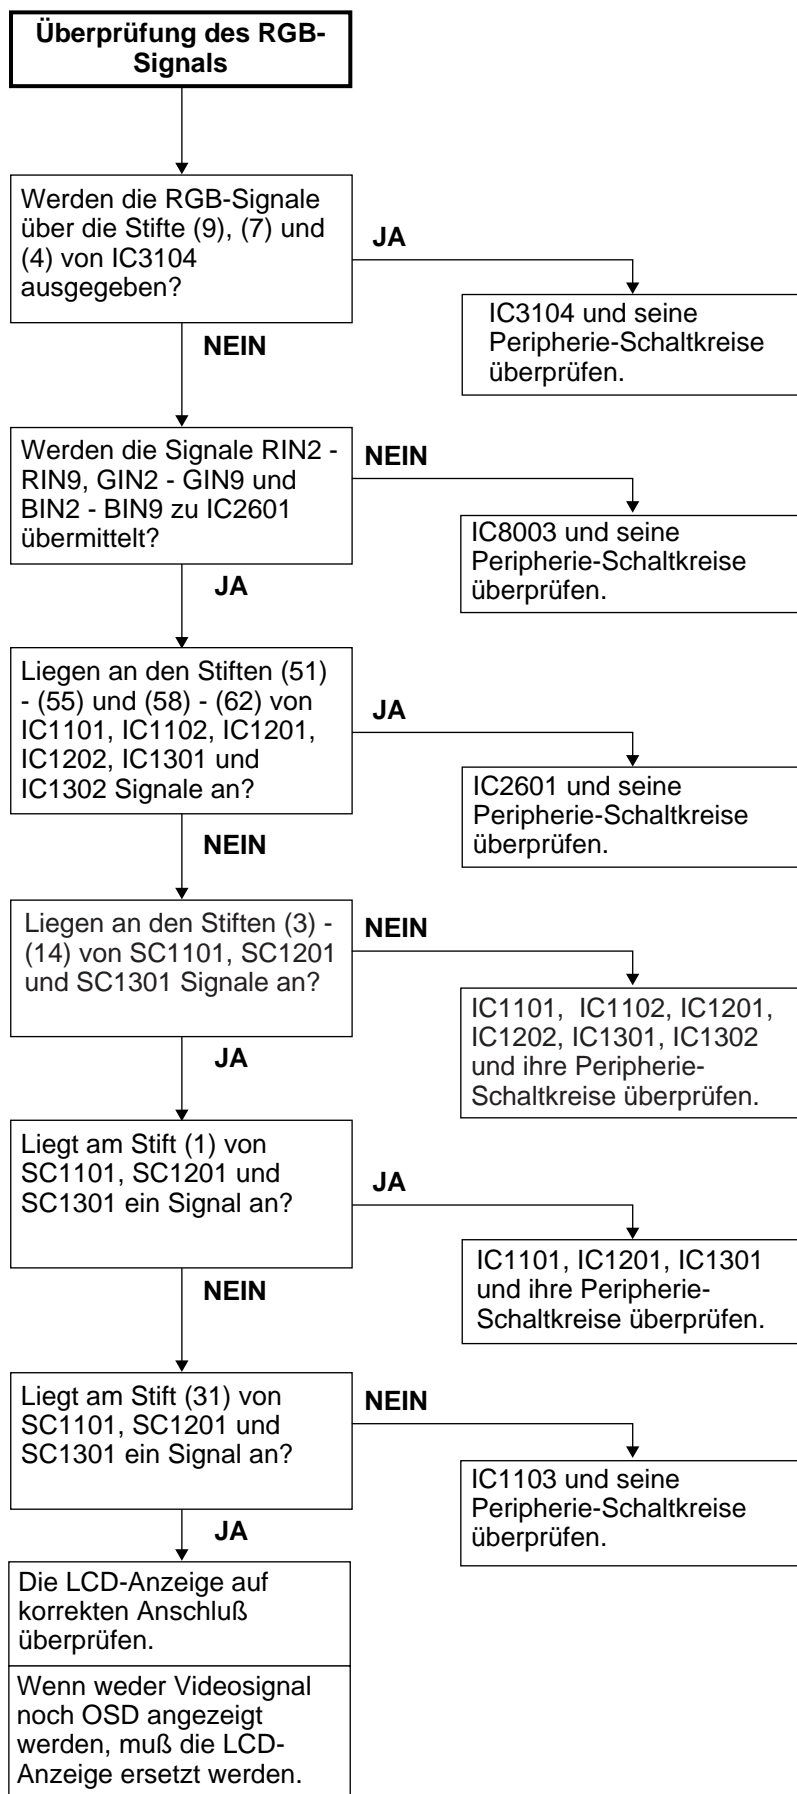

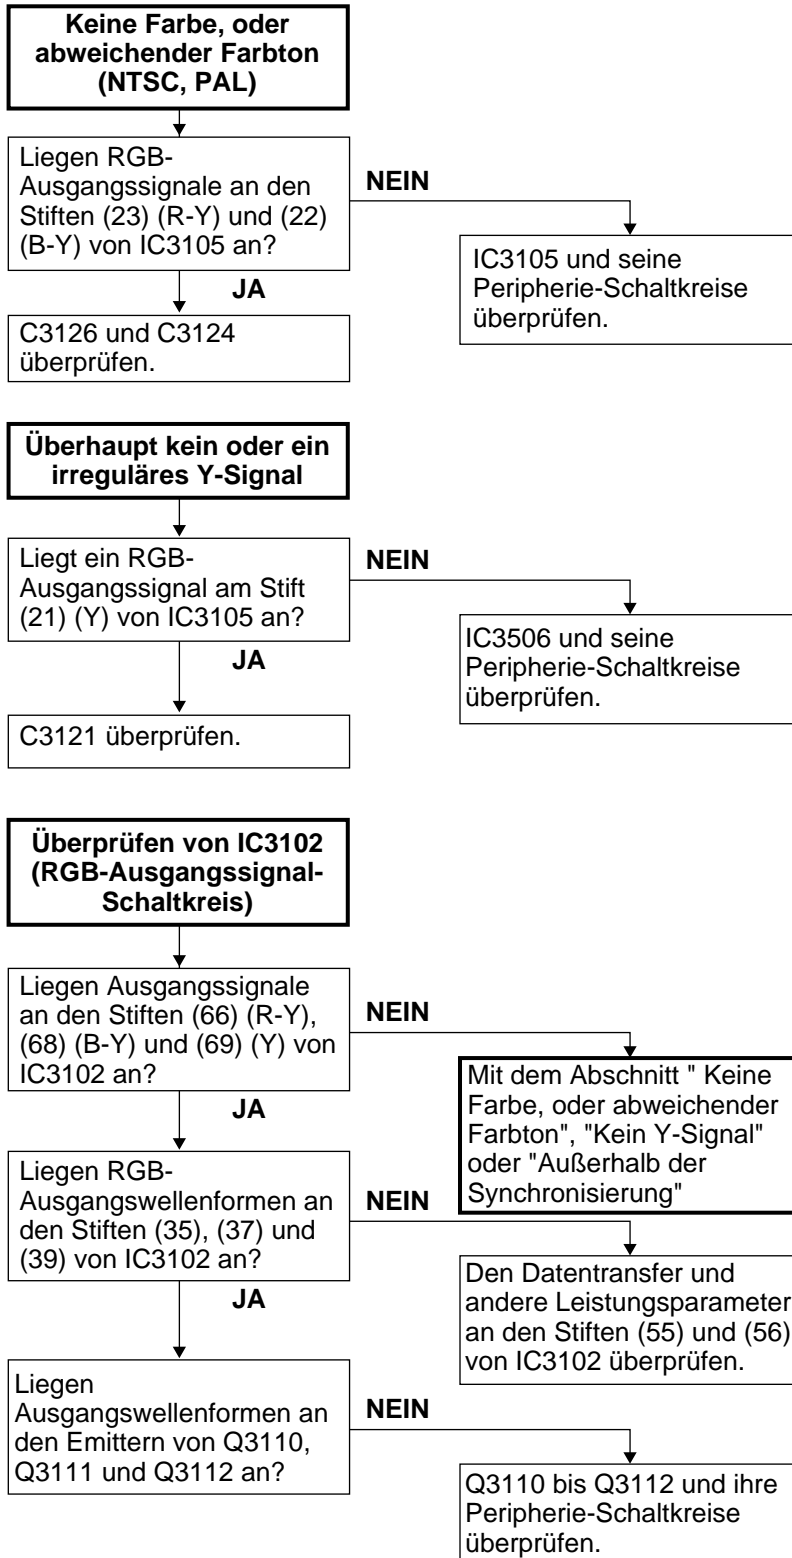


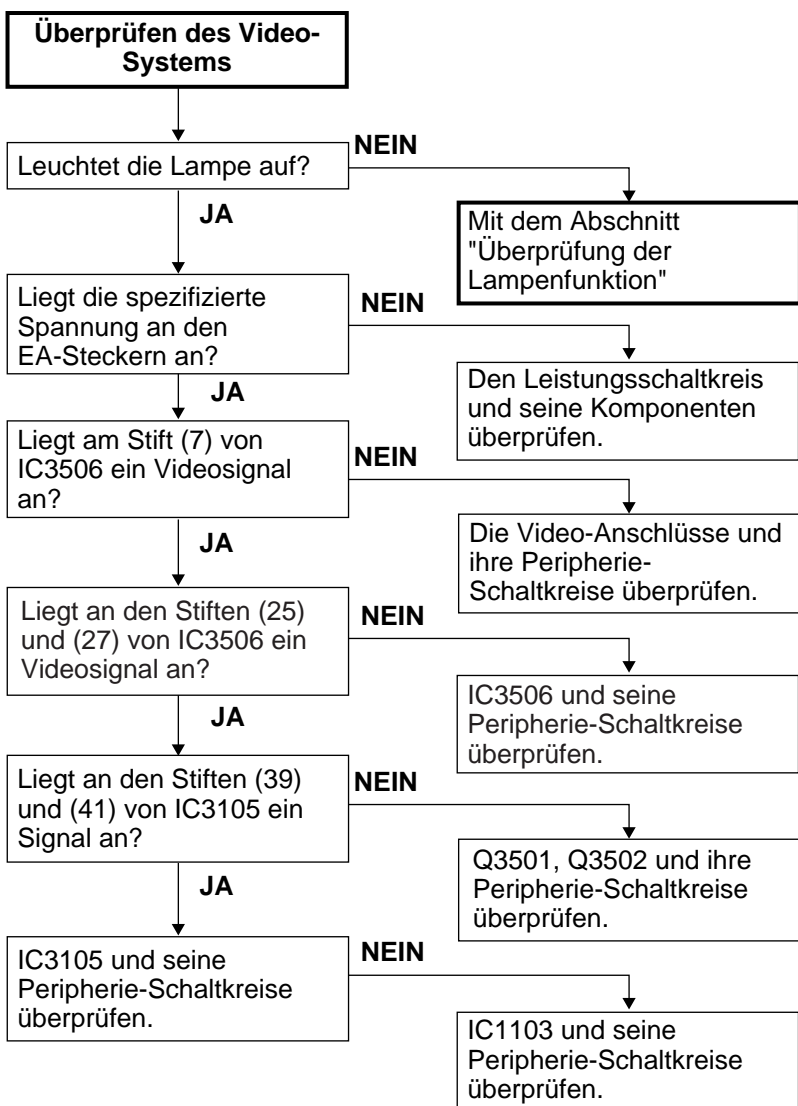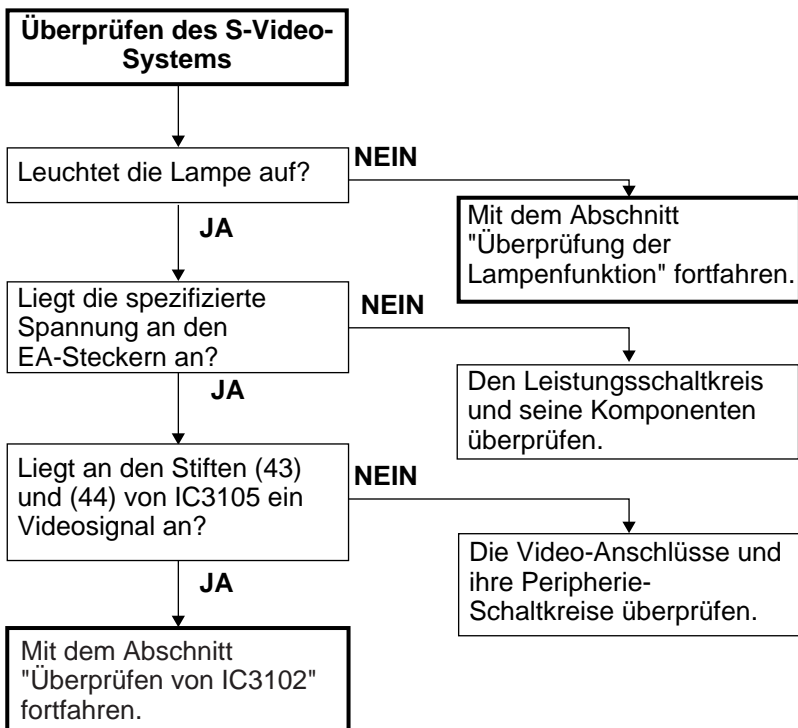


CHASSIS LAYOUT / CHASSIS-ANORDNUNG

H
G
F
E
D
C
B
A

R/C UNIT
DUNTKB601DE01

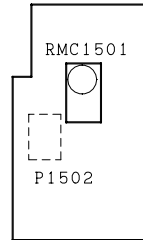


MAIN UNIT
DUNTKB599FE01(X) /
DUNTKB840FE01(S)

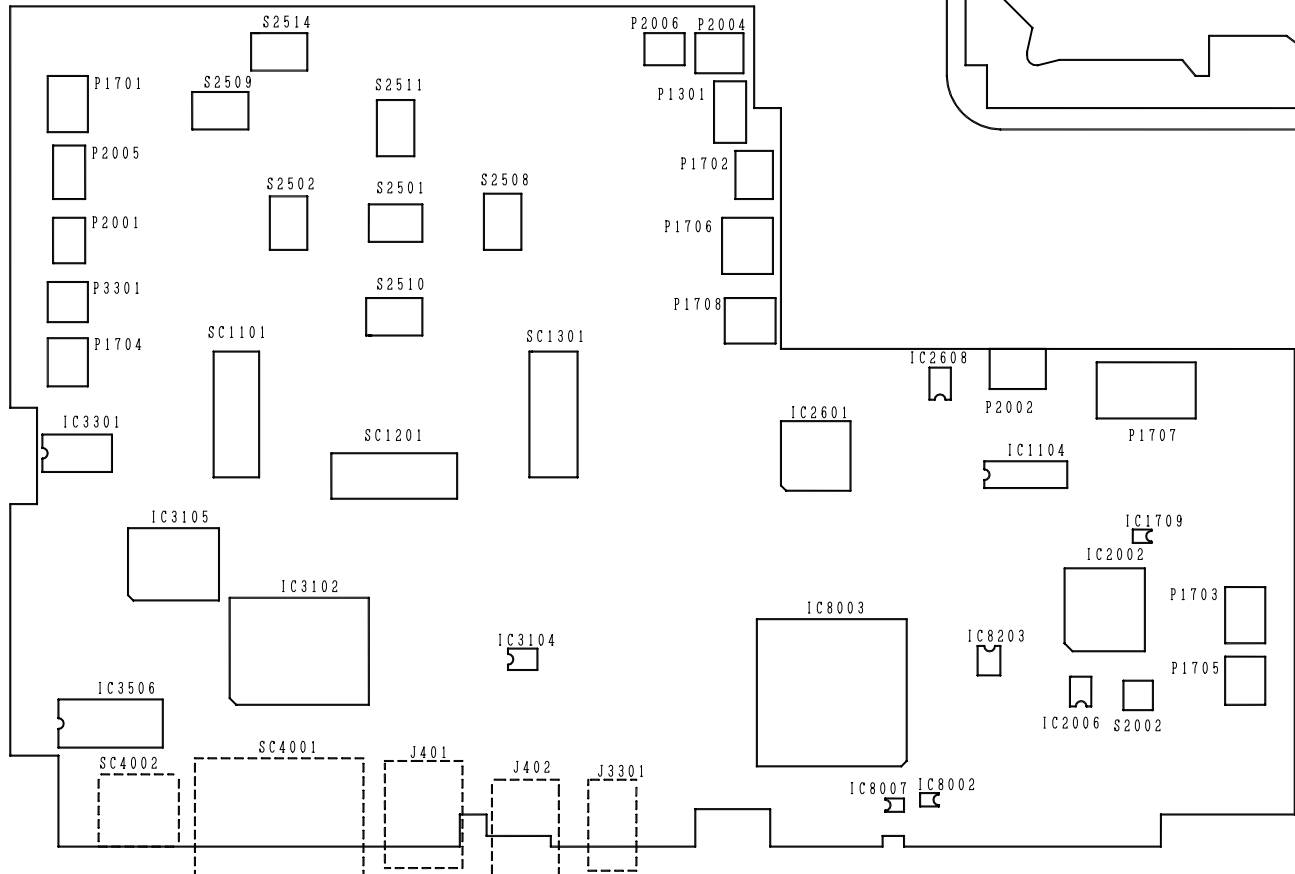

1 2 3 4 5 6 7 8 9 10

POWER UNIT RDENCA029WJZZ

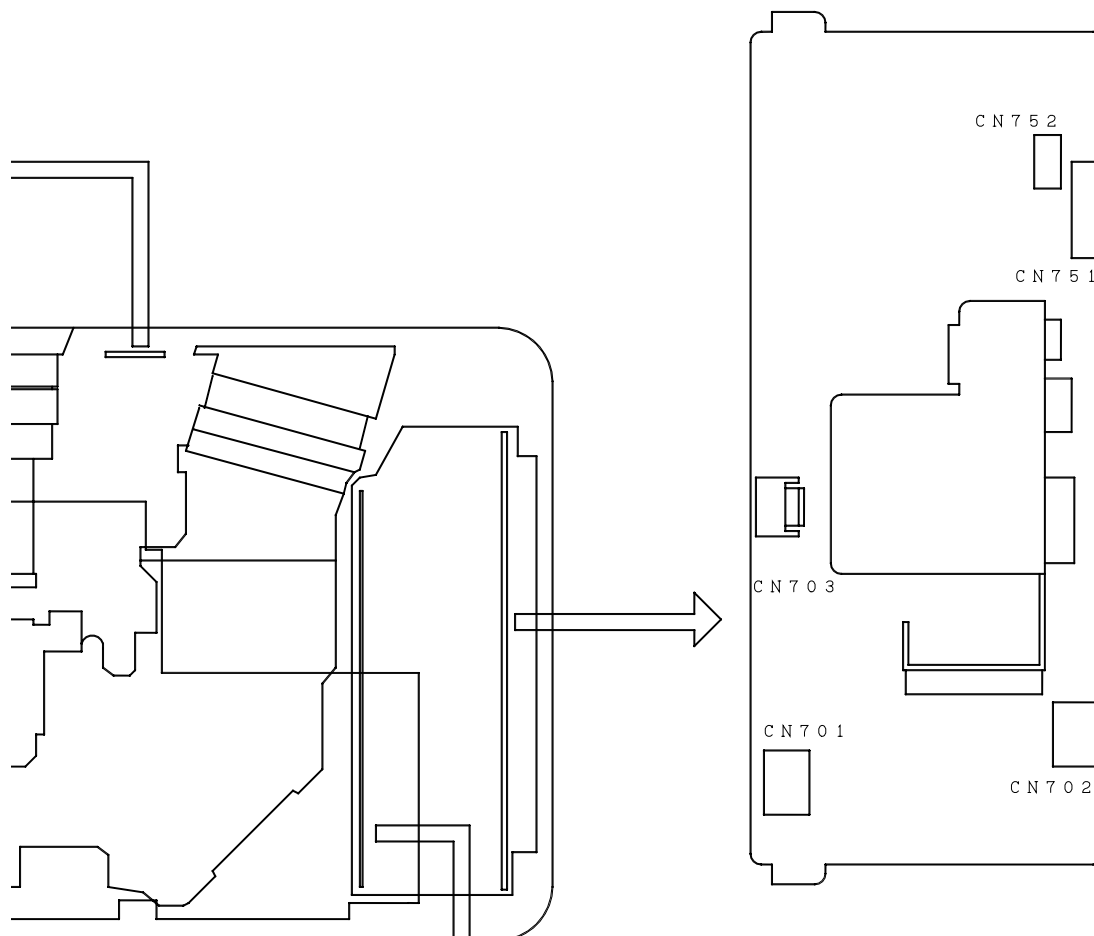



BALLAST UNIT RDENCA028WJZZ

03
05

10	11	12	13	14	15	16	17	18	19
----	----	----	----	----	----	----	----	----	----


BLOCK DIAGRAM / BLOCKSCHALTBIKD

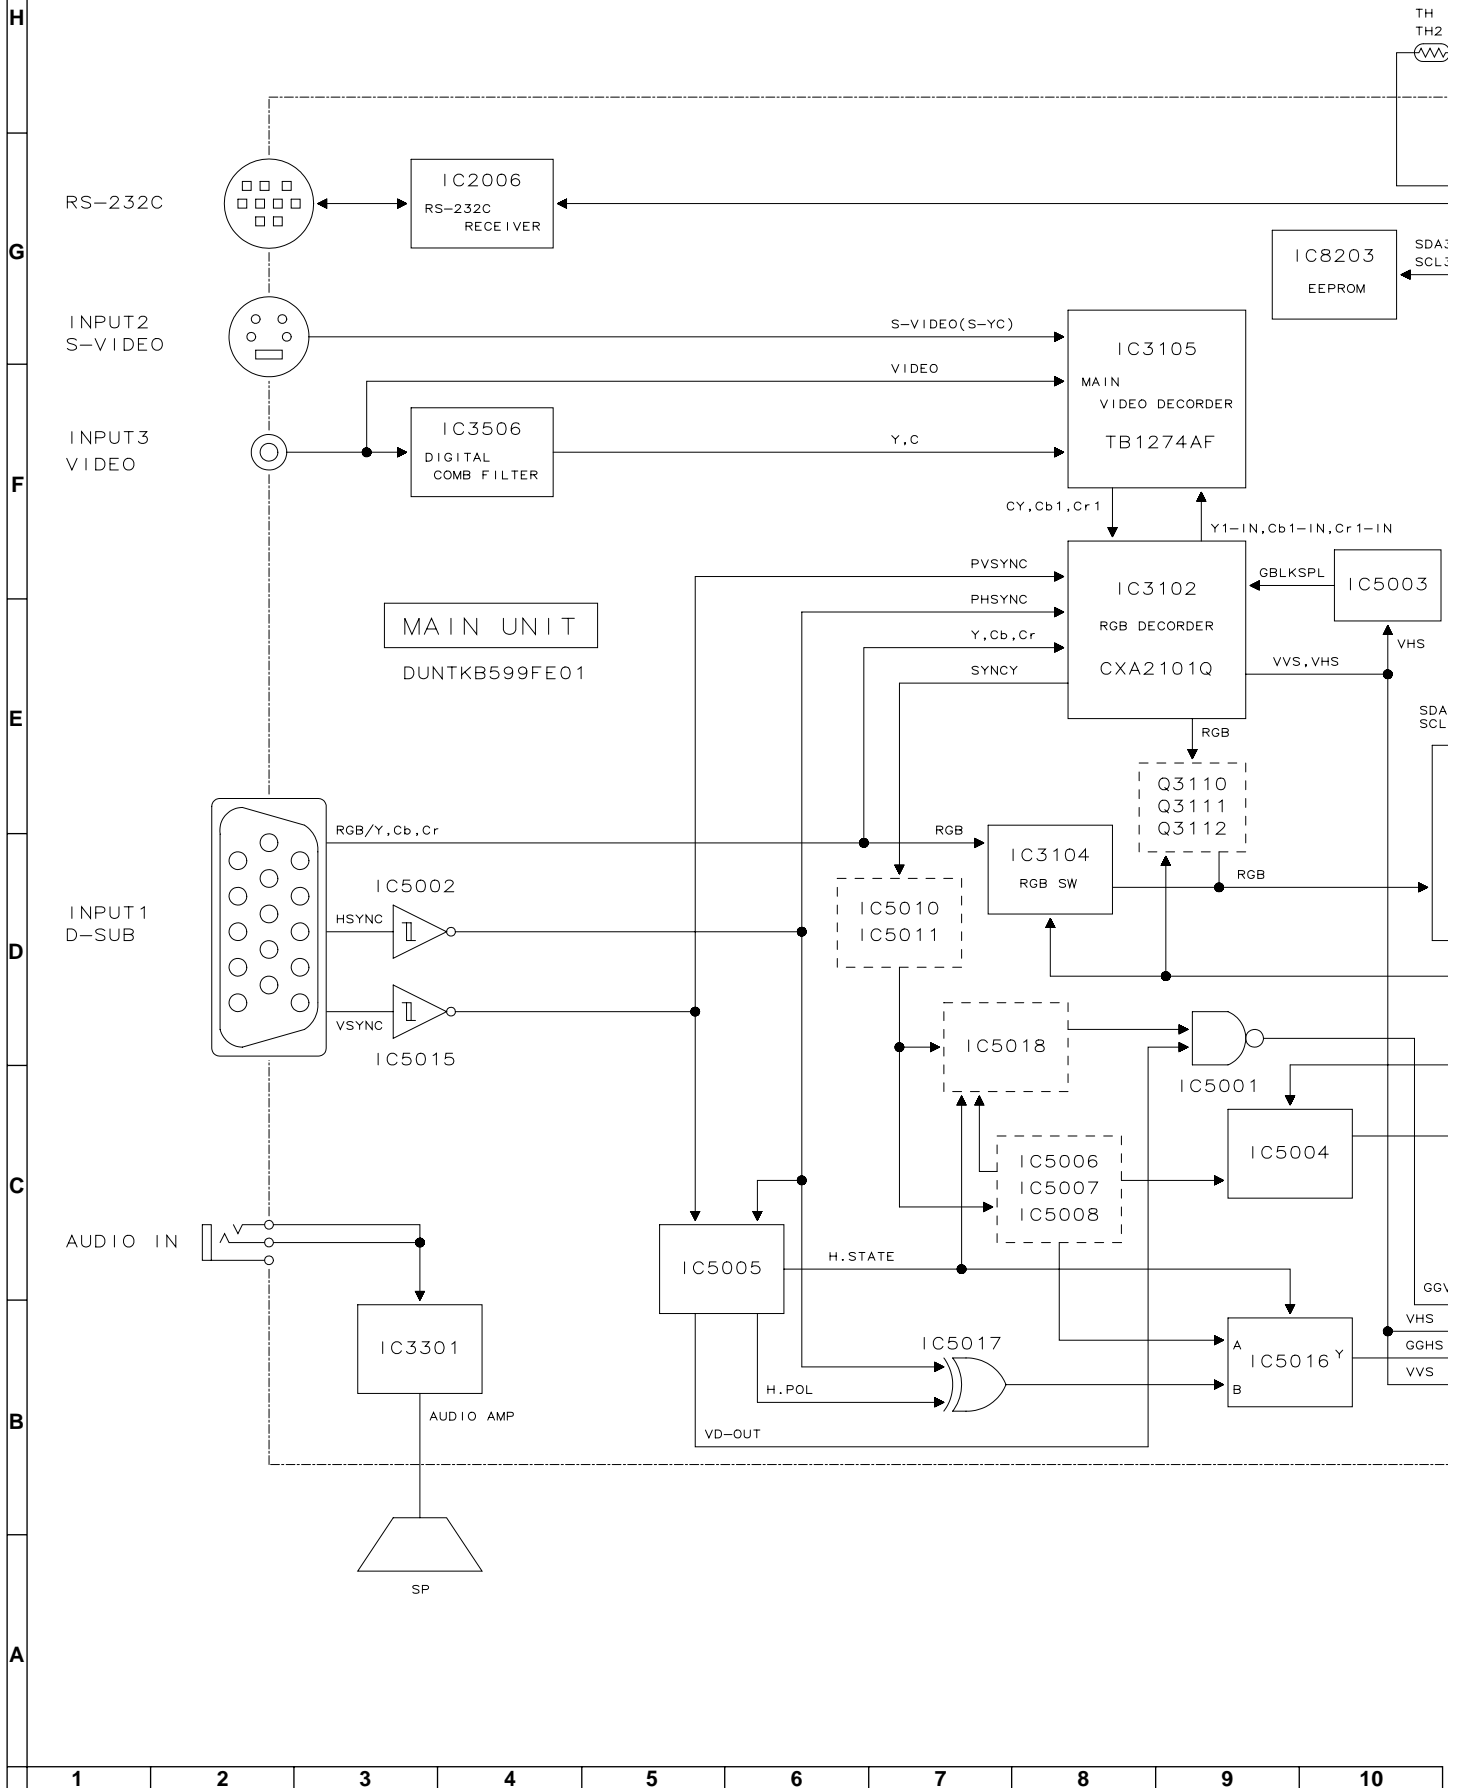


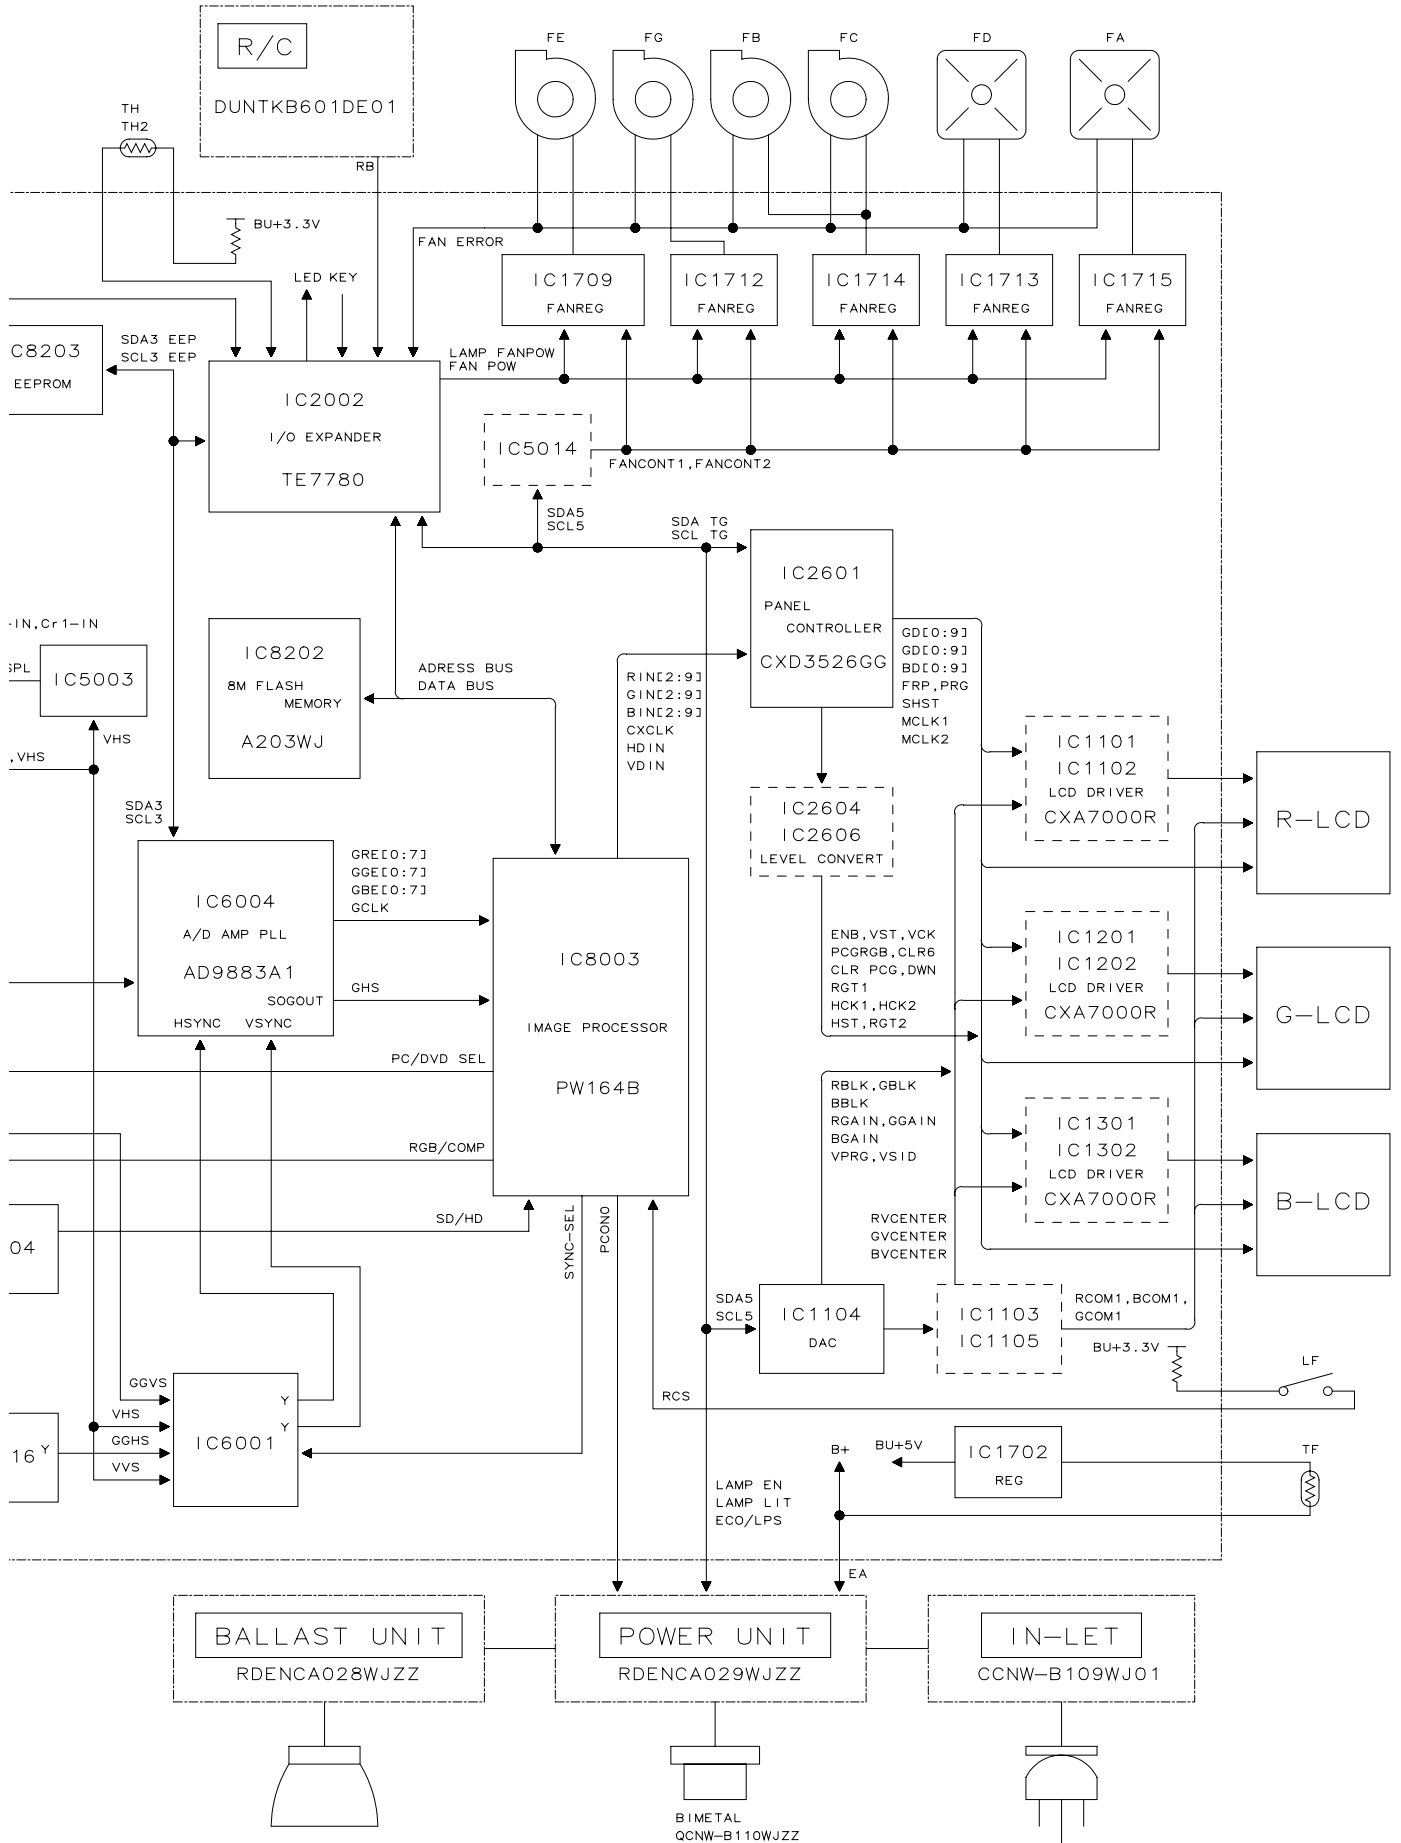

10	11	12	13	14	15	16	17	18	19
----	----	----	----	----	----	----	----	----	----

OVERALL WIRING DIAGRAM / GESAMTSCHALTPLAN

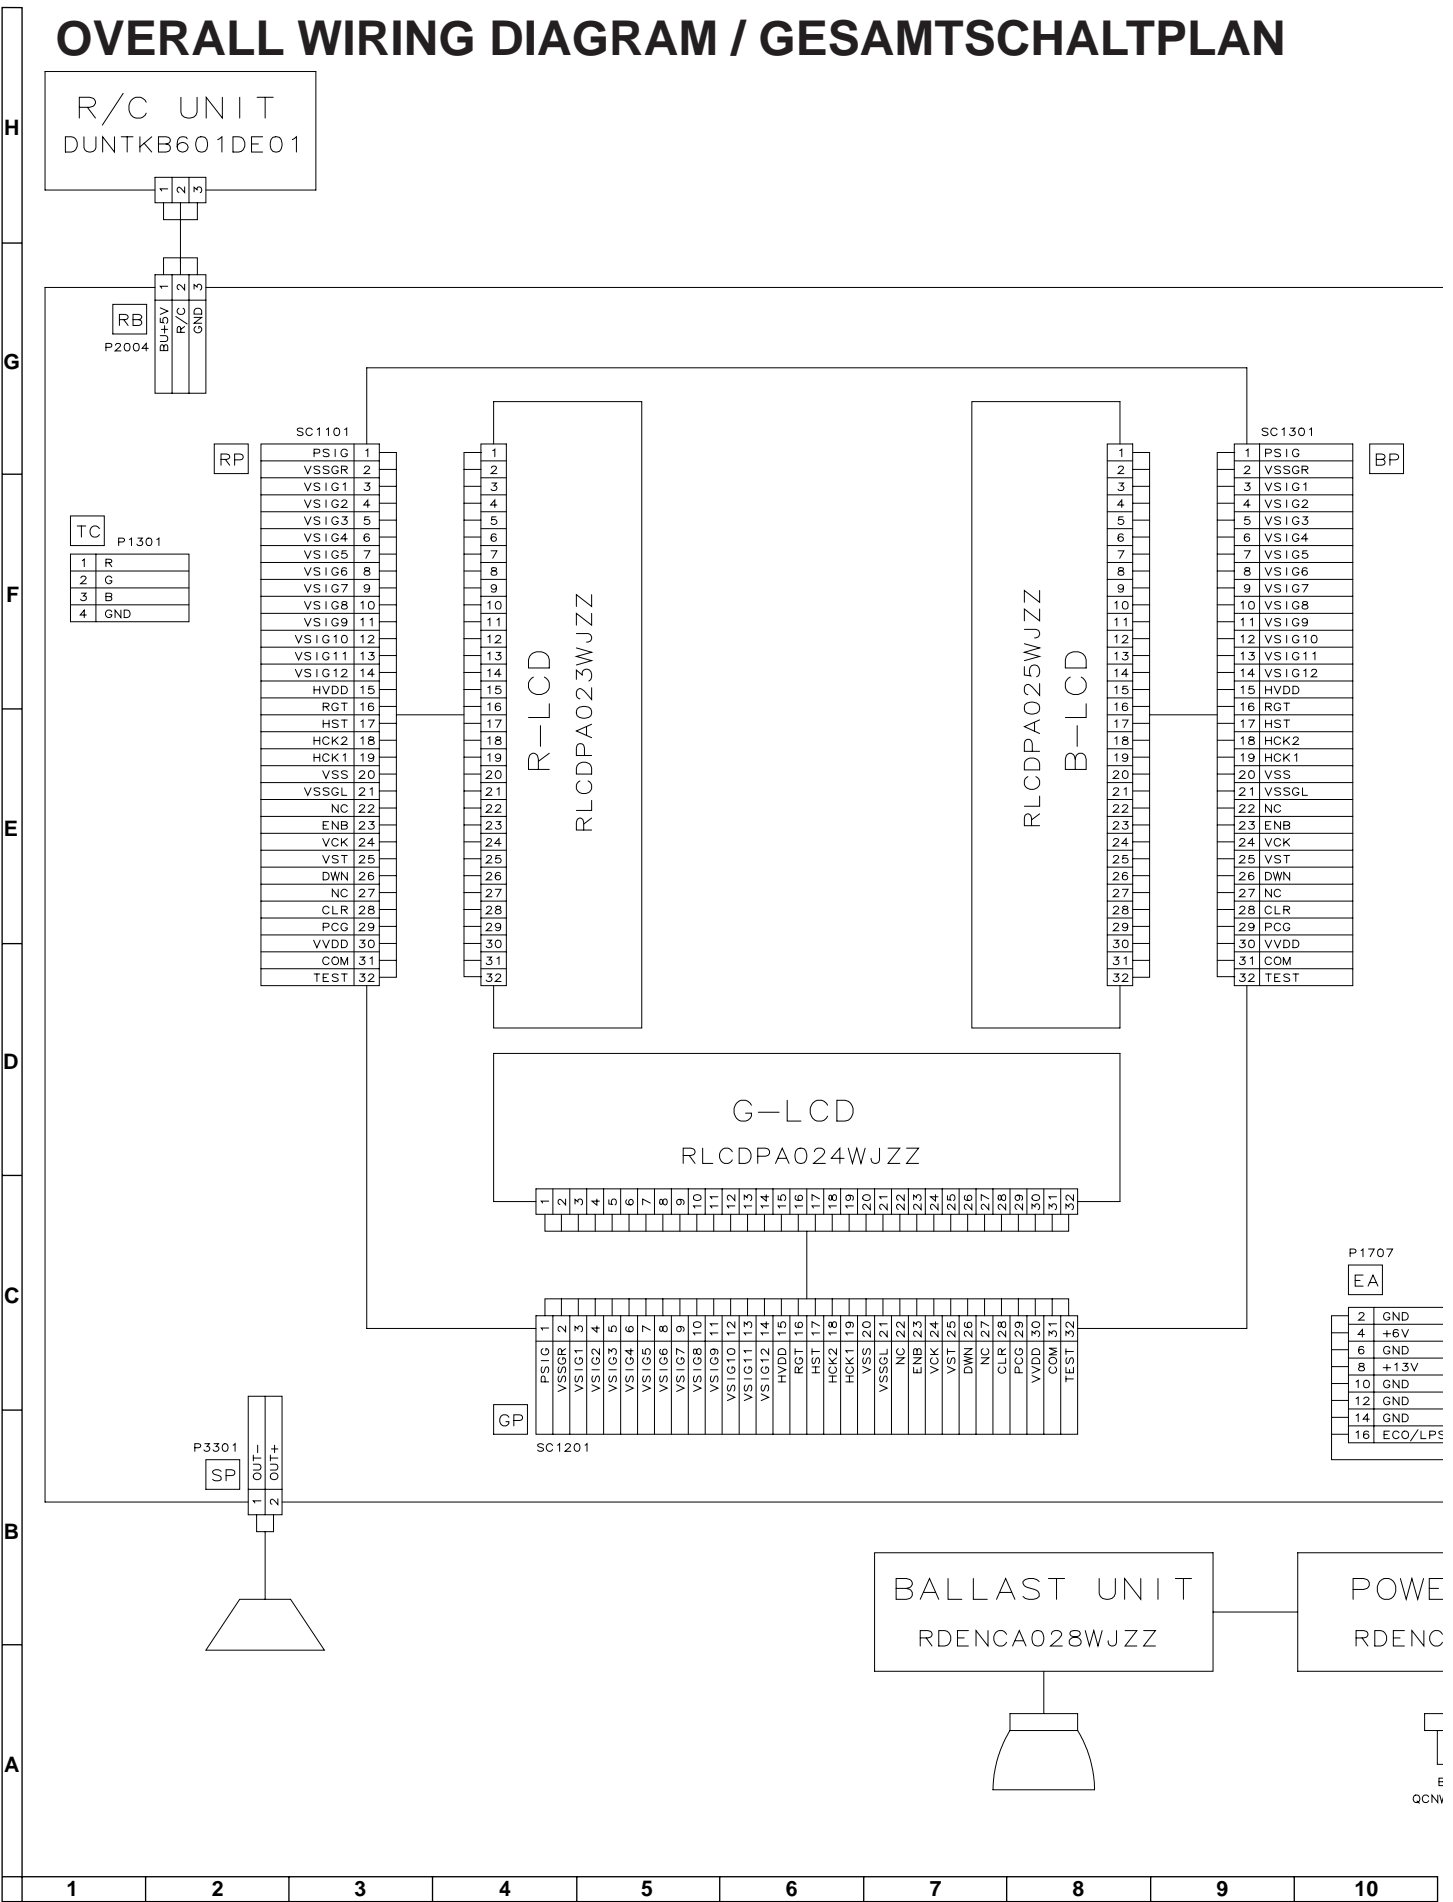

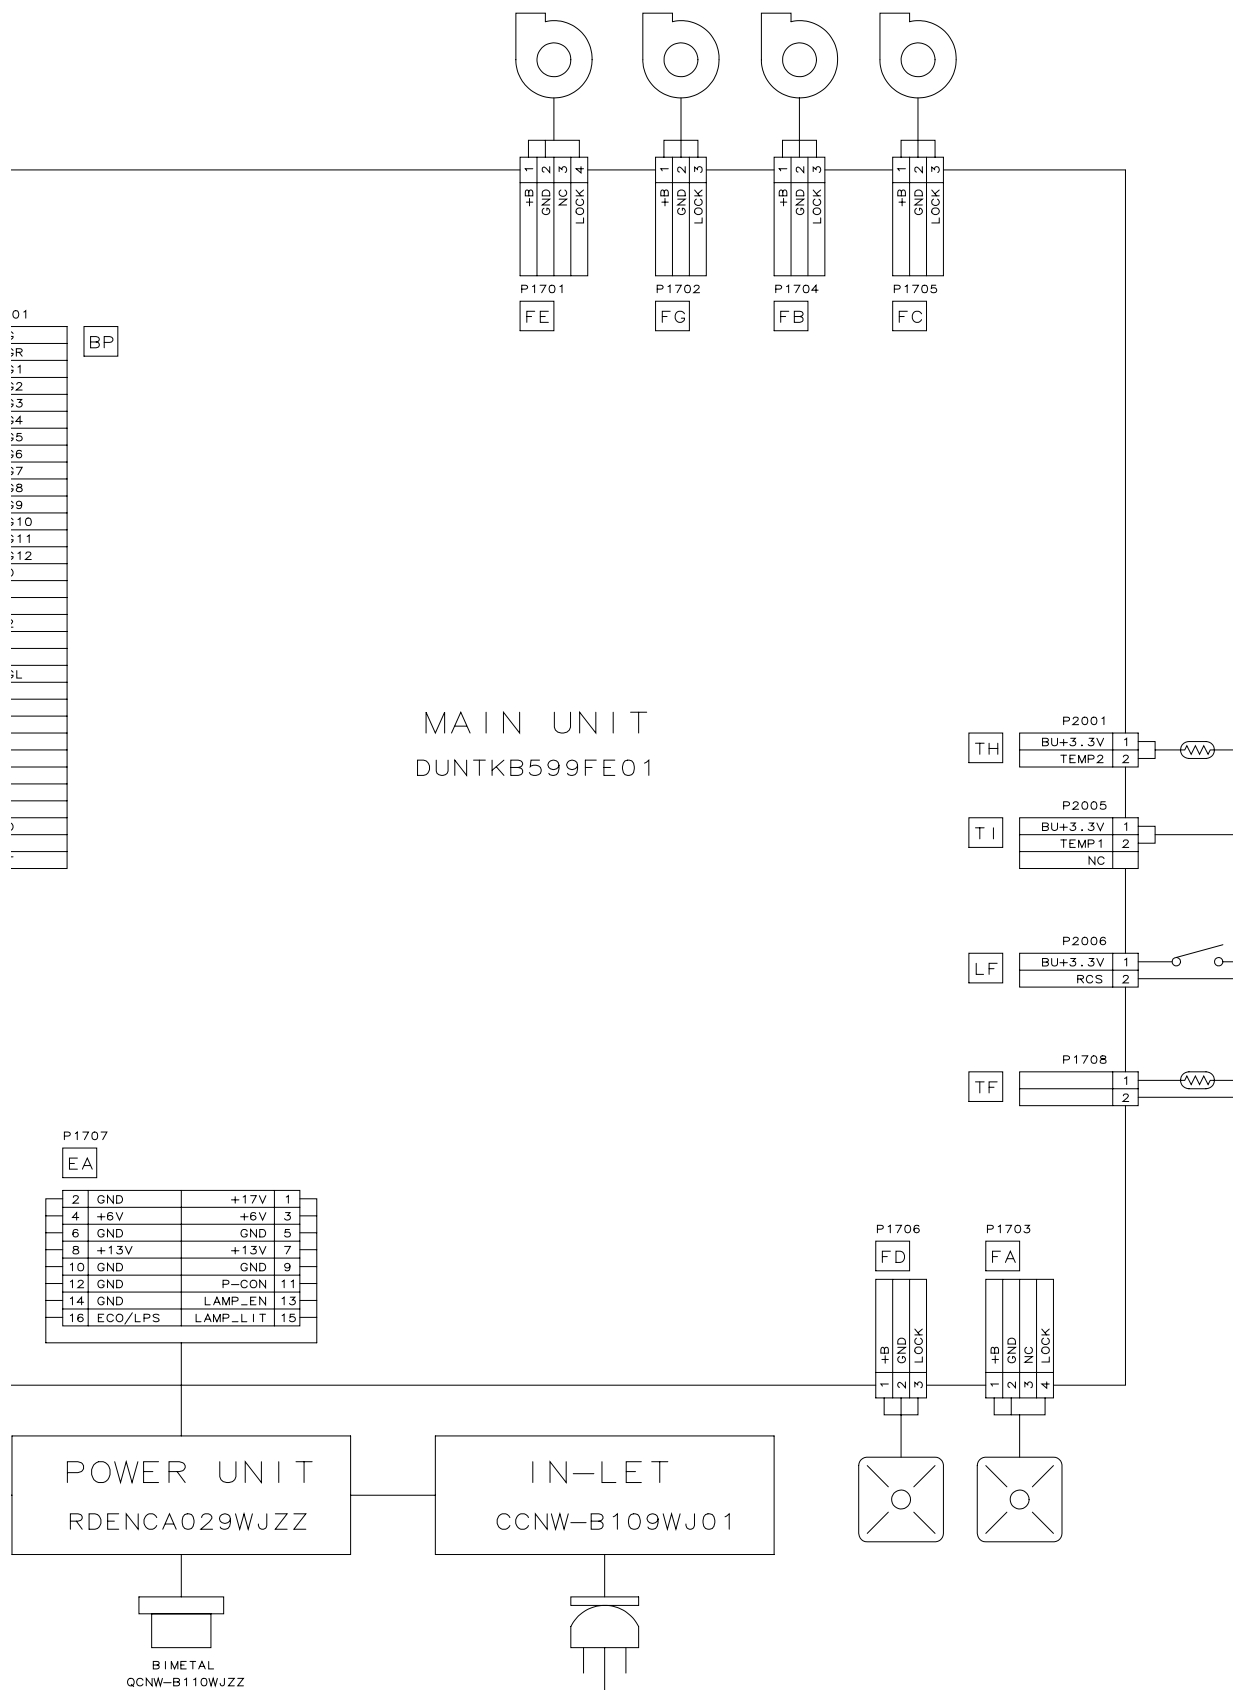

DESCRIPTION OF SCHEMATIC DIAGRAM

VOLTAGE MEASUREMENT CONDITION:

1. Voltages at test points are measured at the supply voltage of AC 220V. Signals are fed by a color bar signal generator for servicing purpose and the above voltages are measured with a 20k ohm/V tester.

WAVEFORM MEASUREMENT CONDITION:

1. Waveforms at test points are observed at the supply voltage of AC 220V. Signals are fed by a color bar signal generator for servicing purpose.

INDICATION OF RESISTOR & CAPACITOR:

RESISTOR

1. The unit of resistance "Ω" is omitted. (K=kΩ=1000 Ω, M=MΩ).
2. All resistors are ± 5%, unless otherwise noted. (J= ± 5%, F= ± 1%, D= ± 0.5%)
3. All resistors are 1/10W, unless otherwise noted.
4. All resistors are Carbon type, unless otherwise noted.

©: Solid Ⓢ: Cement
Ⓢ: Oxide Film Ⓢ: Special
Ⓢ: Metal Coating

CAPACITOR

1. All capacitors are μF, unless otherwise noted. (P=pF=μμF).
2. All capacitors are 50V, unless otherwise noted.
3. All capacitors are Ceramic type, unless otherwise noted.

(ML): Mylar (TA): Tantalum
(PF): Polypro Film (ST): Styrol

CAUTION:

This circuit diagram is original one, therefore there may be a slight difference from yours.

SAFETY NOTES:

1. **DISCONNECT THE AC PLUG FROM THE AC OUTLET BEFORE REPLACING PARTS.**
2. **SEMICONDUCTOR HEAT SINKS SHOULD BE REGARDED AS POTENTIAL SHOCK HAZARDS WHEN THE CHASSIS IS OPERATING.**

IMPORTANT SAFETY NOTICE:

PARTS MARKED WITH "⚠" () ARE IMPORTANT FOR MAINTAINING THE SAFETY OF THE SET. BE SURE TO REPLACE THESE PARTS WITH SPECIFIED ONES FOR MAINTAINING THE SAFETY AND PERFORMANCE OF THE SET.

BESCHREIBUNG DES SCHEMATISCHEN SCHALTPLANS

SPANNUNGSMESSUNGEN:

1. Spannungen an den Prüfpunkten werden bei einer Netzspannung von 220V gemessen, Signale werden für die Wartung mit einem Farbbalken-Signal generator zugeführt, und Spannungen werden mit einem Meßinstrument (20 kΩ/V) ermittelt.

SIGNALFORMMESSUNGEN:

1. Die Wellenformen an den Testpunkten werden bei einer Netzspannung von 220V verfolgt. Signale werden für die Wartung mit einem Farbbalken-Signal generator zugeführt.

BEZEICHNUNG DES WIDERSTANDS UND KONDENSATORS:

WIDERSTAND

1. Die Widerstandseinheit "Ω" wird weggelassen. (K=kΩ=1000 Ω, M=MΩ)
2. Alle Widerstände haben ± 5%, sofern nicht anders angegeben. (J= ± 5%, F= ± 1%, D= ± 0.5%)
3. Alle Widerstände haben 1/10W, sofern nicht anders angegeben.
4. Alle Widerstände sind Kohletyp, sofern nicht anders angegeben.

©: Solid Ⓢ: Cement
Ⓢ: Oxide Film Ⓢ: Special
Ⓢ: Metal Coating

KONDENSATOR

1. Die Kapazitätseinheit ist μF, sofern nicht anders angegeben. (P=pF=μμF).
2. Alle Kondensatoren haben 50V, sofern nicht anders angegeben.
3. Alle Kondensatoren sind Keramiktyp, sofern nicht anders angegeben.

(ML): Mylar (TA): Tantal
(PF): Polyprofil (ST): Styrol

ACHTUNG:

Bei diesem Schaltplan handelt es sich um den ursprünglichen. Es können daher geringfügige Unterschiede zu dem Ihrem bestehen.


SICHERHEITSANMERKUNGEN:

1. **VOR DEM AUSWECHSELN VON TEILEN MUSS UNBEDINGT NETZSTECKER AUS DER NETZSTECKDOSE GEZOGEN WERDEN.**
2. **DIE WARMEABLEITER DER HALBLEITER SOLLTEN BEIM BETRIEB DES CHASSIS ALS MÖGLICHE URSACHEN VON GEFÄHRLICHEN ELEKTRISCHEN SCHLÄGEN BETRACHTET WERDEN.**


WICHTIGE SICHERHEITSANMERKUNGEN:

MIT "⚠" () BEZEICHNETEN TEILE SIND BESONDERS WICHTIG FÜR DIE AUFRECHTERHALTUNG DER SICHERHEIT. BEIM WECHSELN DER TEILE SOLLTEN DIE VORGESCHRIEBENEN TEILE IMMER VERWENDET WERDEN, UM SOWOHL DIE SICHERHEIT ALS AUCH DIE LEISTUNG DES GERÄTES AUFRECHTZUERHALTEN.


WAVEFORMS / WELLENFORMEN

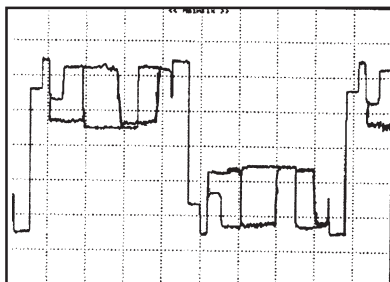


① RTP(P1301-1)
H:5 μ sec/div
V:2V/div

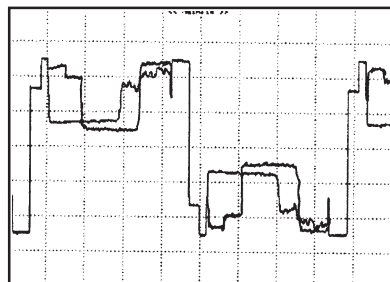


② GTP(P1301-2)
H:5 μ sec/div
V:2V/div

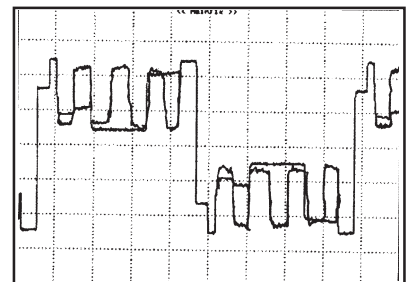


③ BTP(P1301-3)
H:5 μ sec/div
V:2V/div

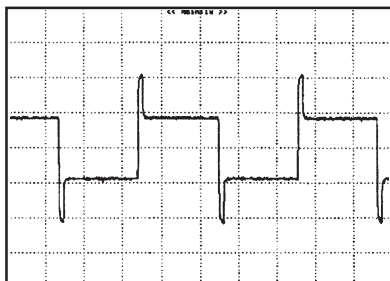


④ P-SIG(TP1101)
H:10 μ sec/div
V:2V/div

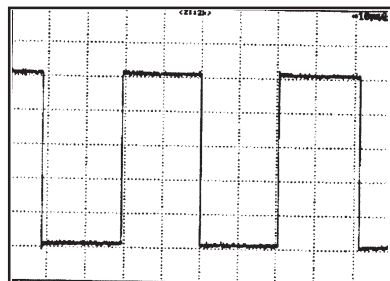


⑤ VST(IC2604-12)
H:10 μ sec/div
V:1V/div

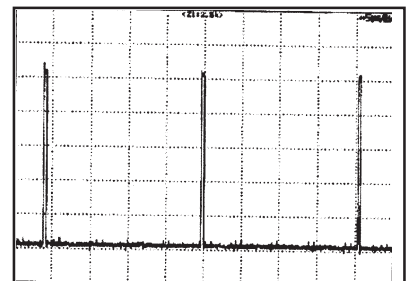


⑥ HST10(IC2604-17)
H:5 μ sec/div
V:1V/div

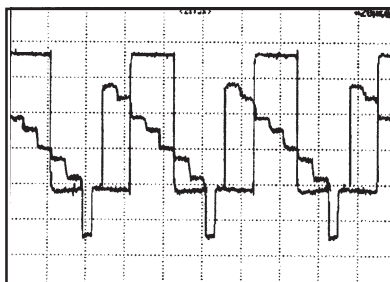

⑦ Y(IC3506-25)
H:20 μ sec/div
V:0.2V/div

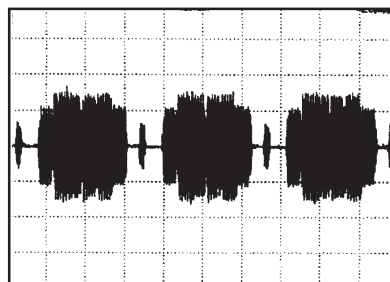



⑧ C(IC3506-27)
H:20 μ sec/div
V:0.2V/div

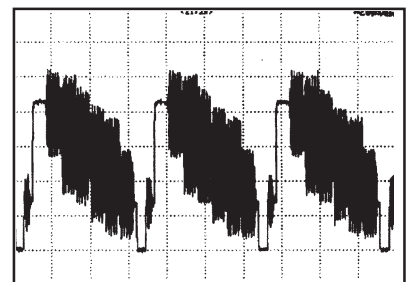

⑨ Video(J402-2)
H:20 μ sec/div
V:0.2V/div

■ MAIN UNIT / HAUPTTEINHEIT-1/12

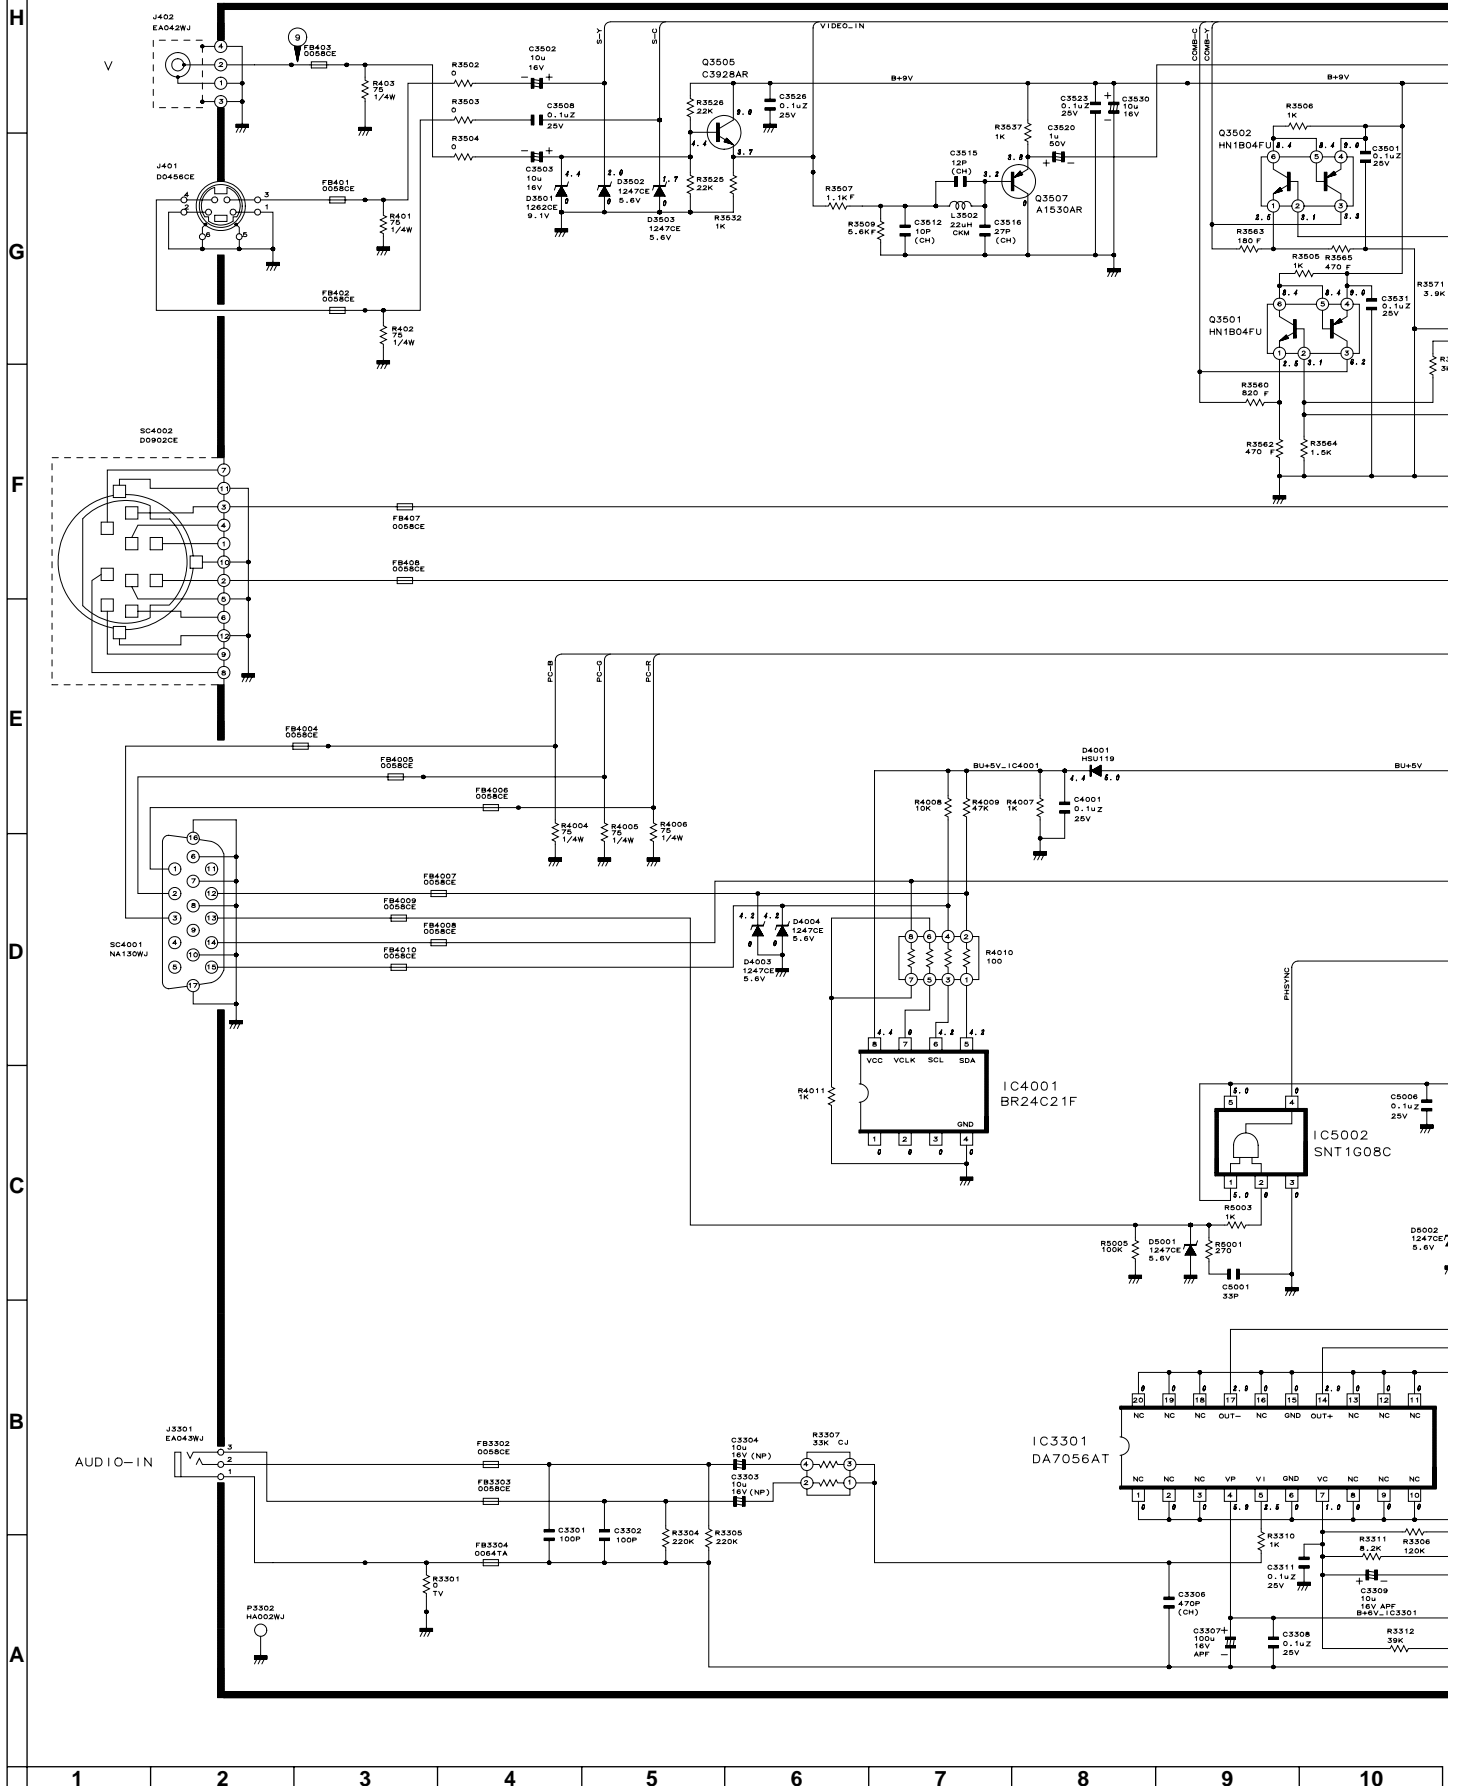

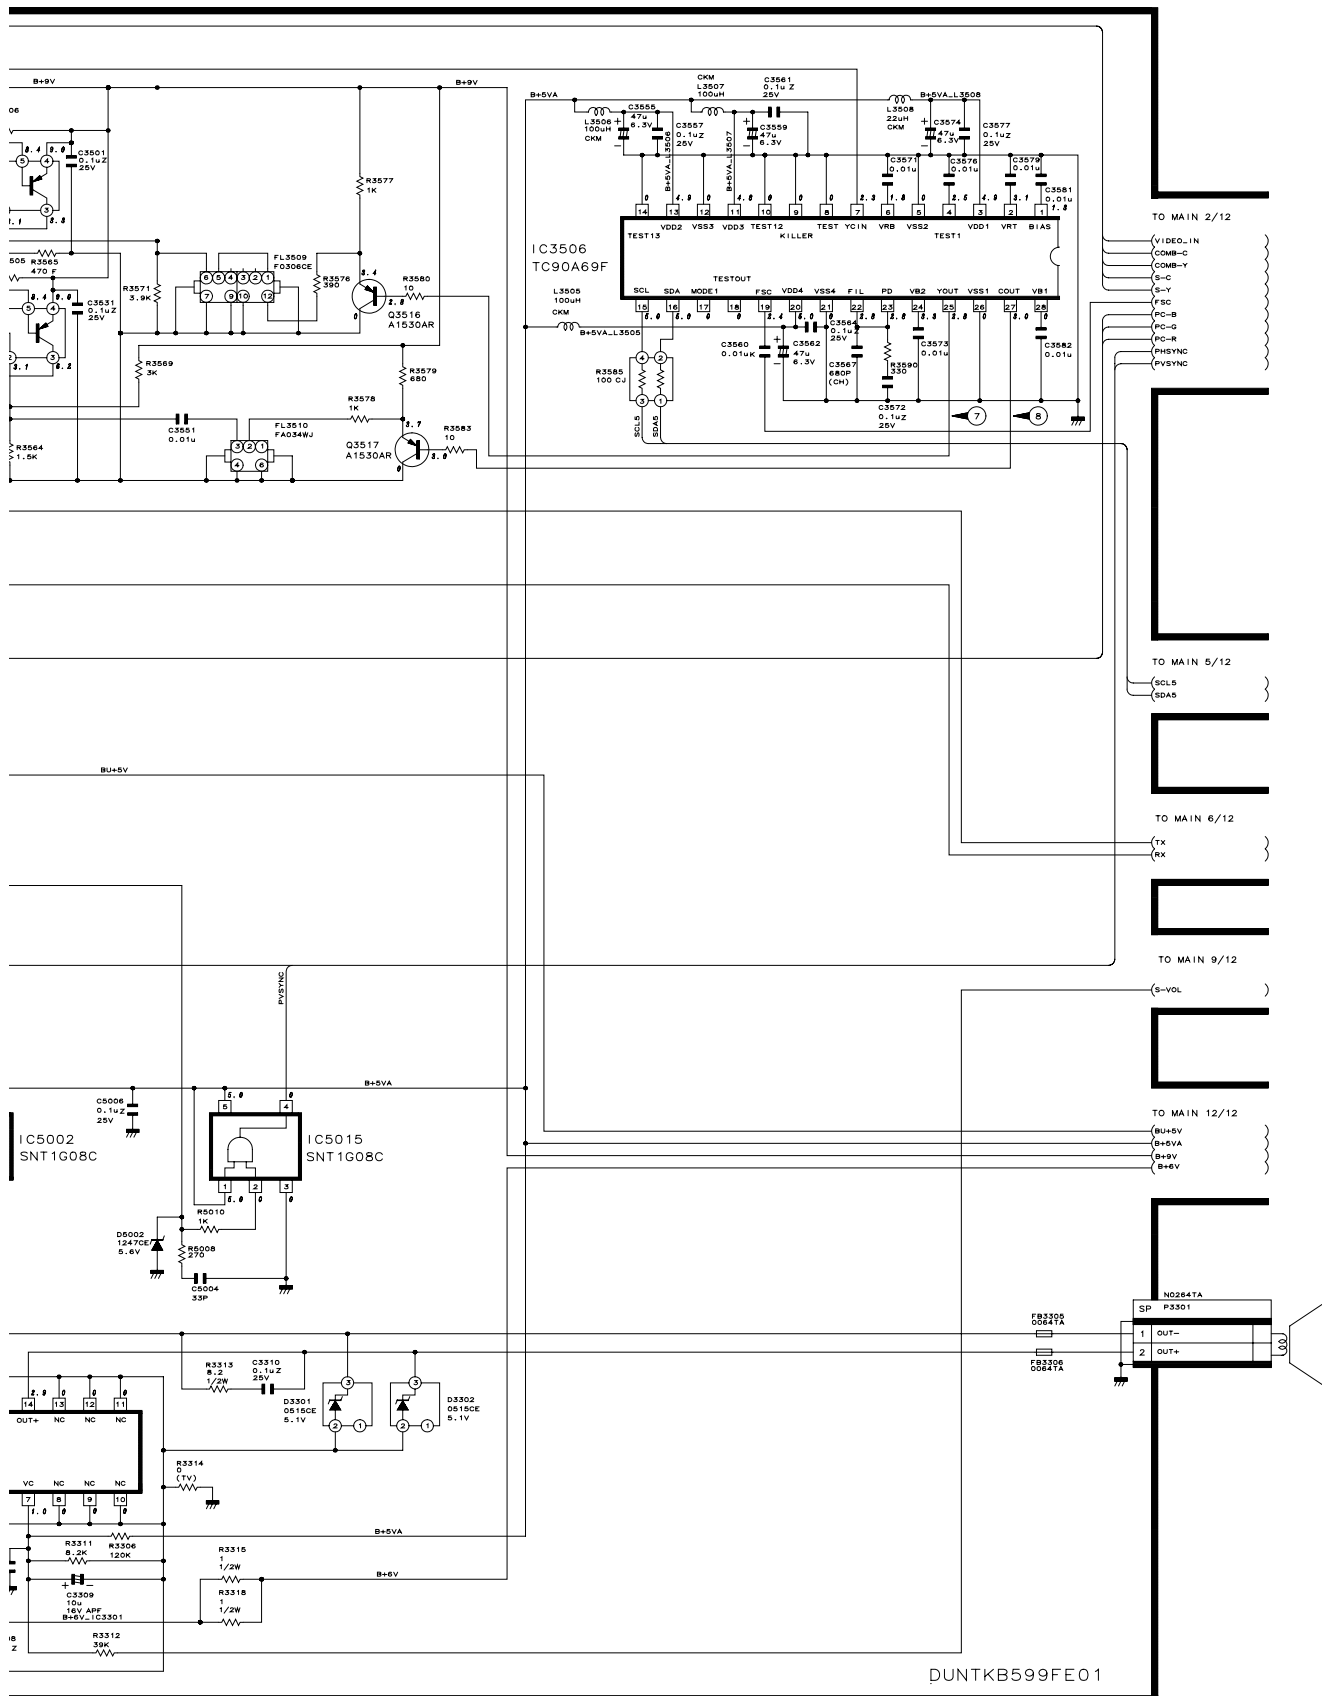

10	11	12	13	14	15	16	17	18	19
----	----	----	----	----	----	----	----	----	----



81

■ MAIN UNIT / HAUPTTEINHEIT-3/12

H

G

F

E

D


C


B

A

TO MAIN 2/12

(
SYNCR
GBLKSPL
VHS
PHSYNC
PVSYNCR

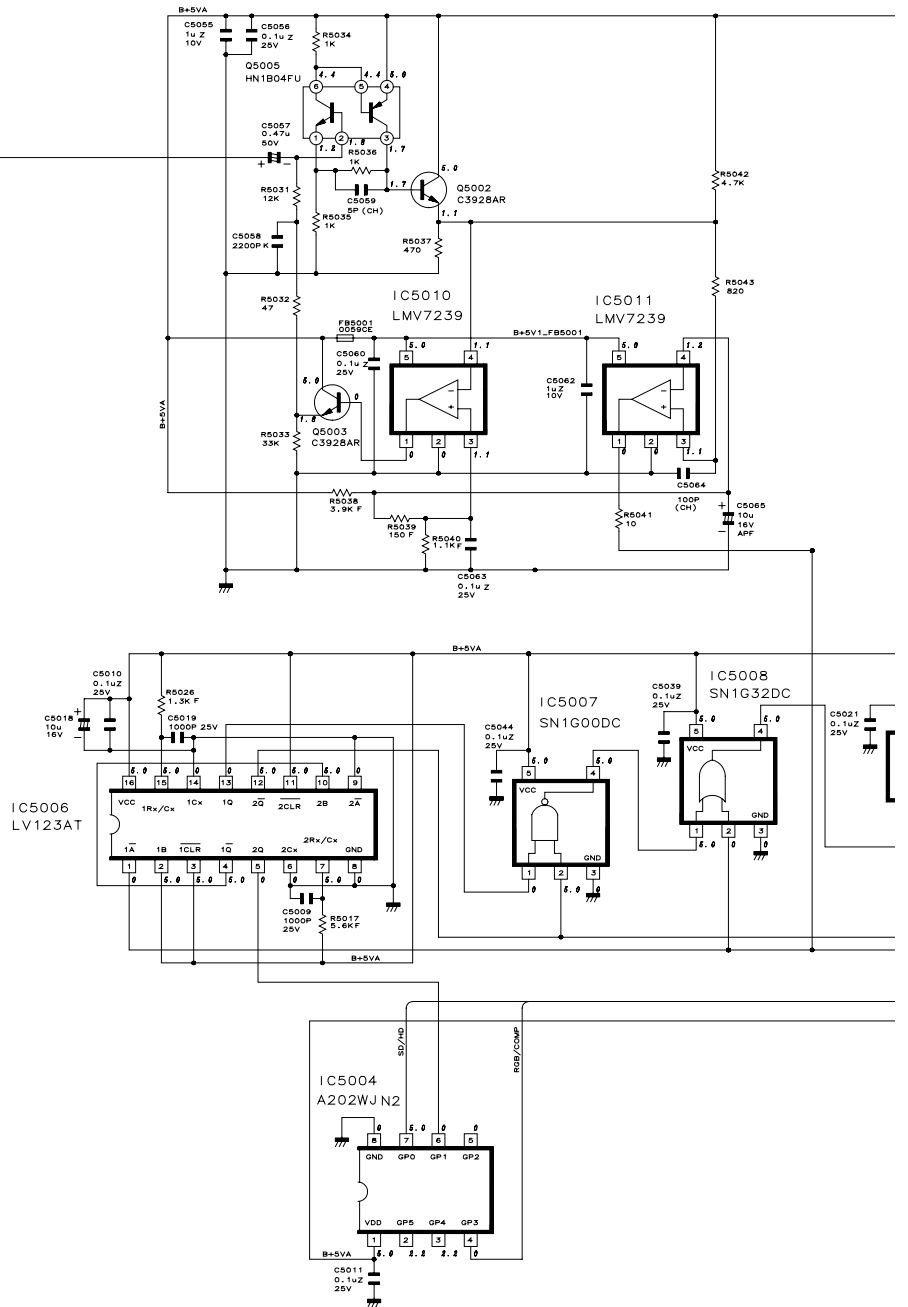


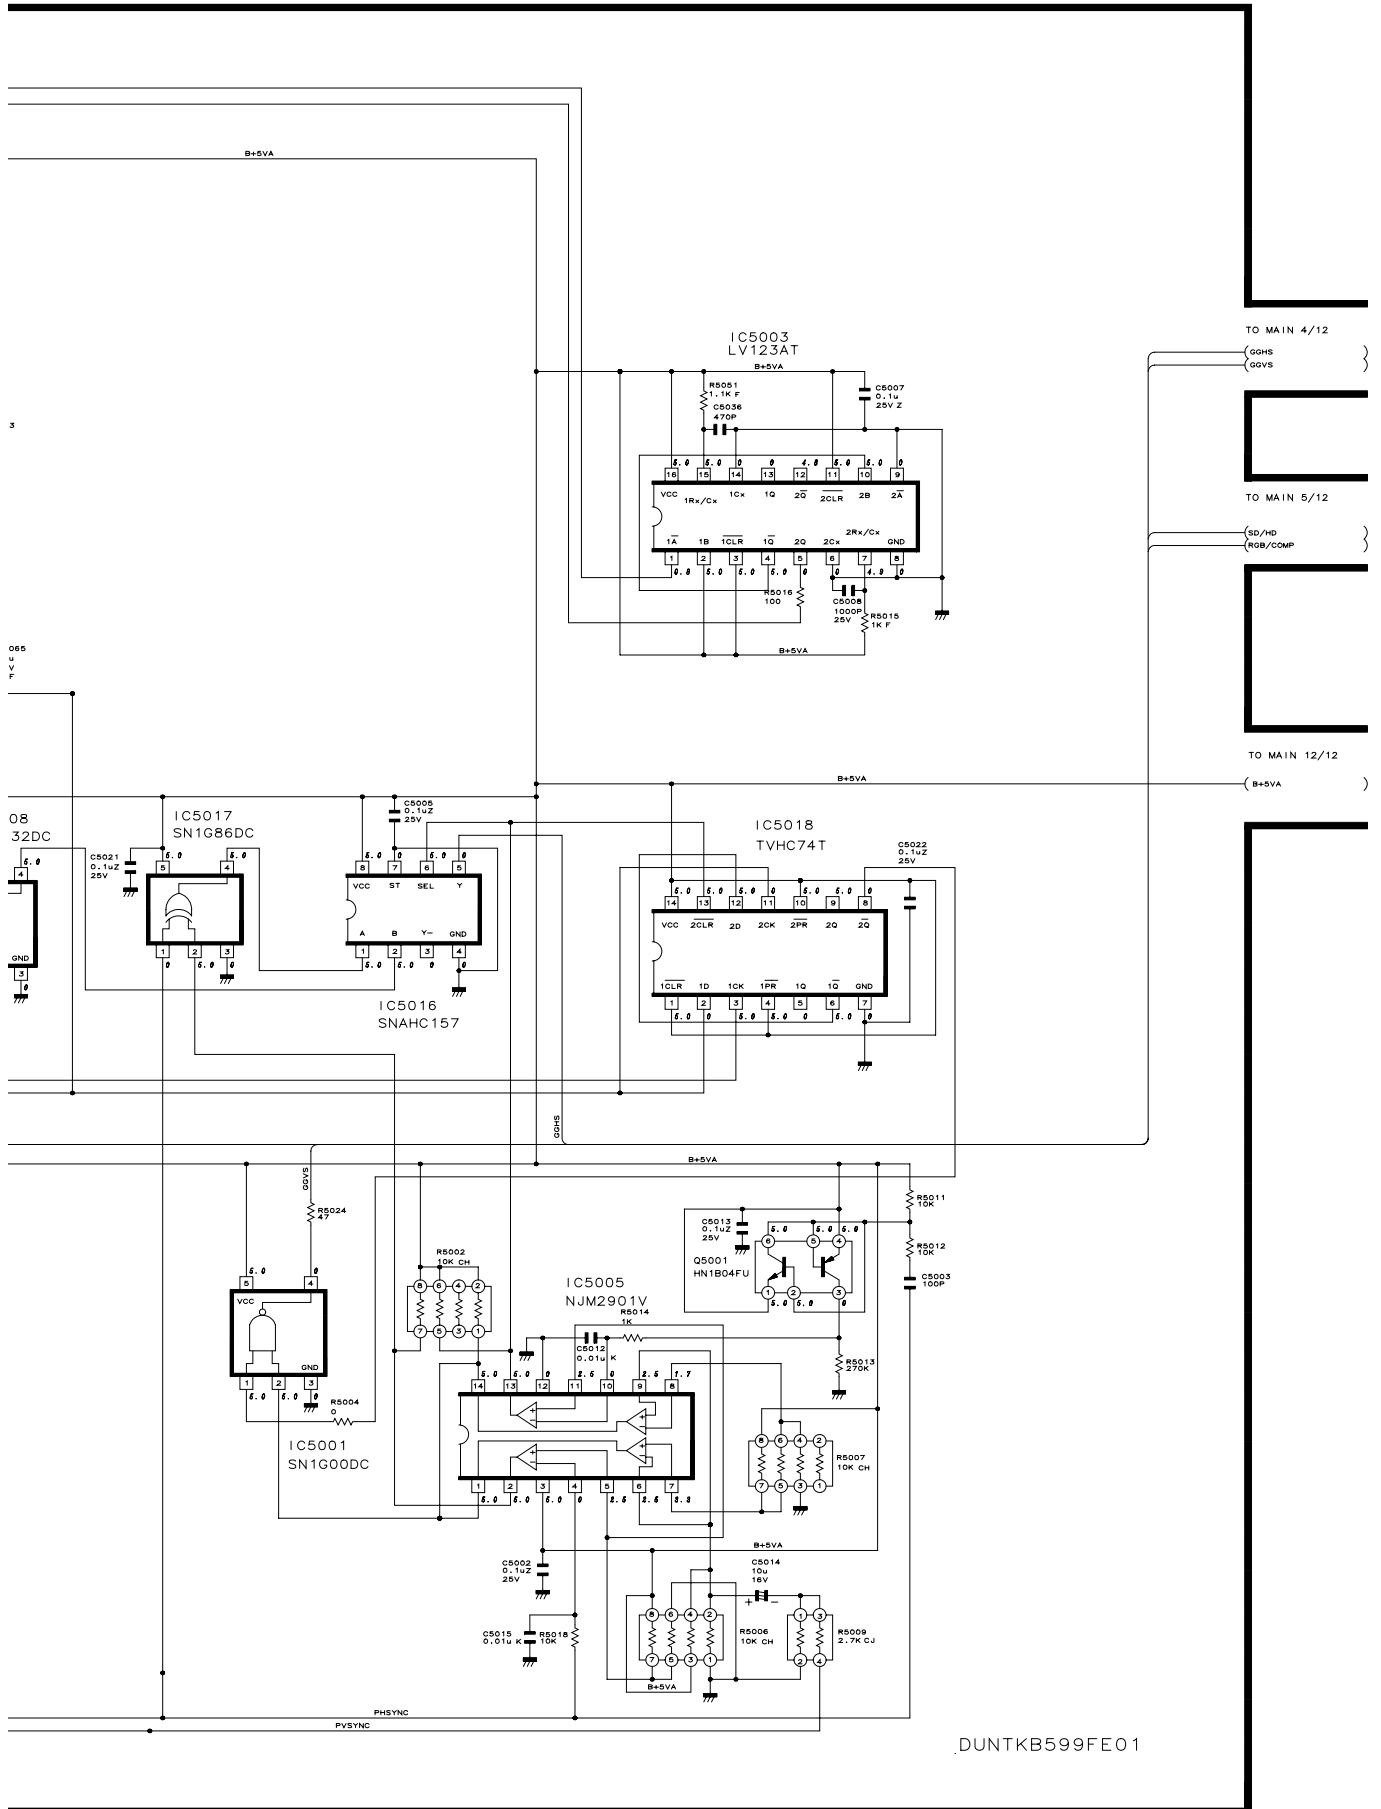


_DUNTKB599FE01

■ MAIN UNIT / HAUPTTEINHEIT-4/12


DUNTKB599FE01

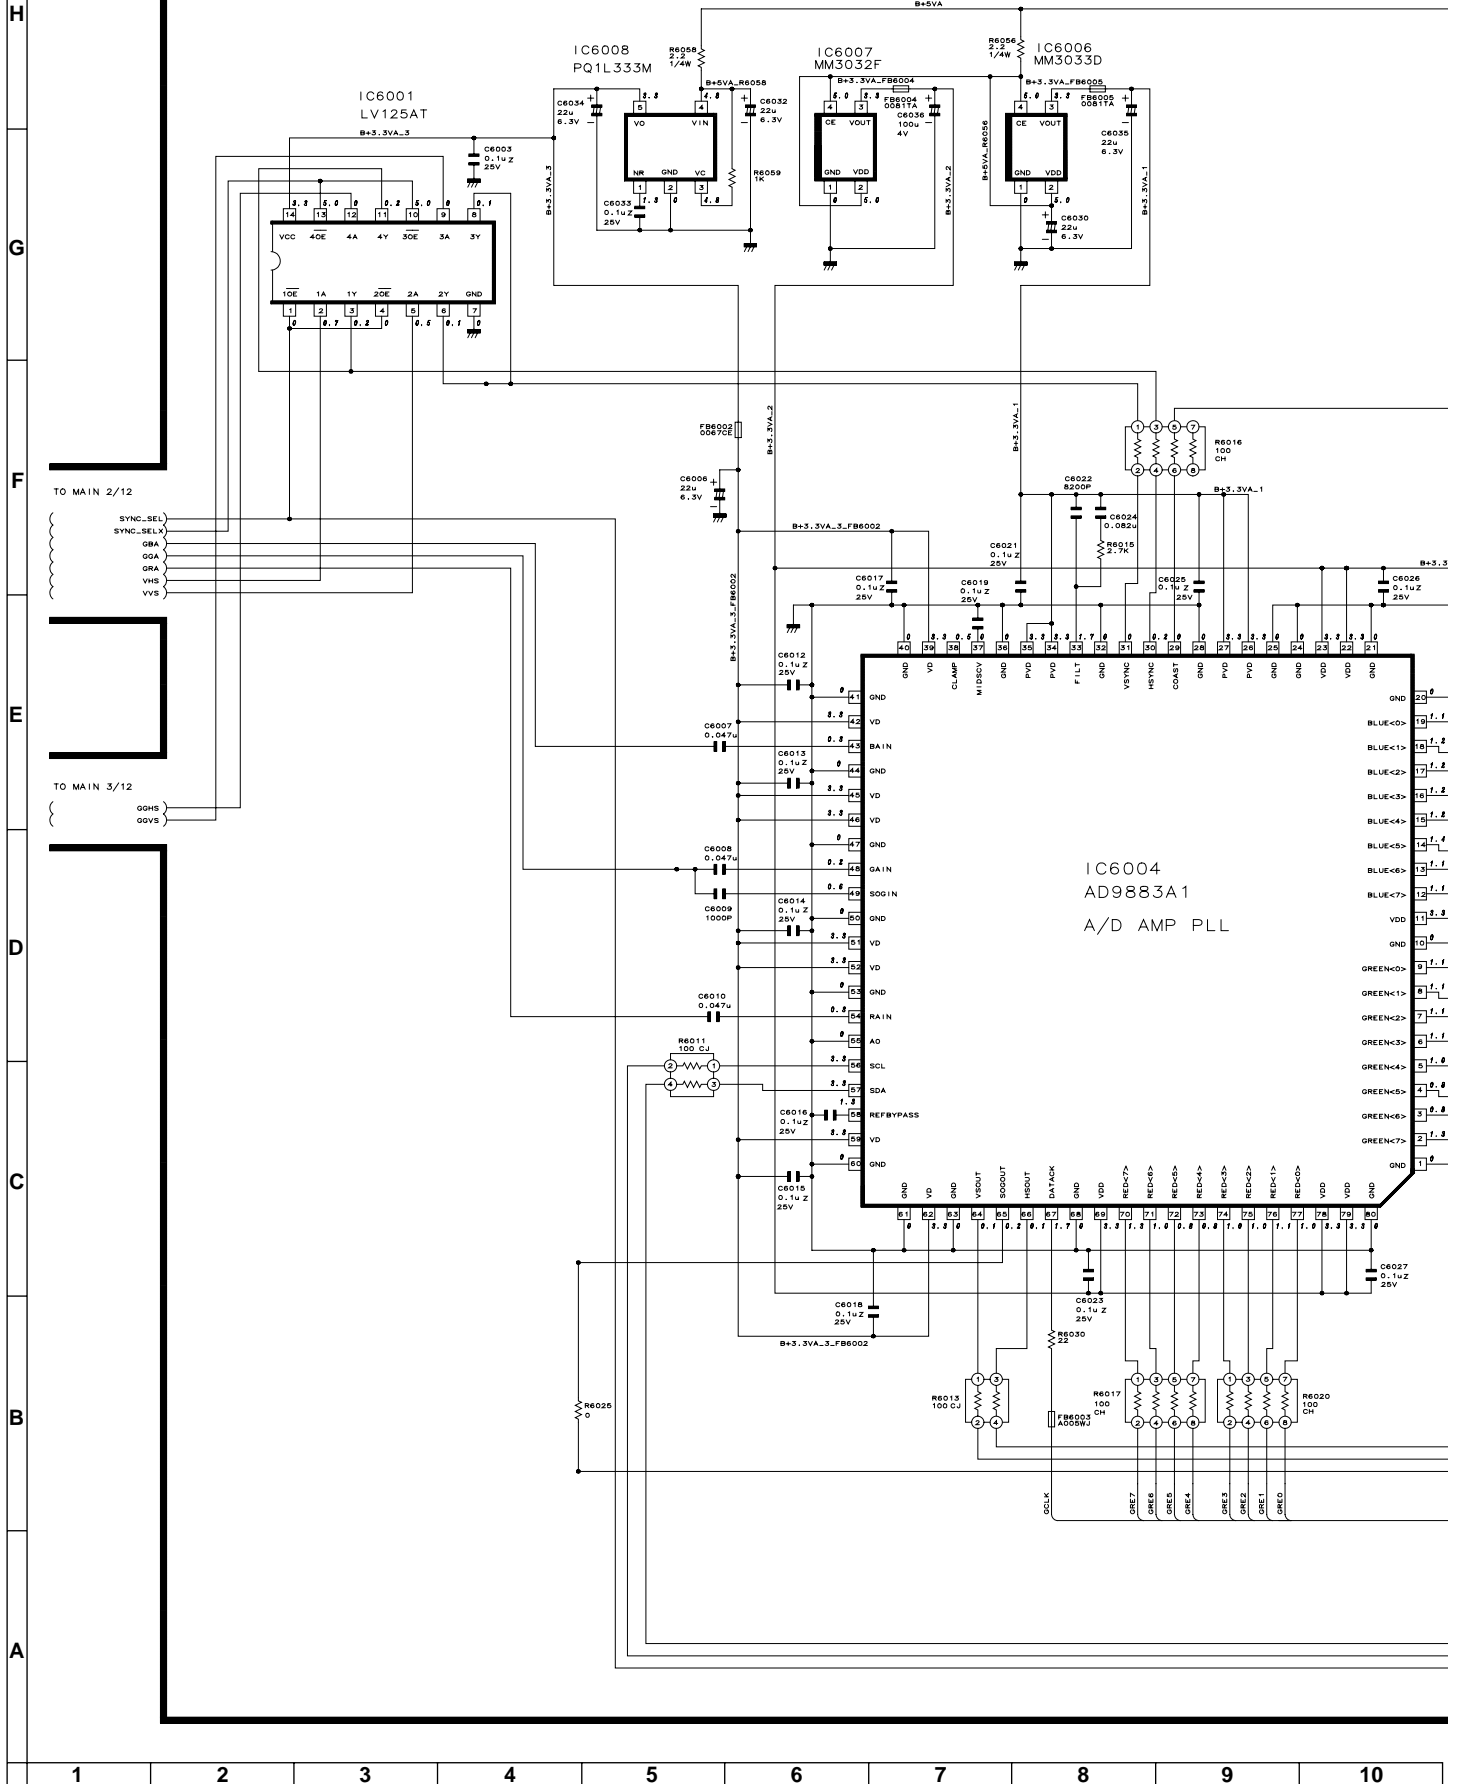


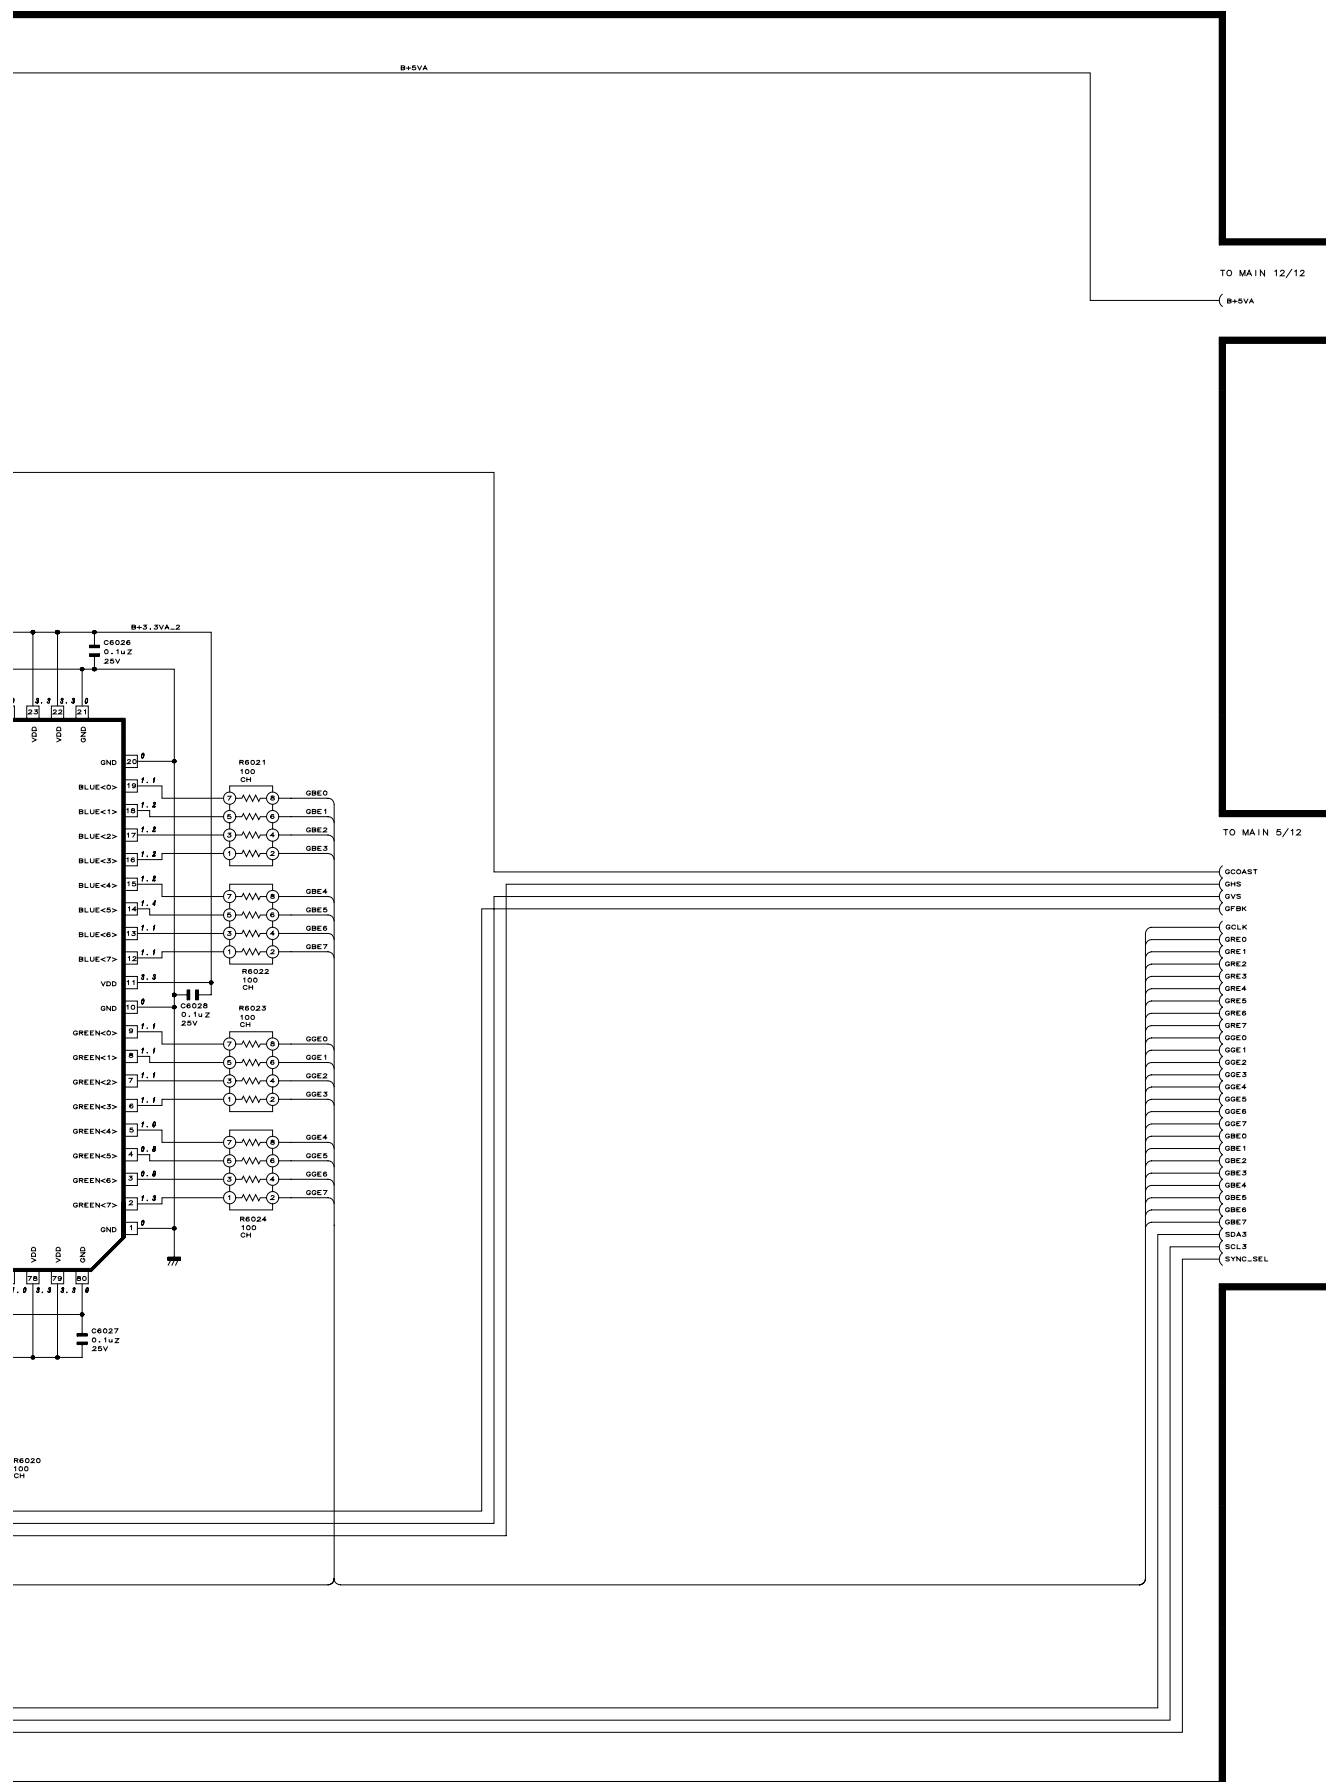

10	11	12	13	14	15	16	17	18	19
----	----	----	----	----	----	----	----	----	----


■ MAIN UNIT / HAUPT EINHEIT-5/12

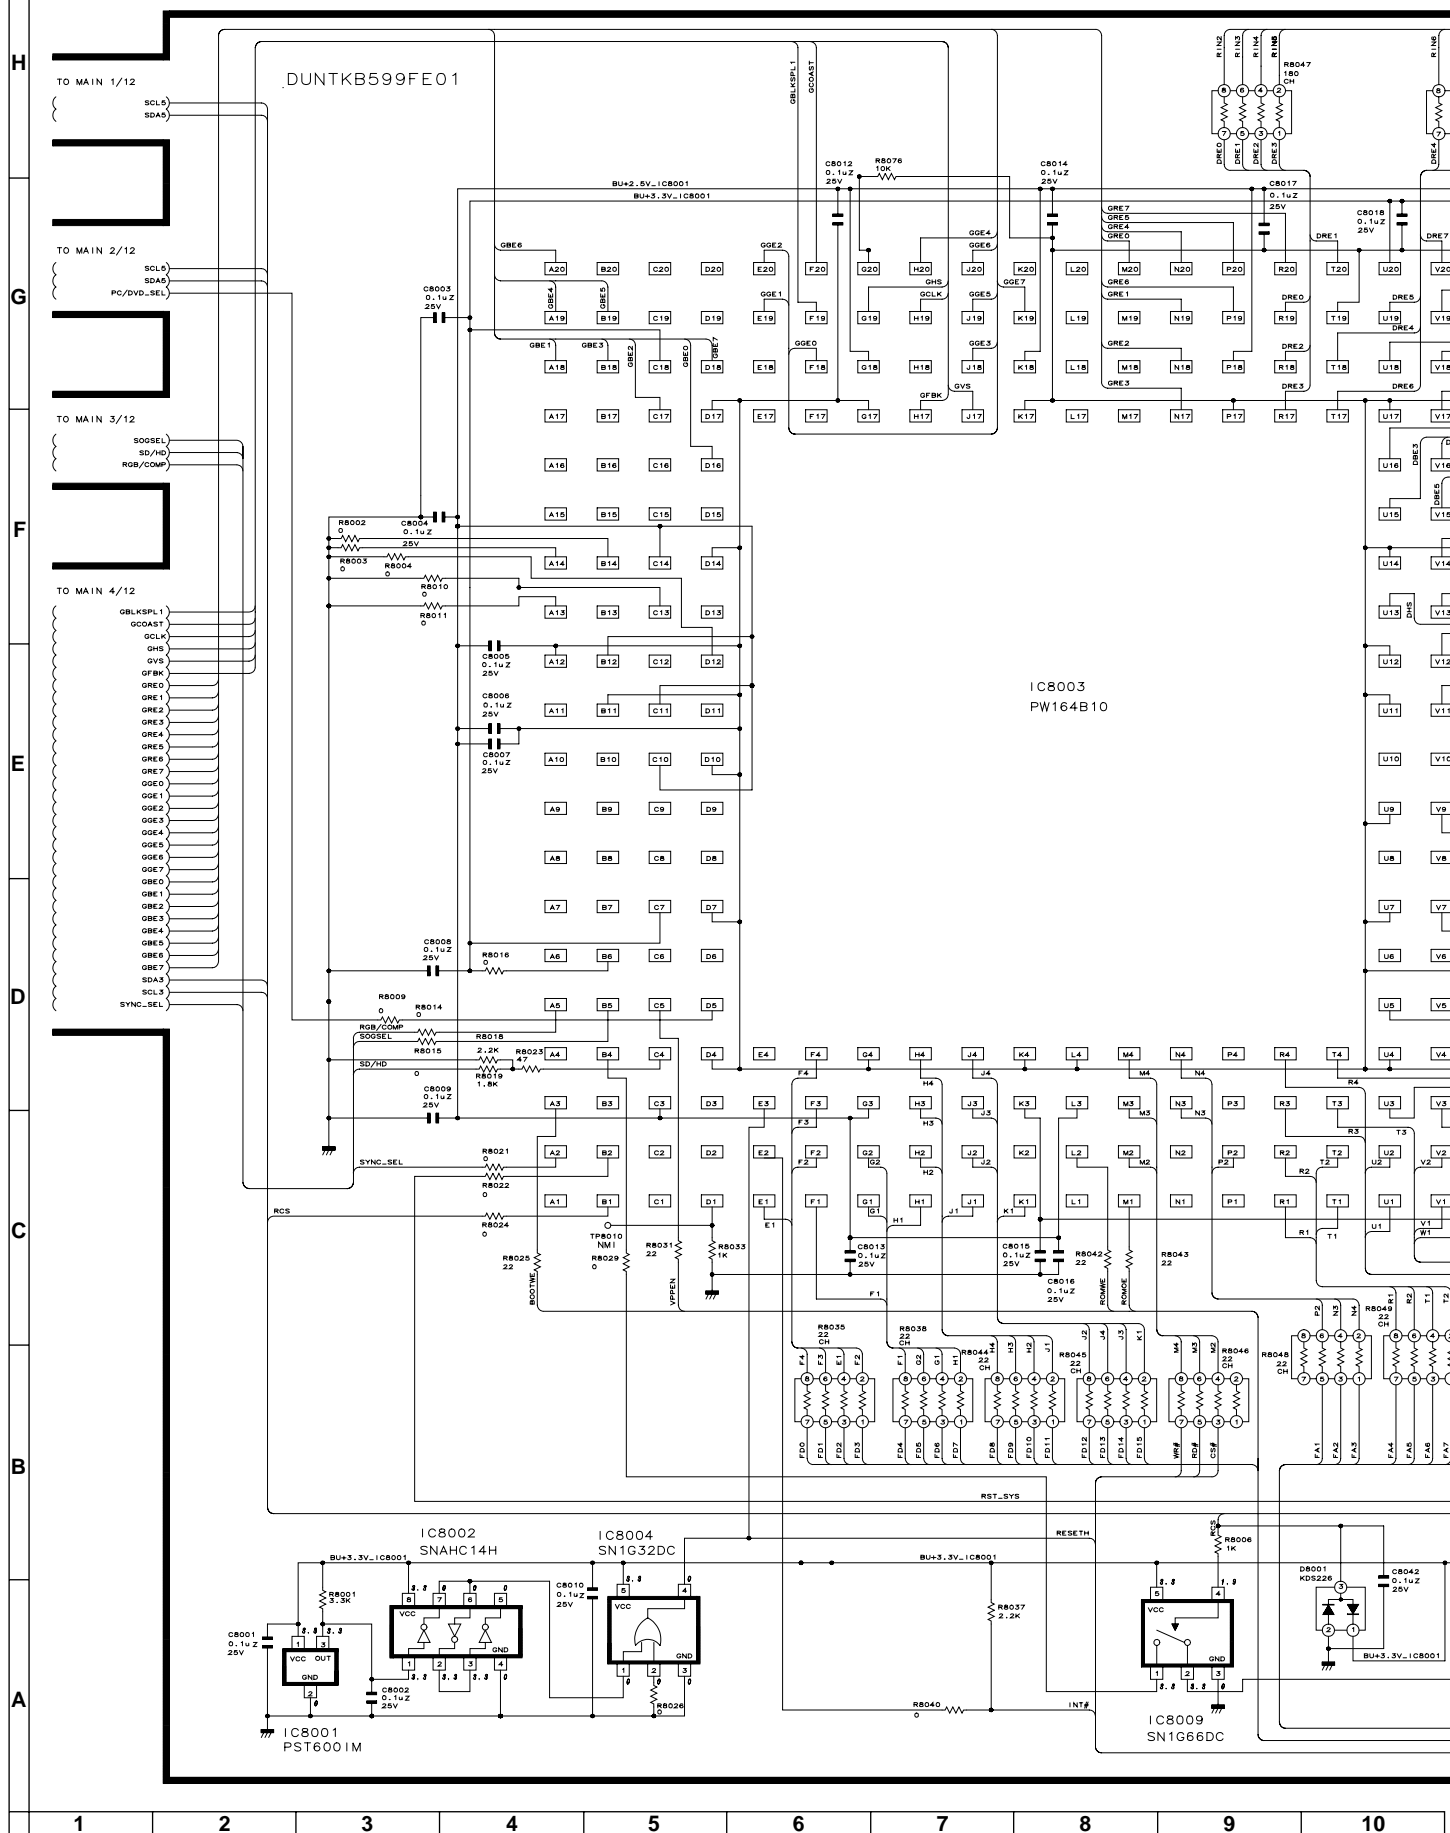


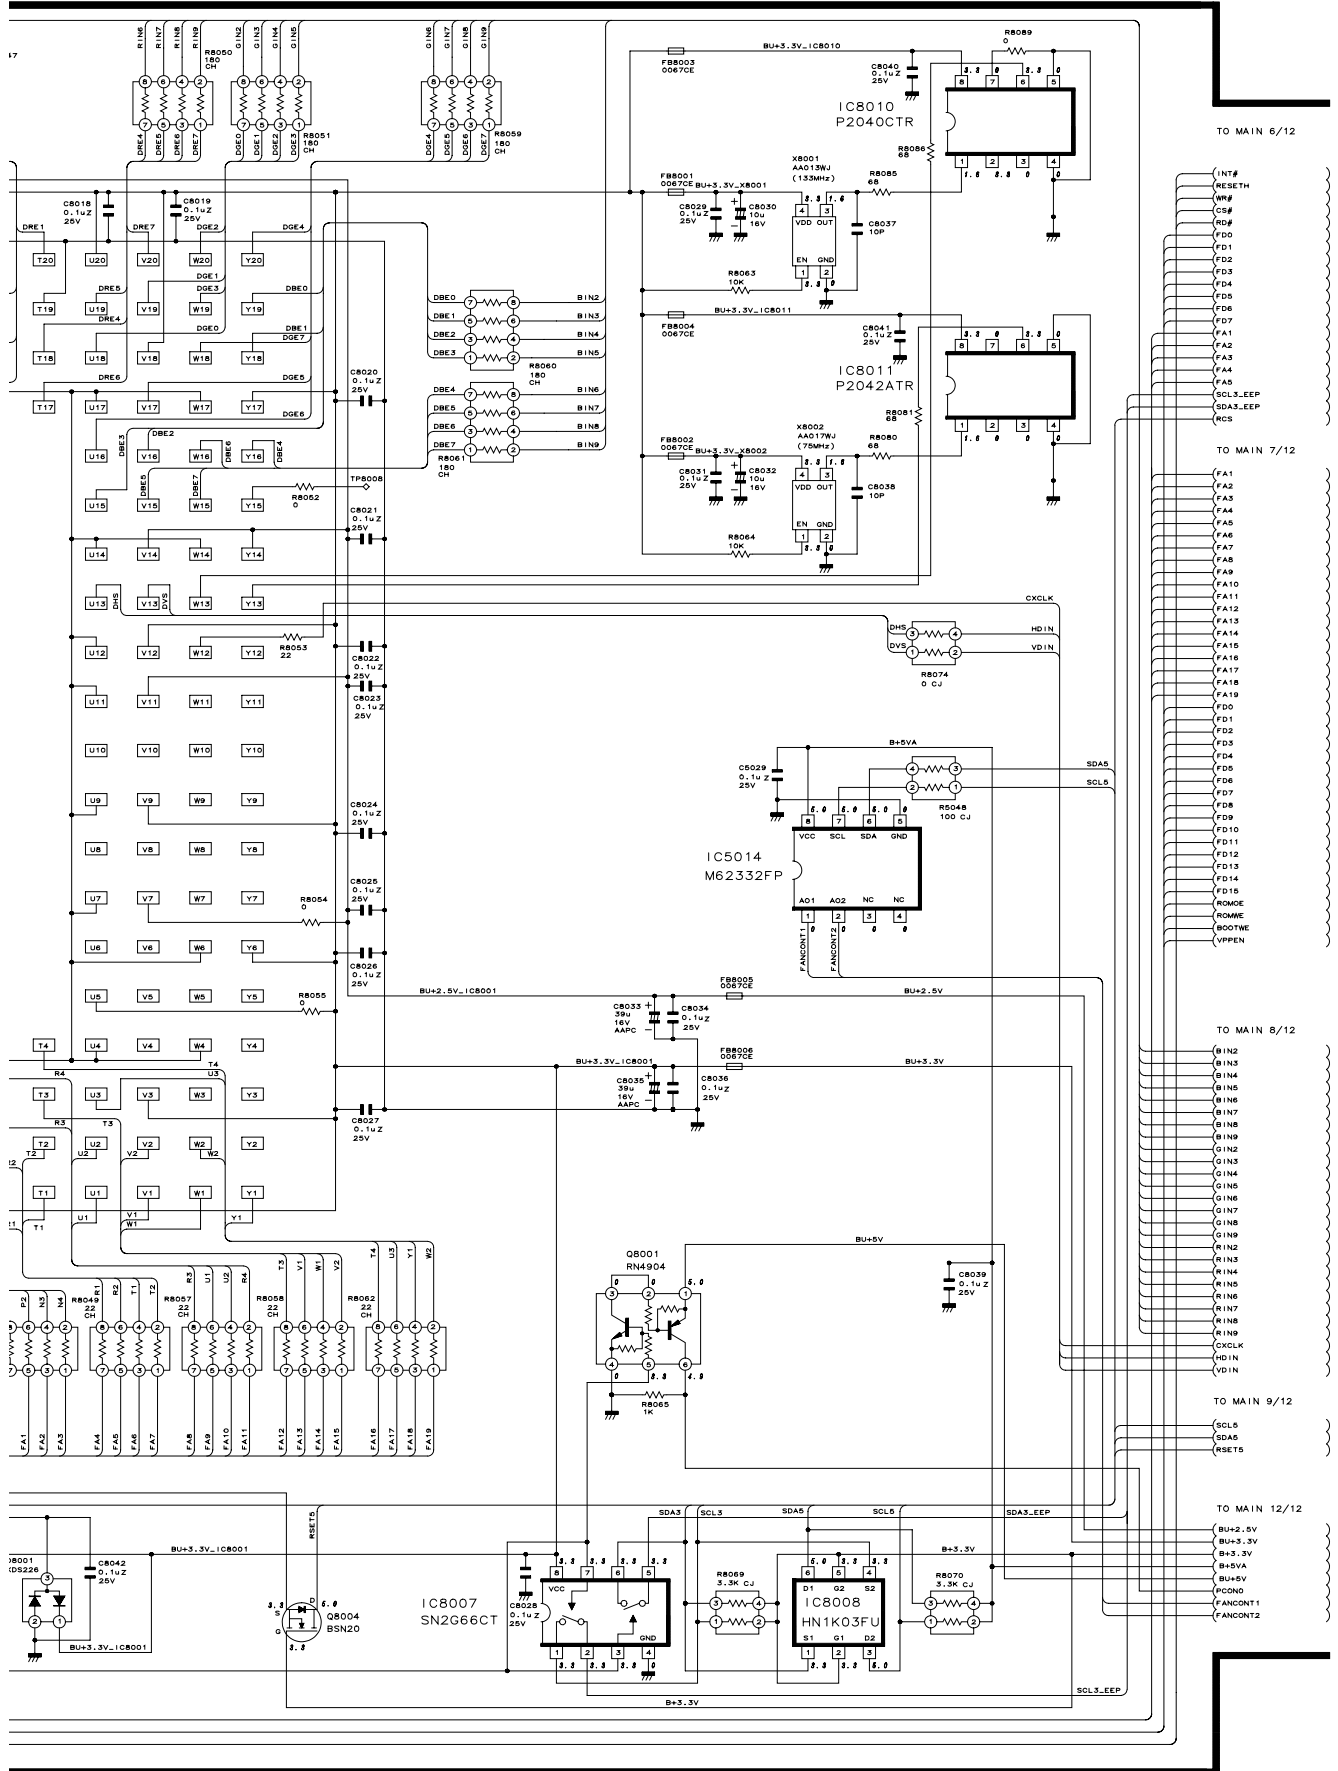


10	11	12	13	14	15	16	17	18	19
----	----	----	----	----	----	----	----	----	----

■ MAIN UNIT / HAUPT EINHEIT-6/12

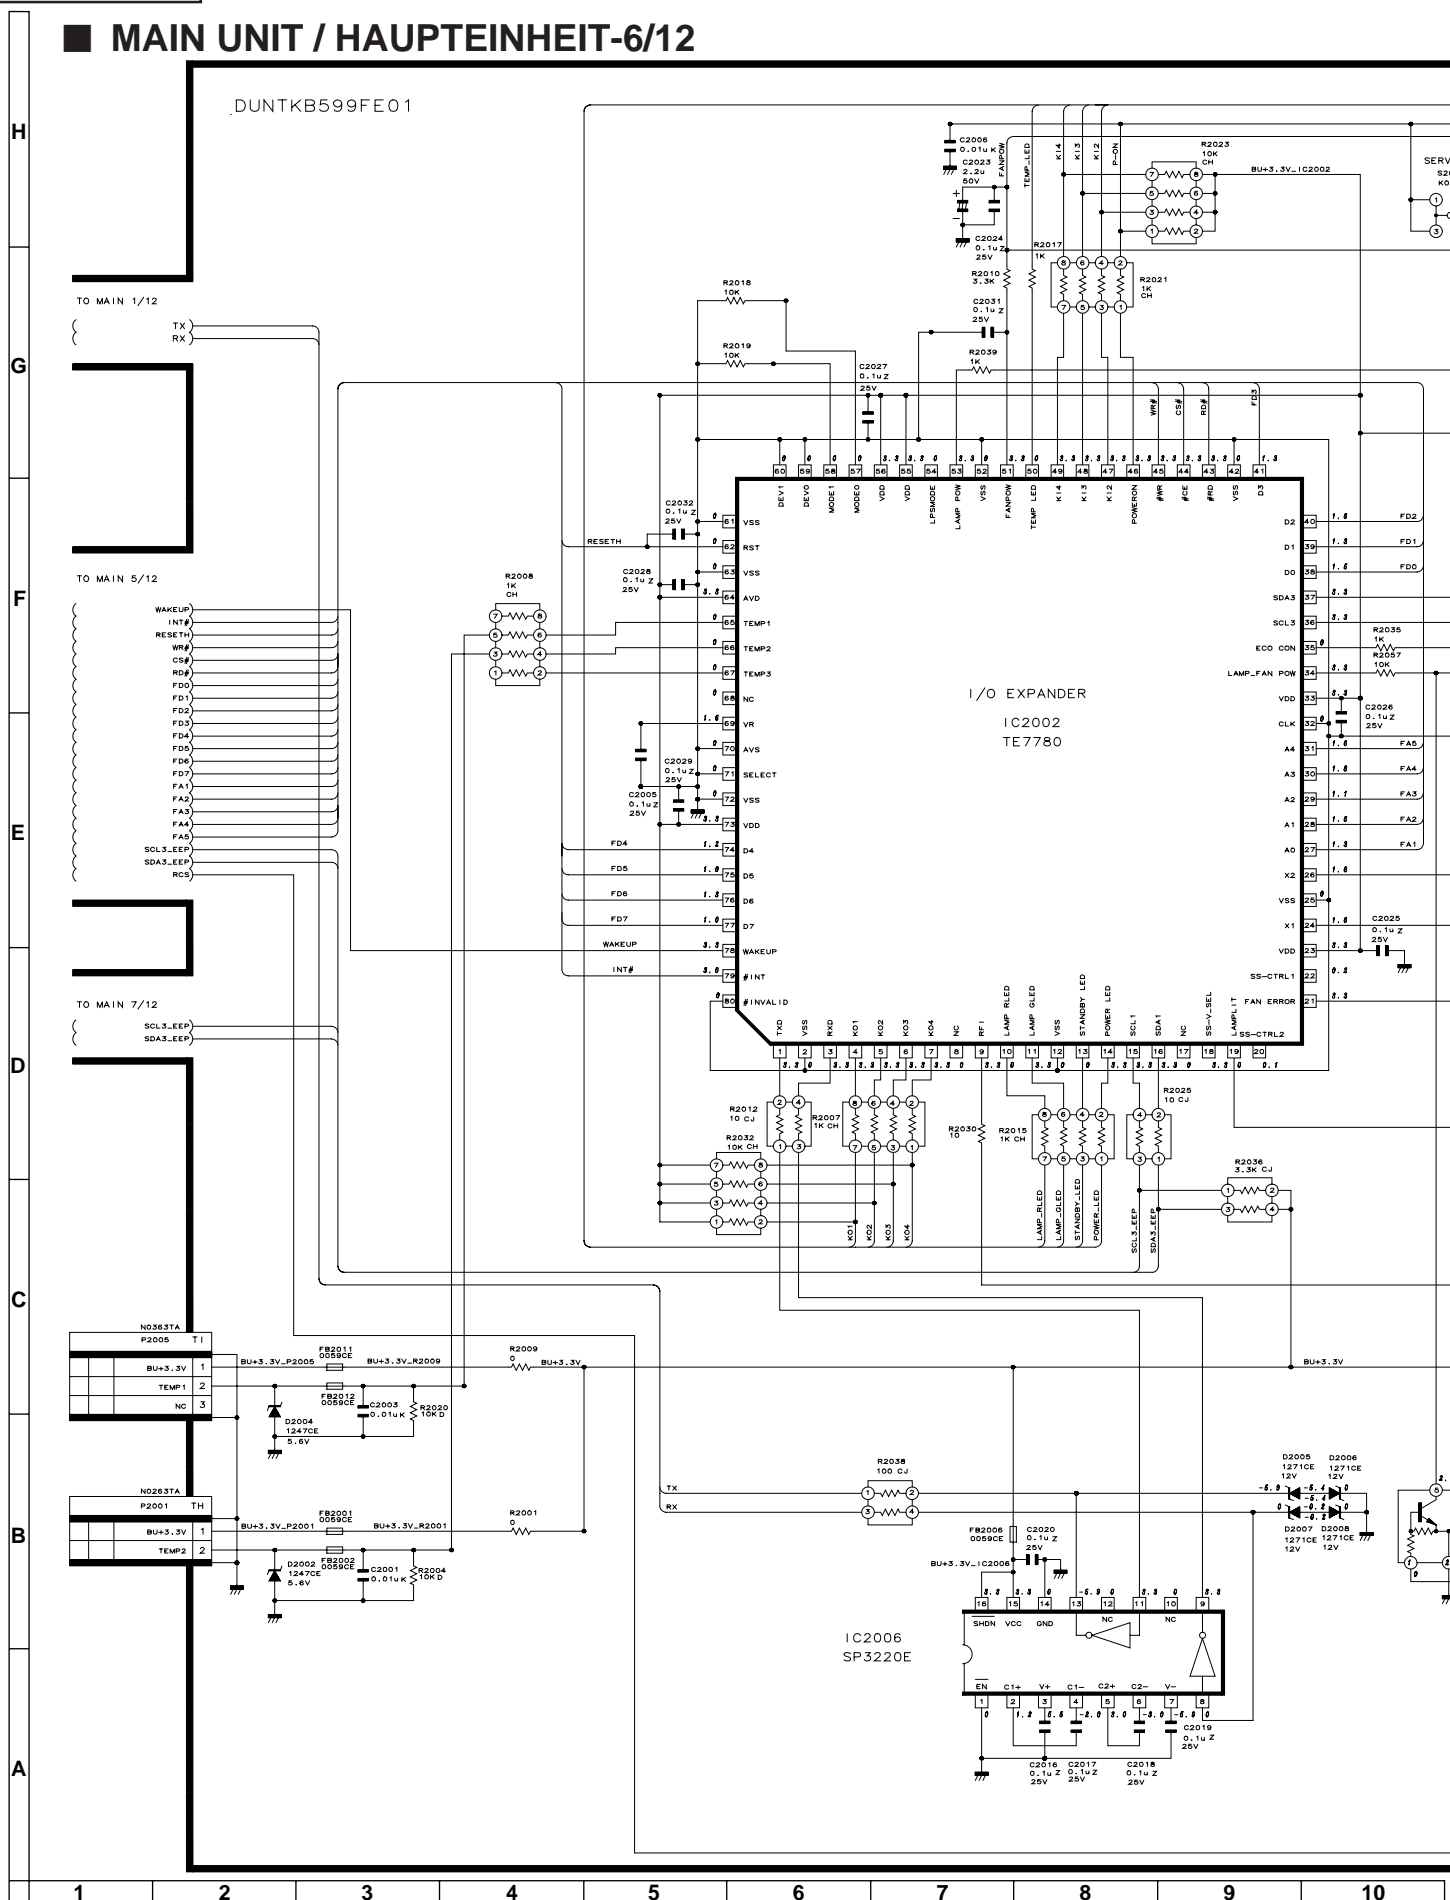

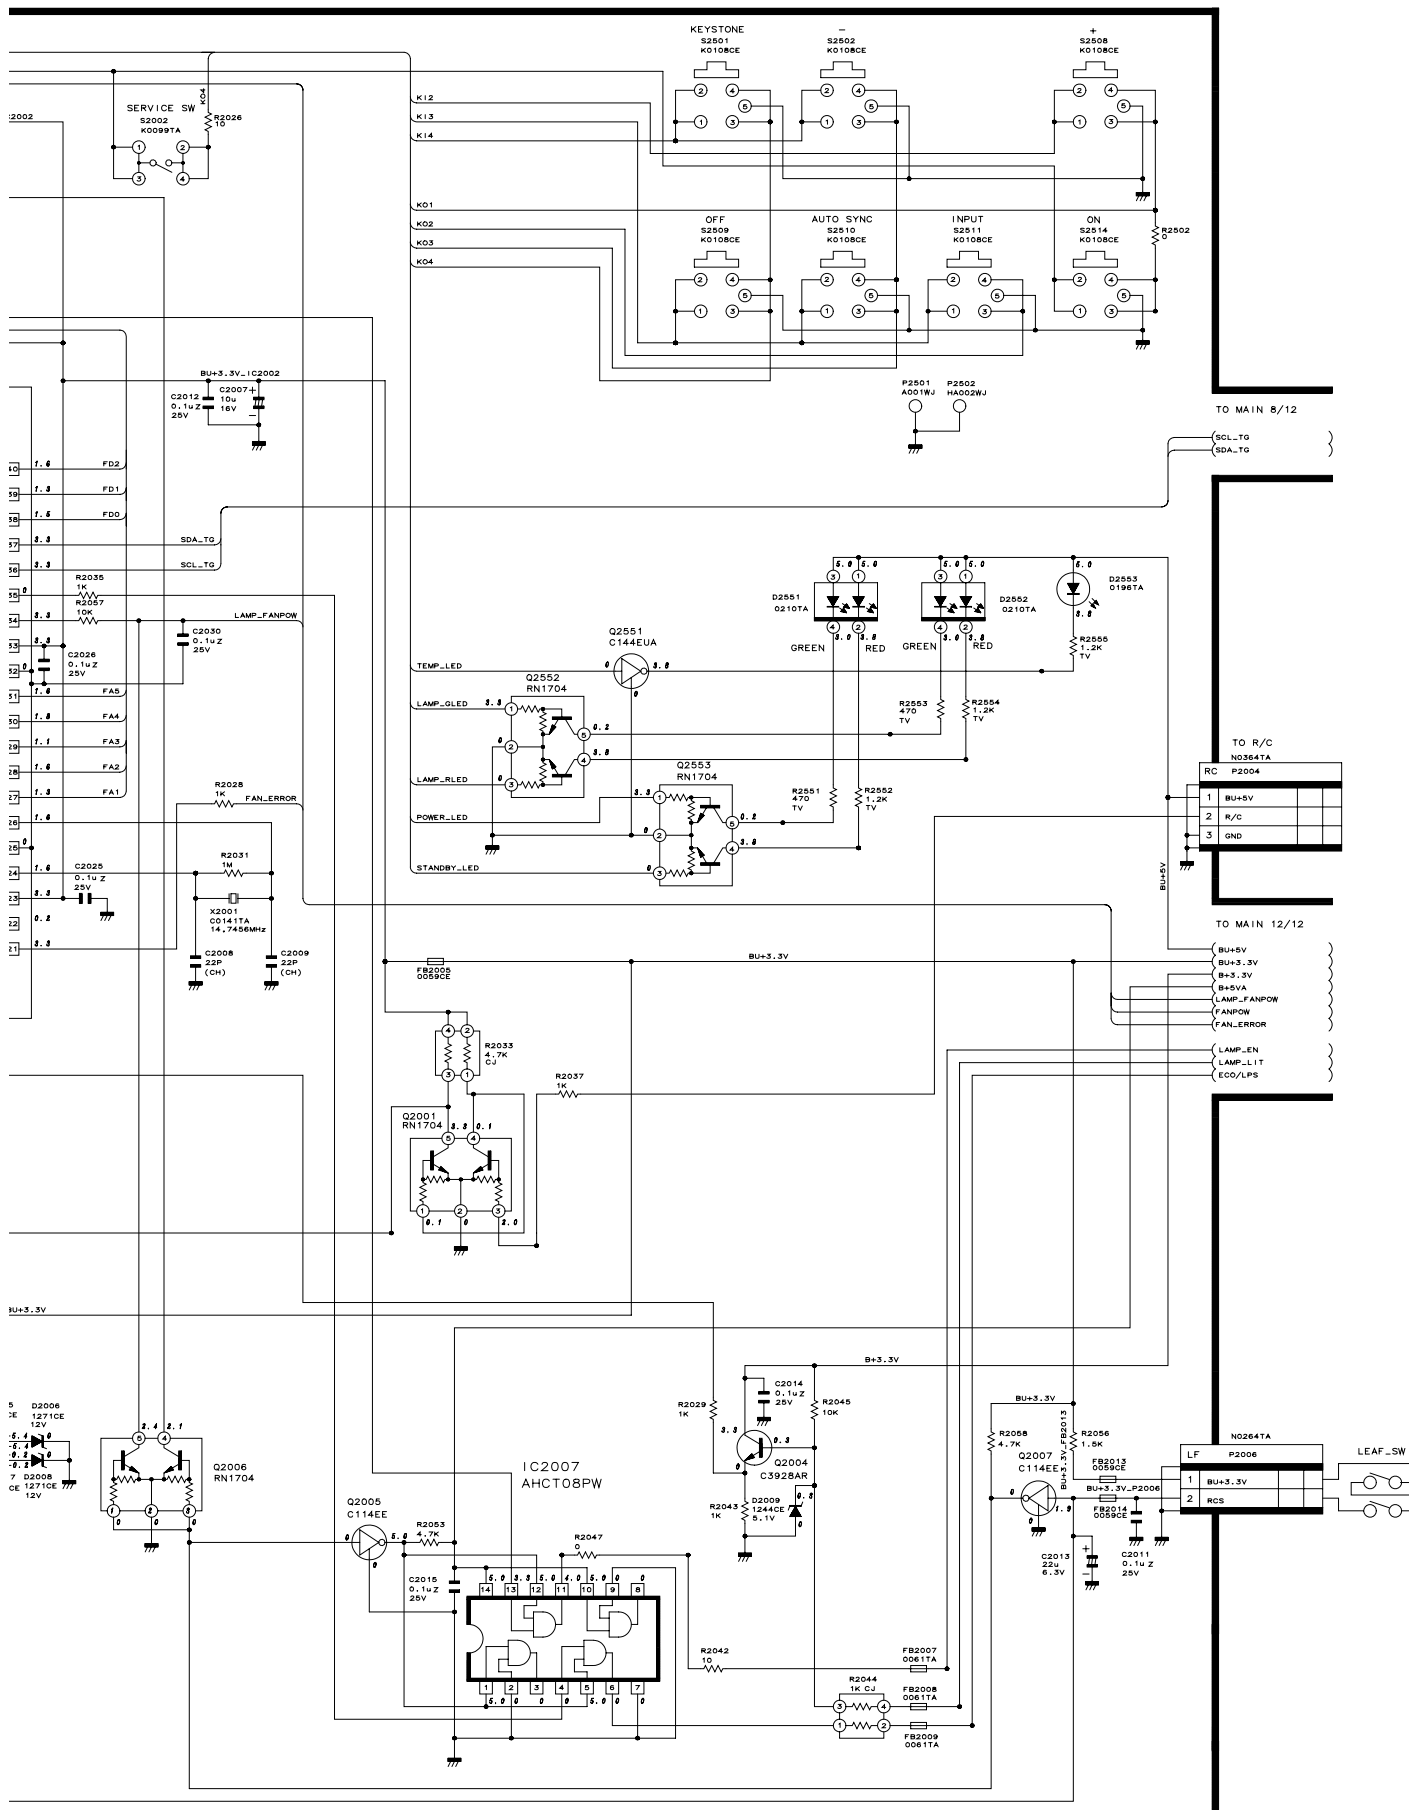





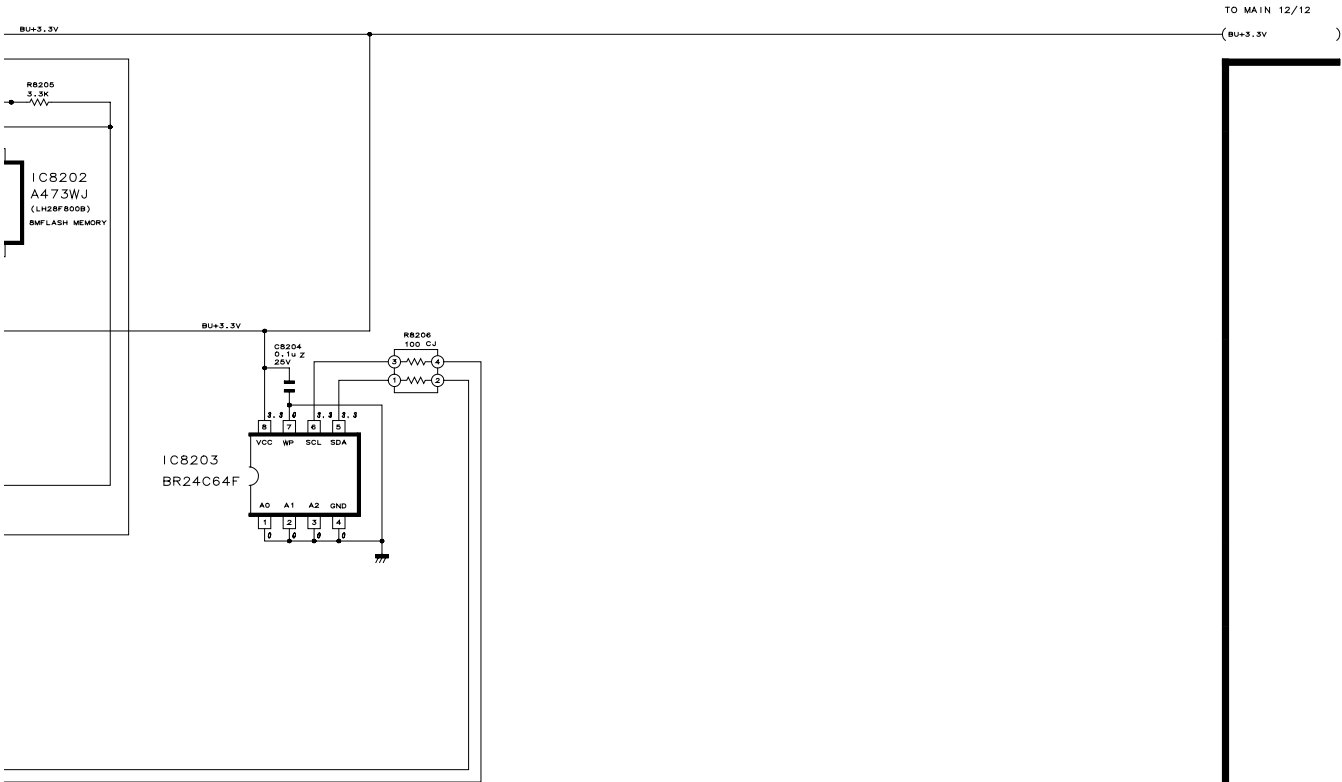


.DUNTKB599FE01

 ■ MAIN UNIT / HAUPTTEINHEIT-8/12

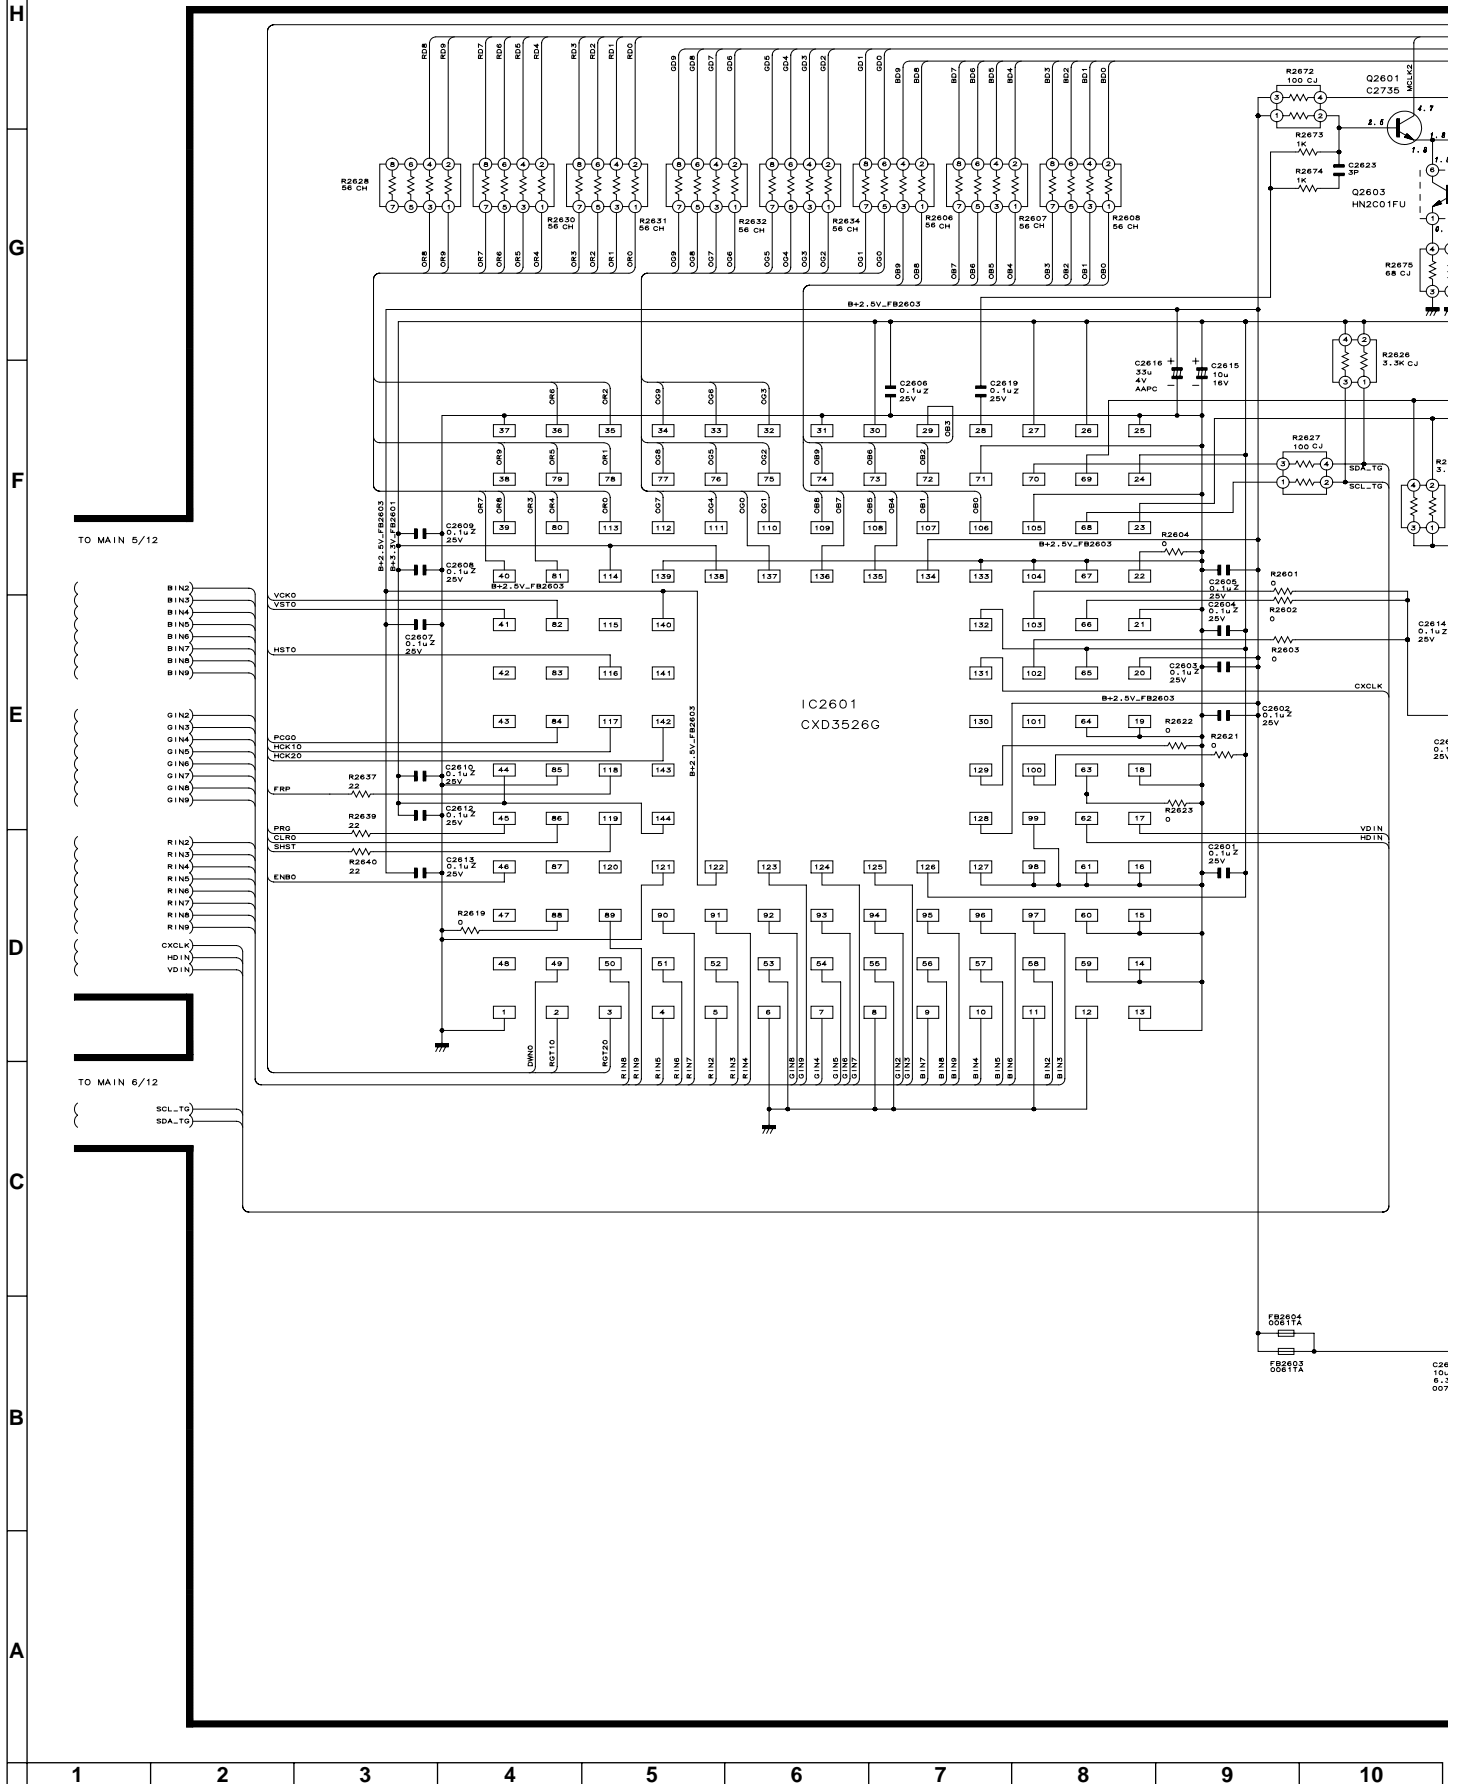






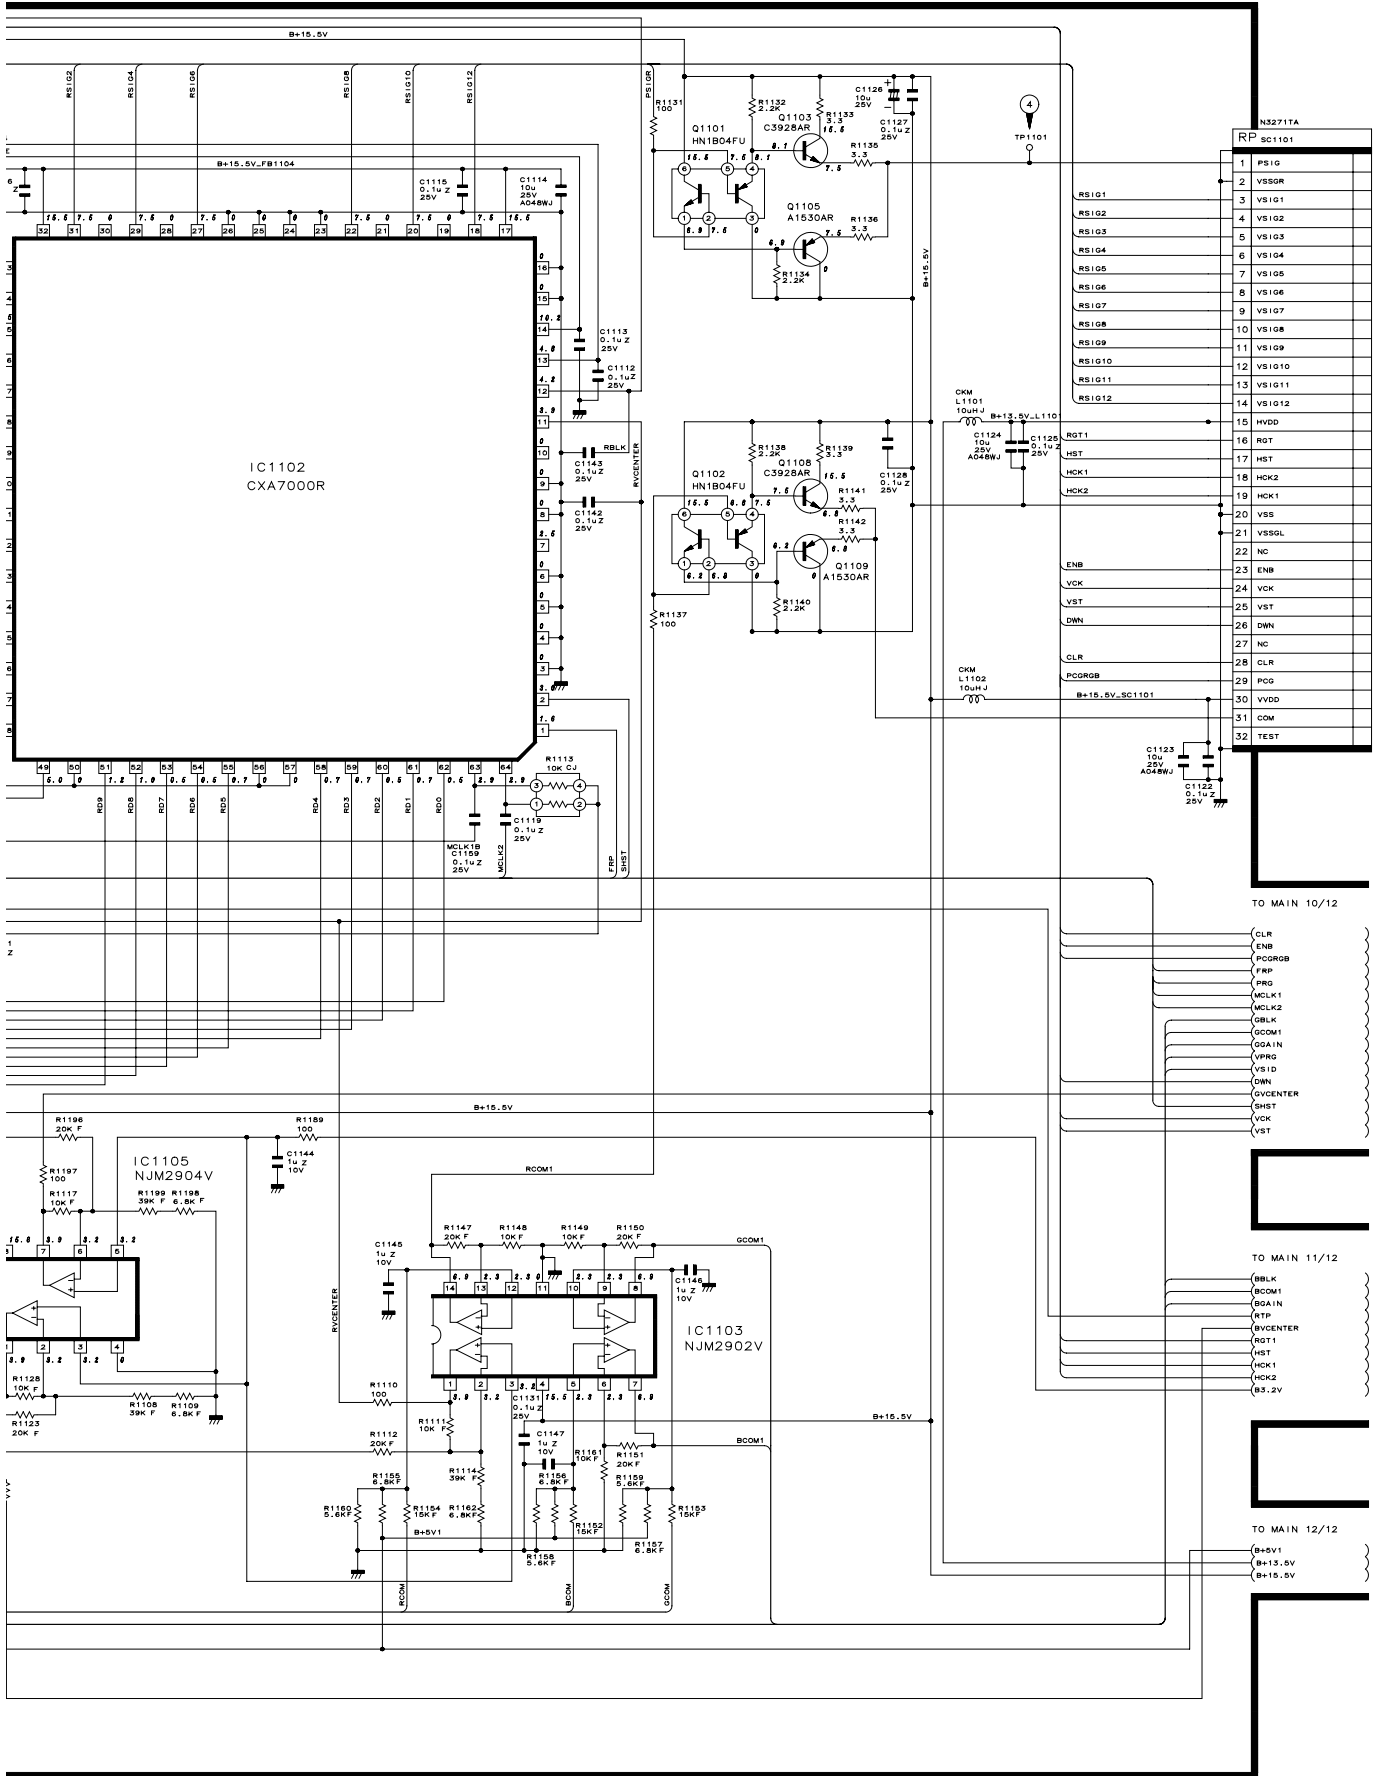


10	11	12	13	14	15	16	17	18	19
----	----	----	----	----	----	----	----	----	----



■ MAIN UNIT / HAUPT EINHEIT-11/12

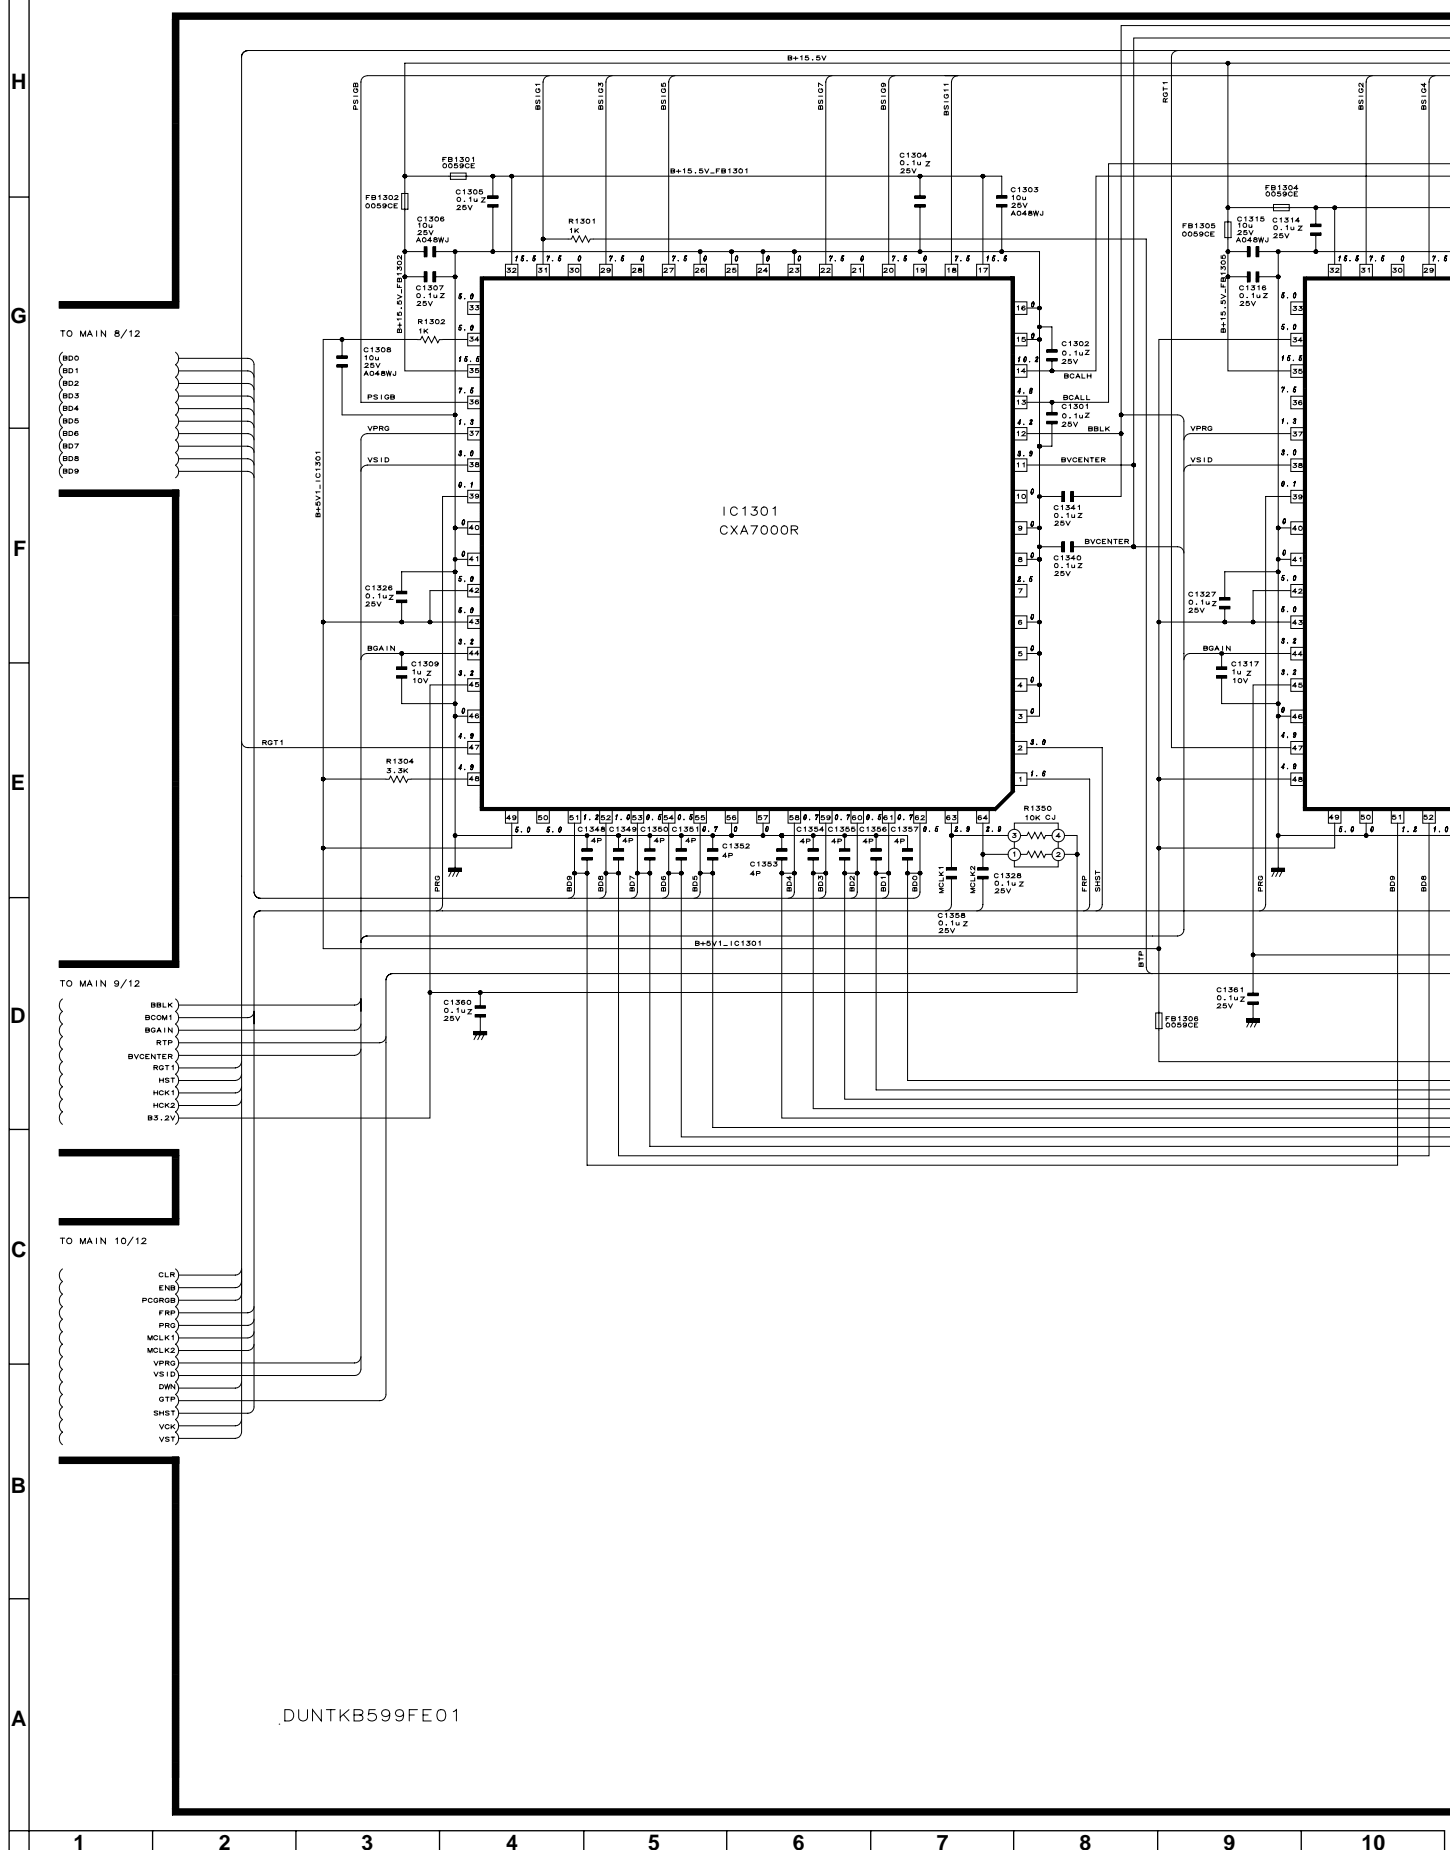

■ MAIN UNIT / HAUPTTEINHEIT-12/12

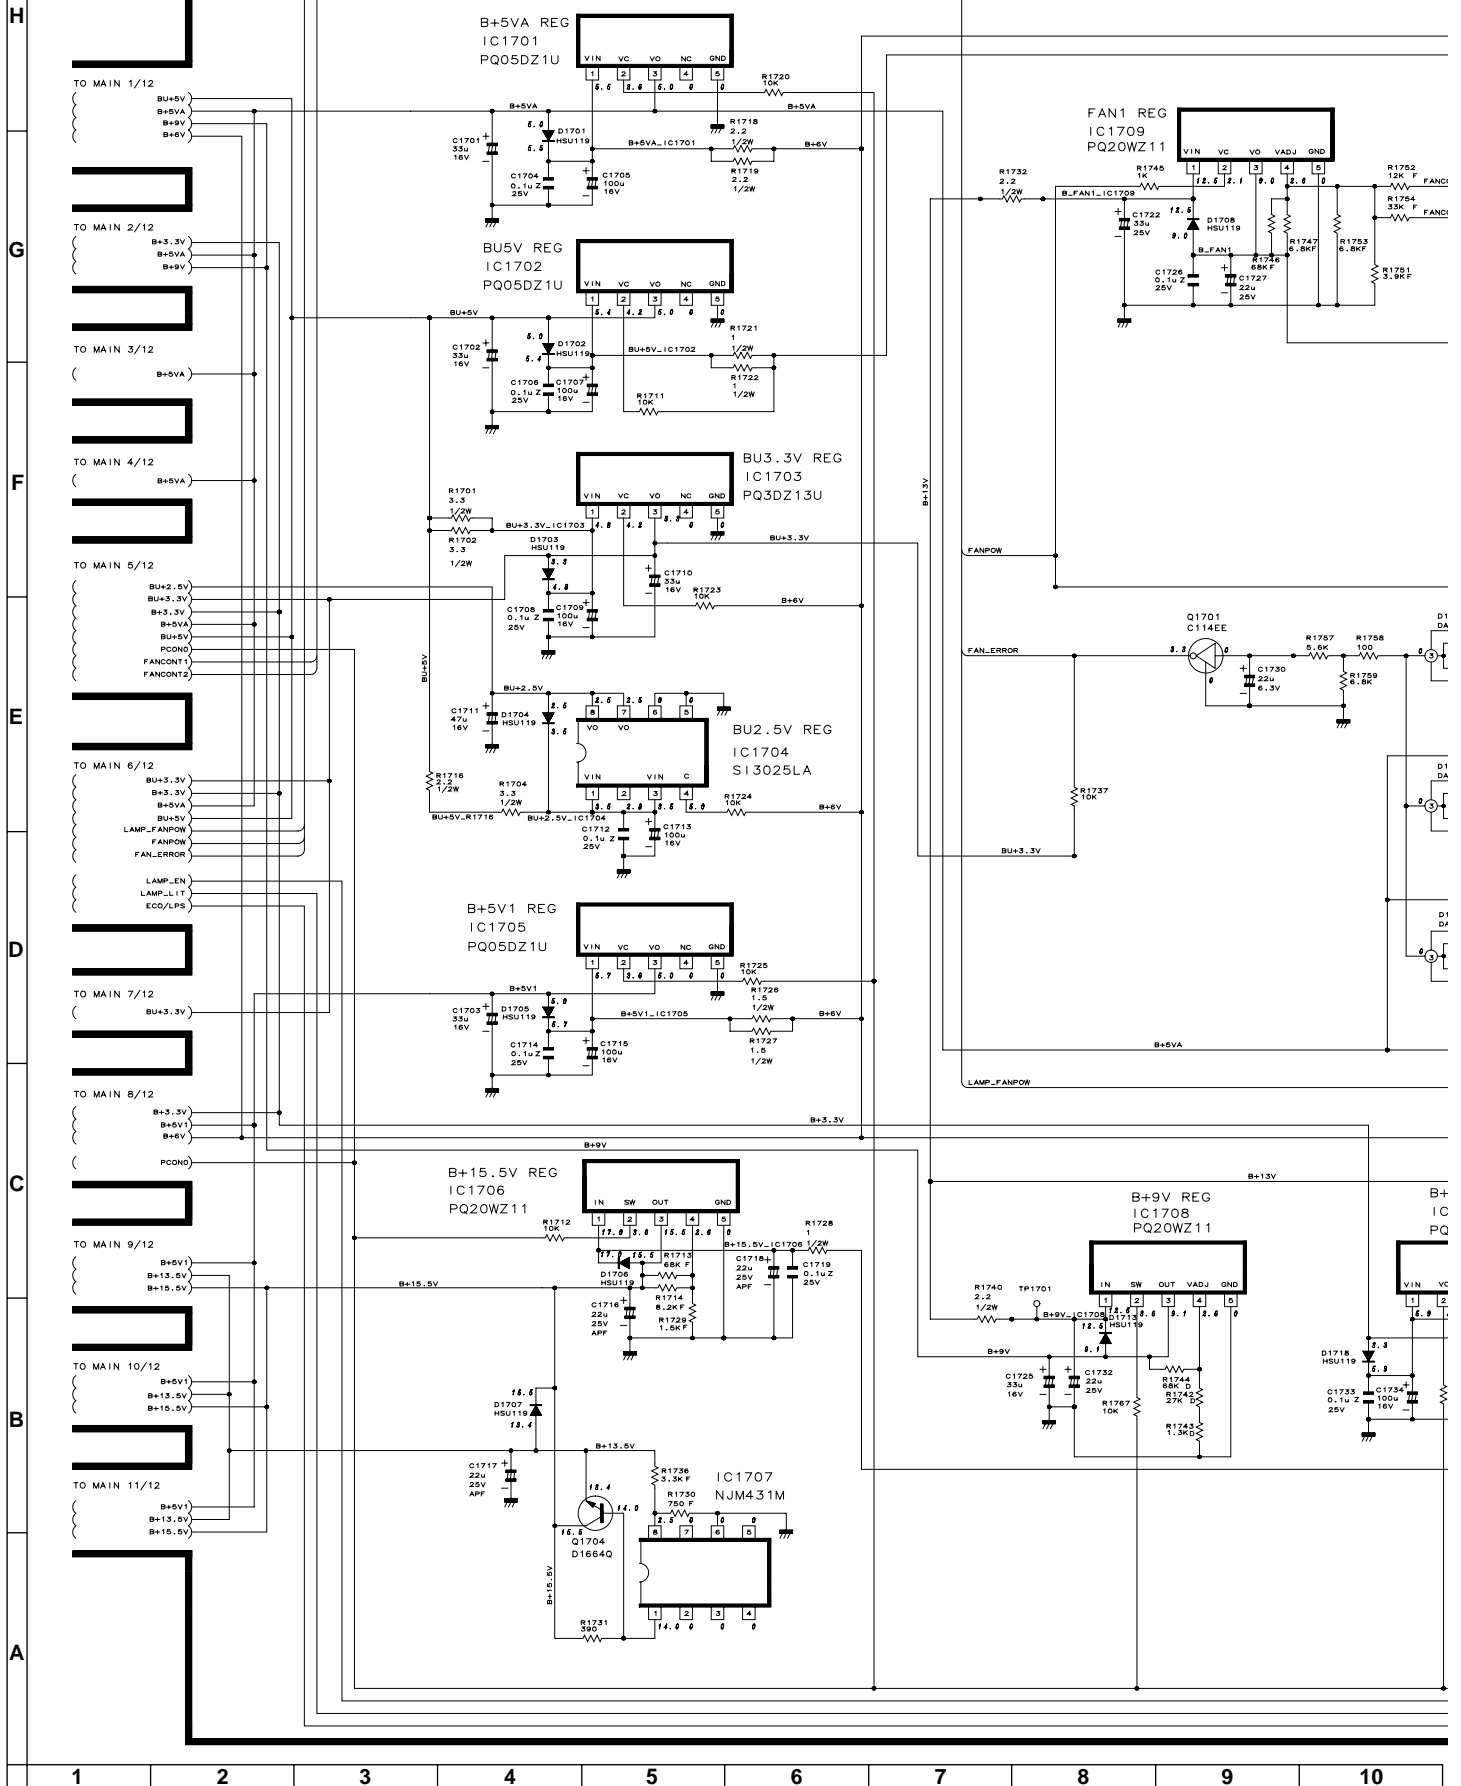

POWER UNIT / NETZTEILEINHEIT

H

G

F


E


D

C

B

A

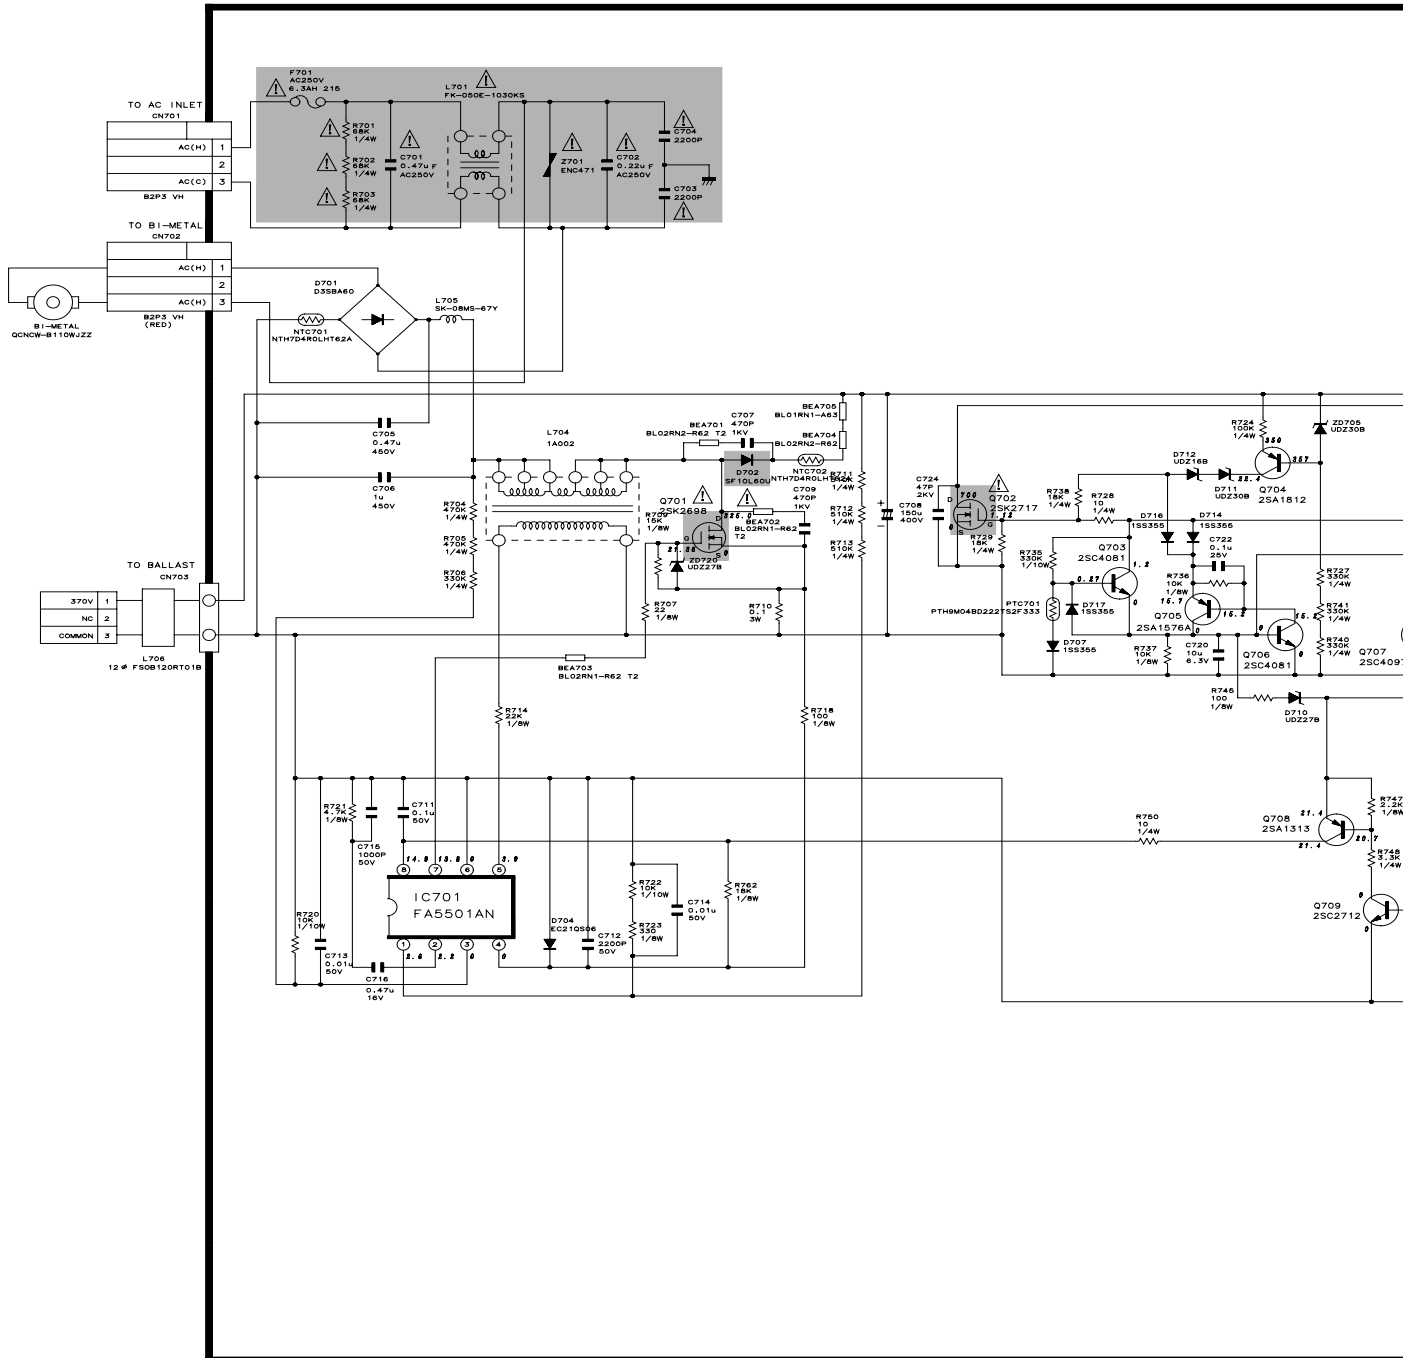

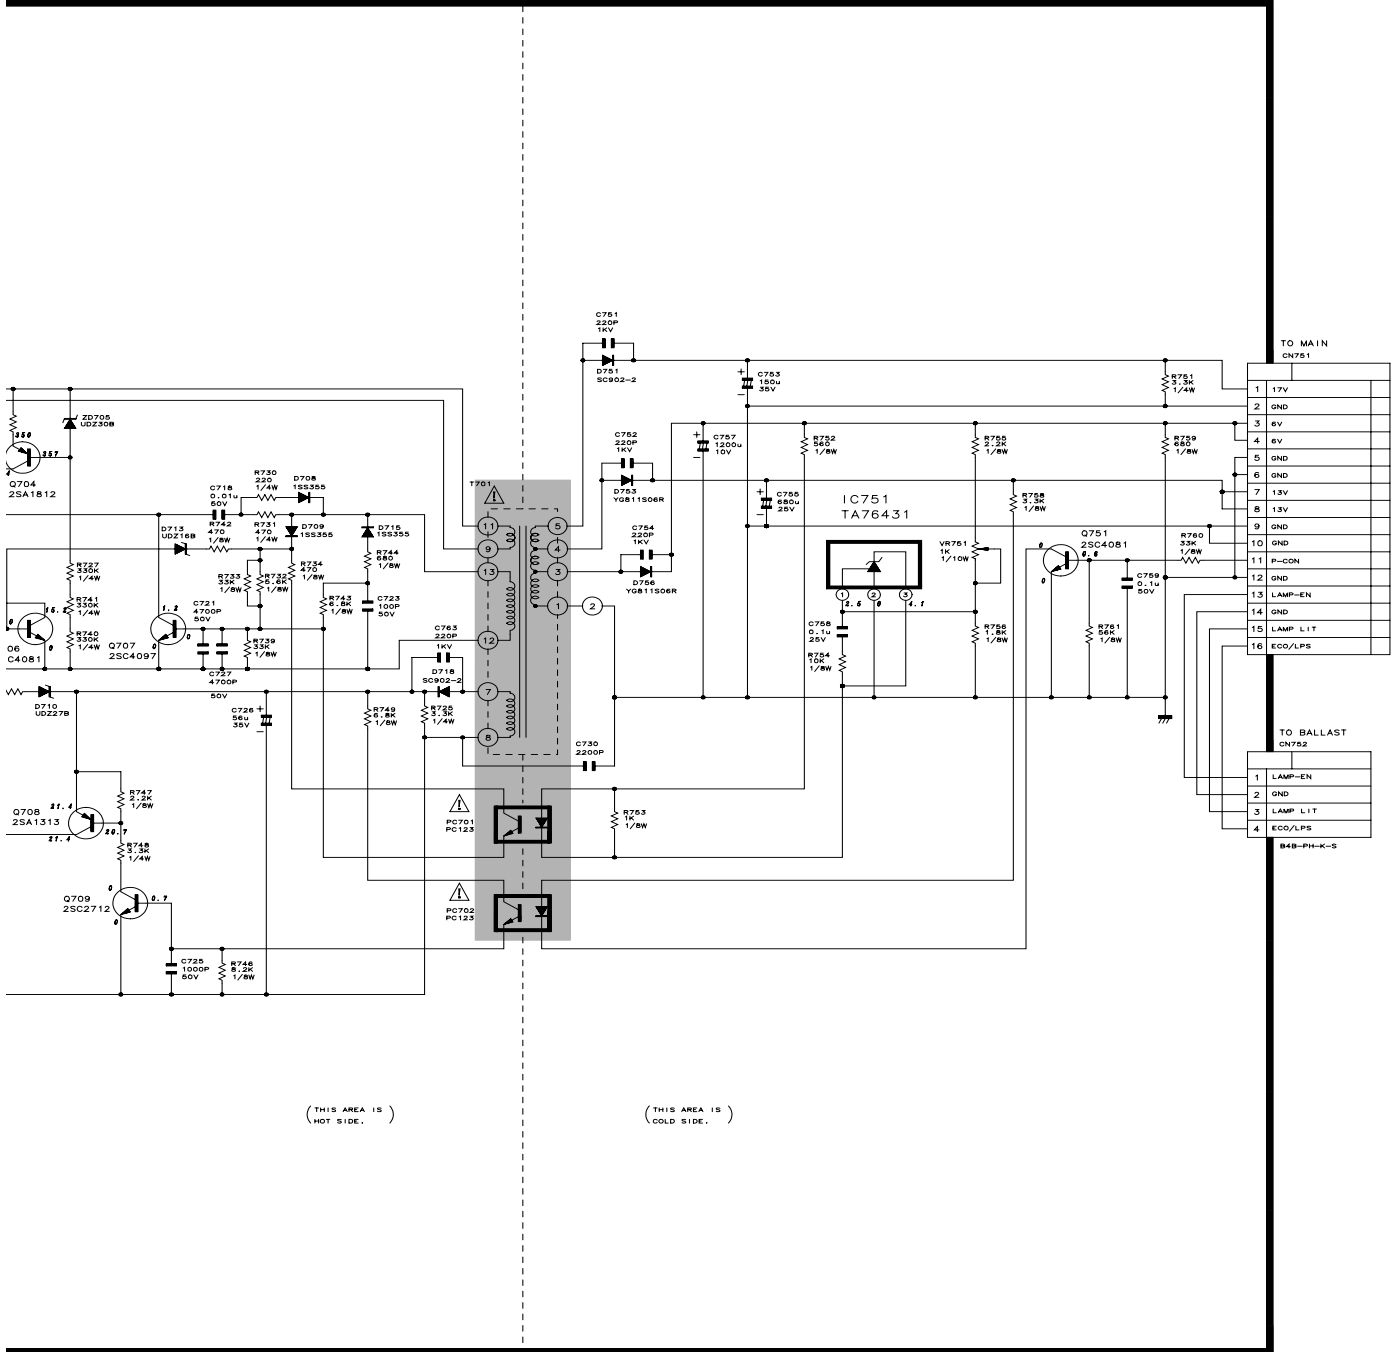

H

G

F

E


D

C

B

A

■ R/C RECEIVER UNIT / FERNBEDIENUNGSEMPFÄNGERSEINHEIT

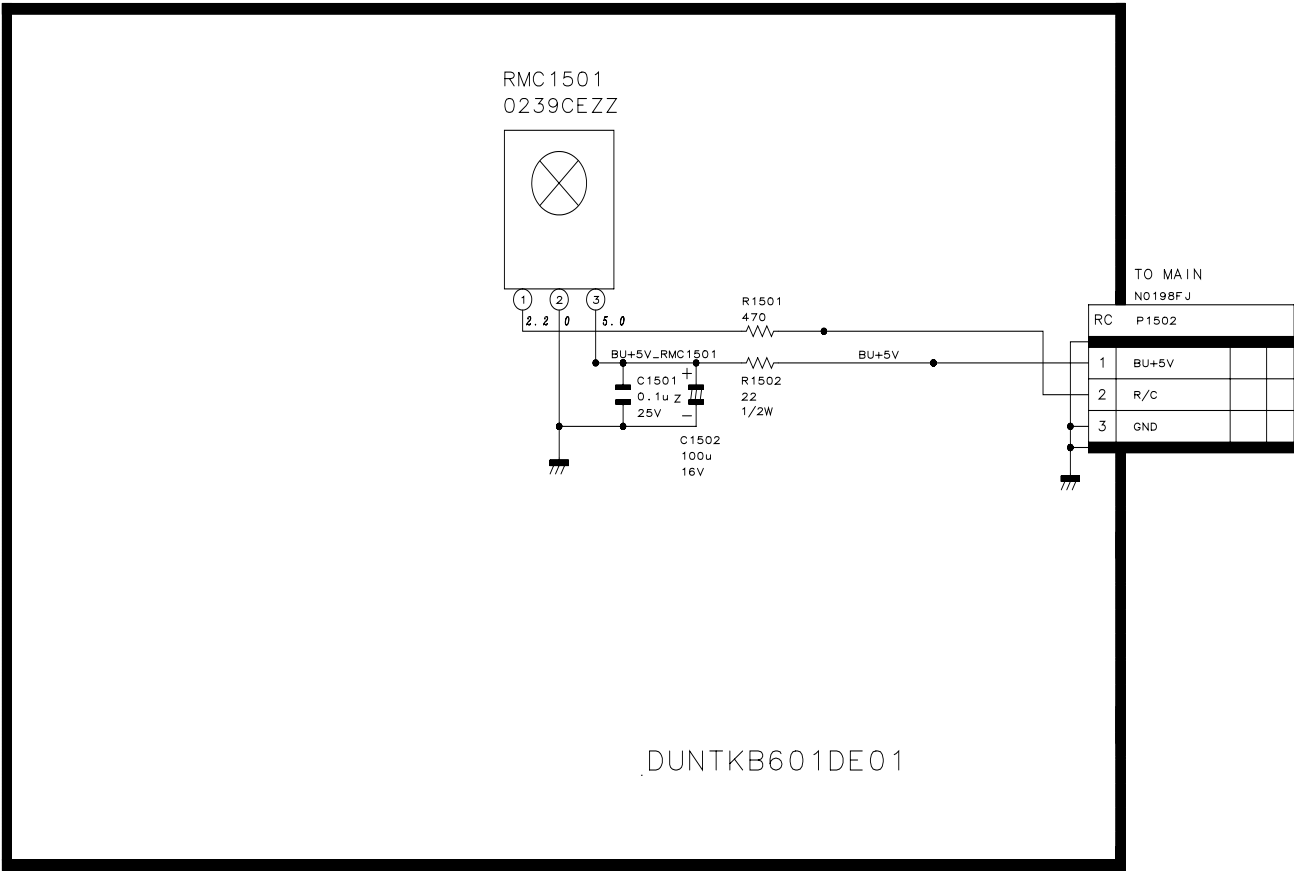

1

2


3

4


5

6

PRINTED WIRING BOARD ASSEMBLIES LEITERPLATTENEINHEITEN

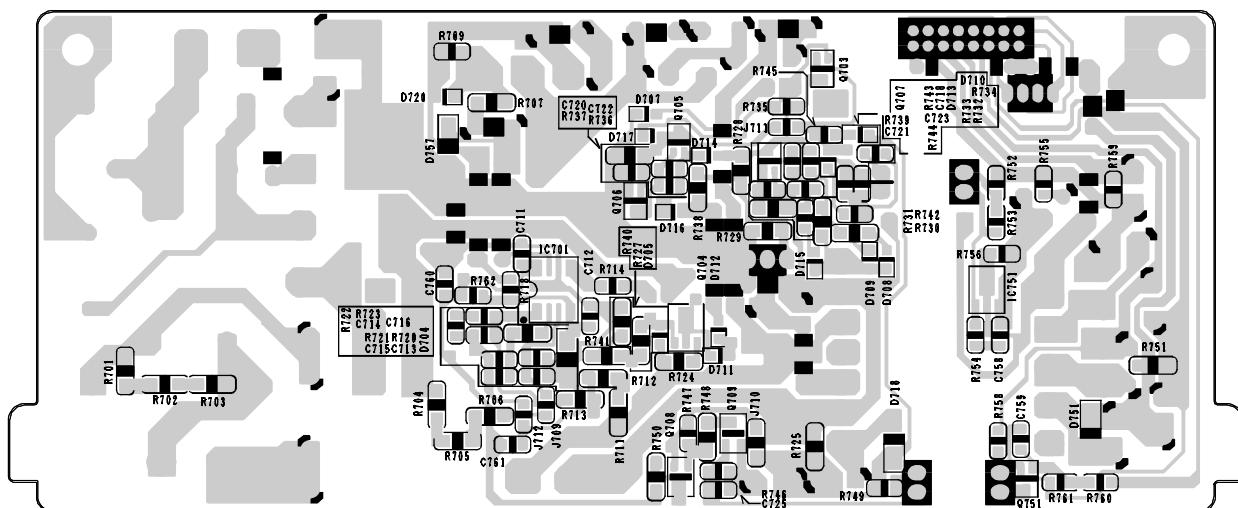

Power Unit (Wiring Side)
Netzteinheit (Leiterbahnseite)

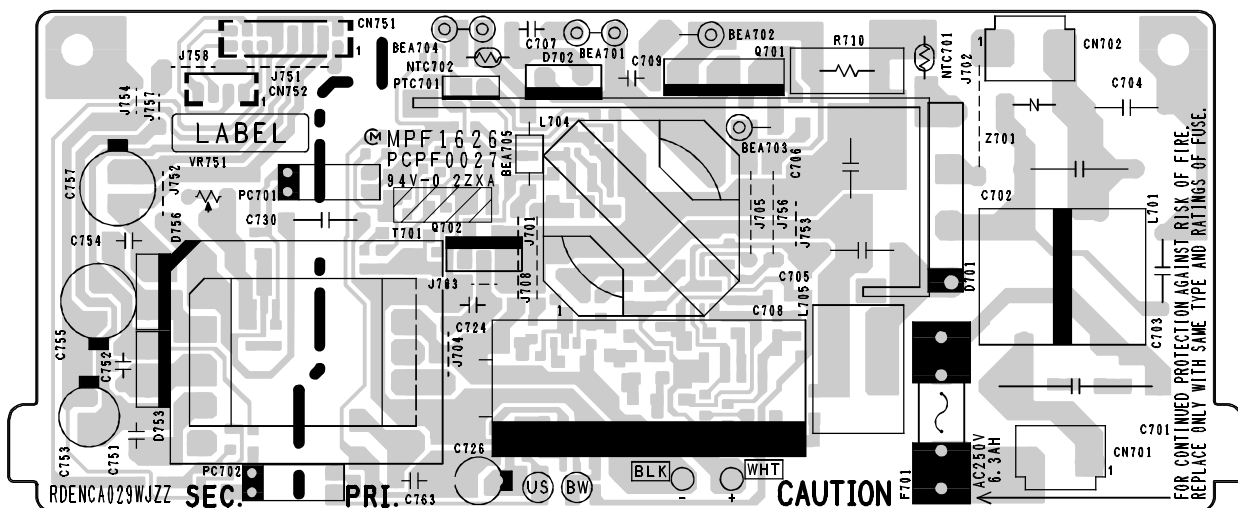

Power Unit (Component Side)
Netzteinheit (Bestückungsseite)

H

G

F


E

D


C

B

A

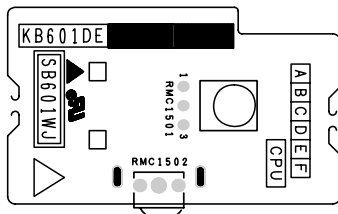

R/C Receiver Unit (Wiring Side)
Fernbedienungsempfängerseinheit
(Leiterbahnseite)

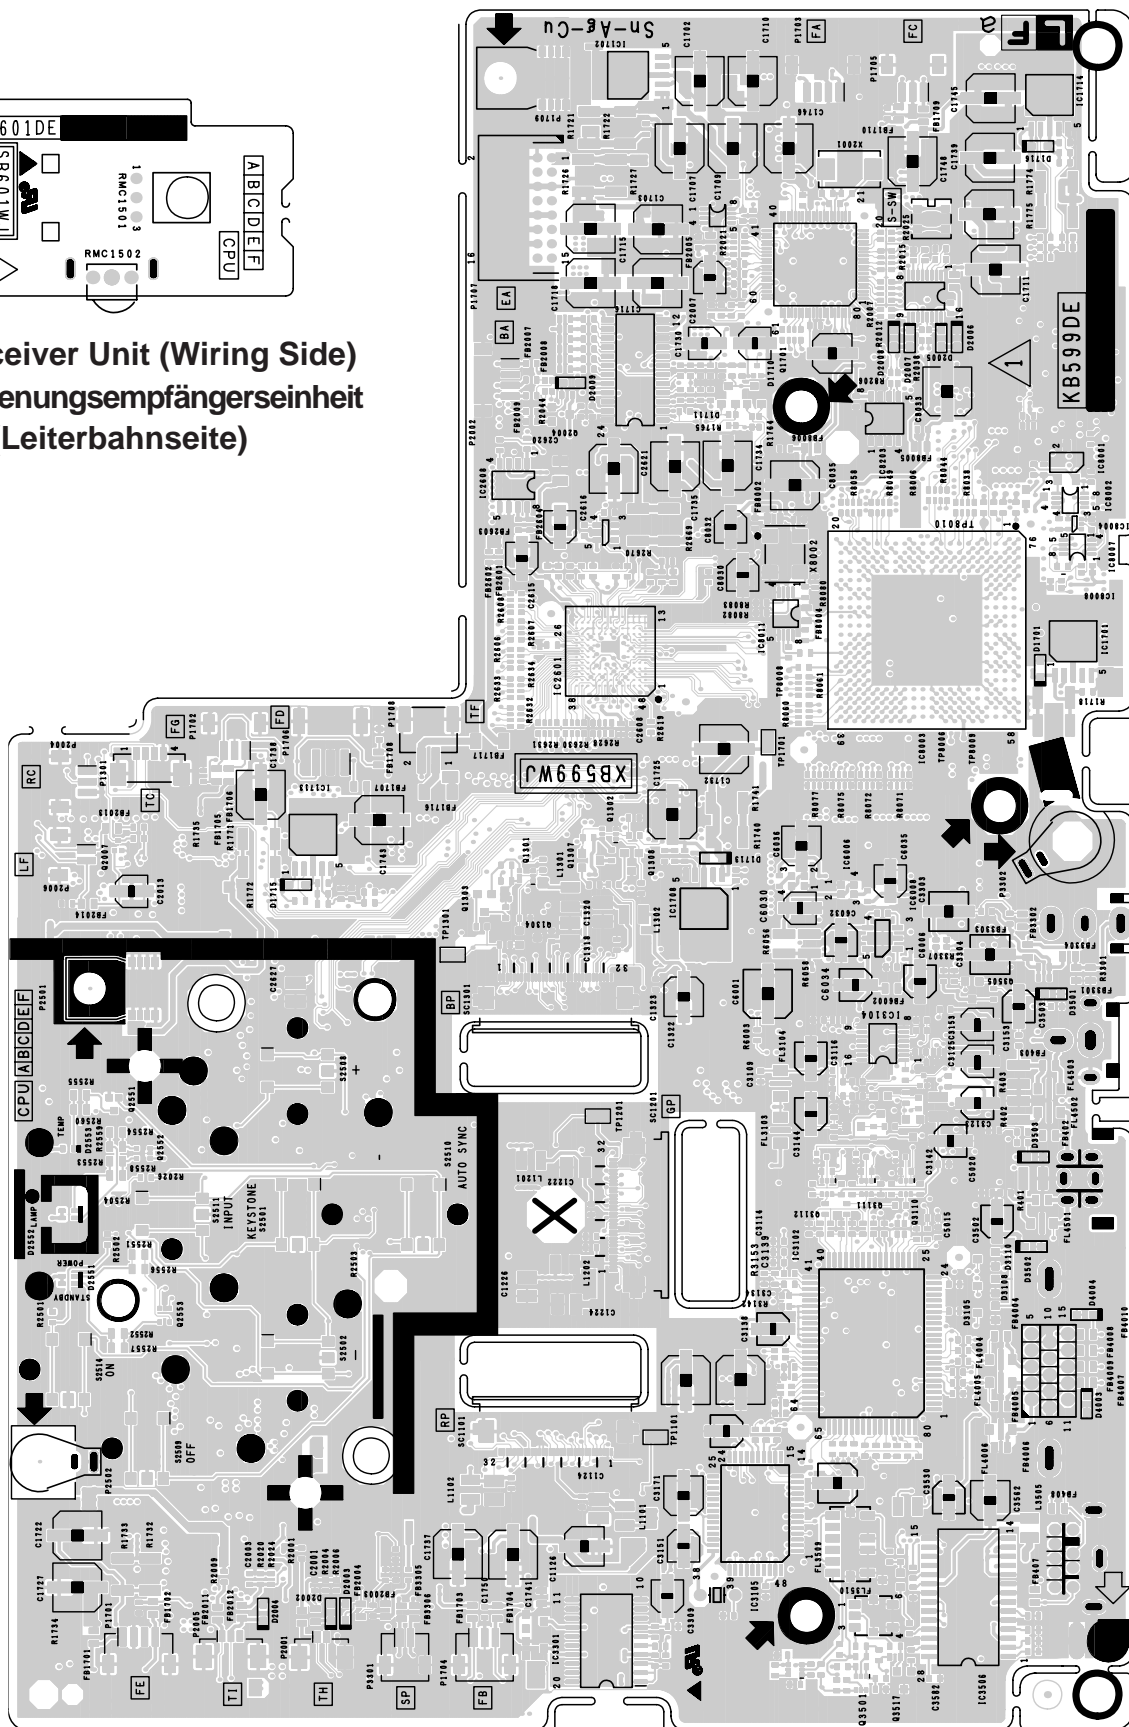

Main Unit (Wiring Side)
Haupt-einheit (Leiterbahnseite)

1


2

3

4

5

6

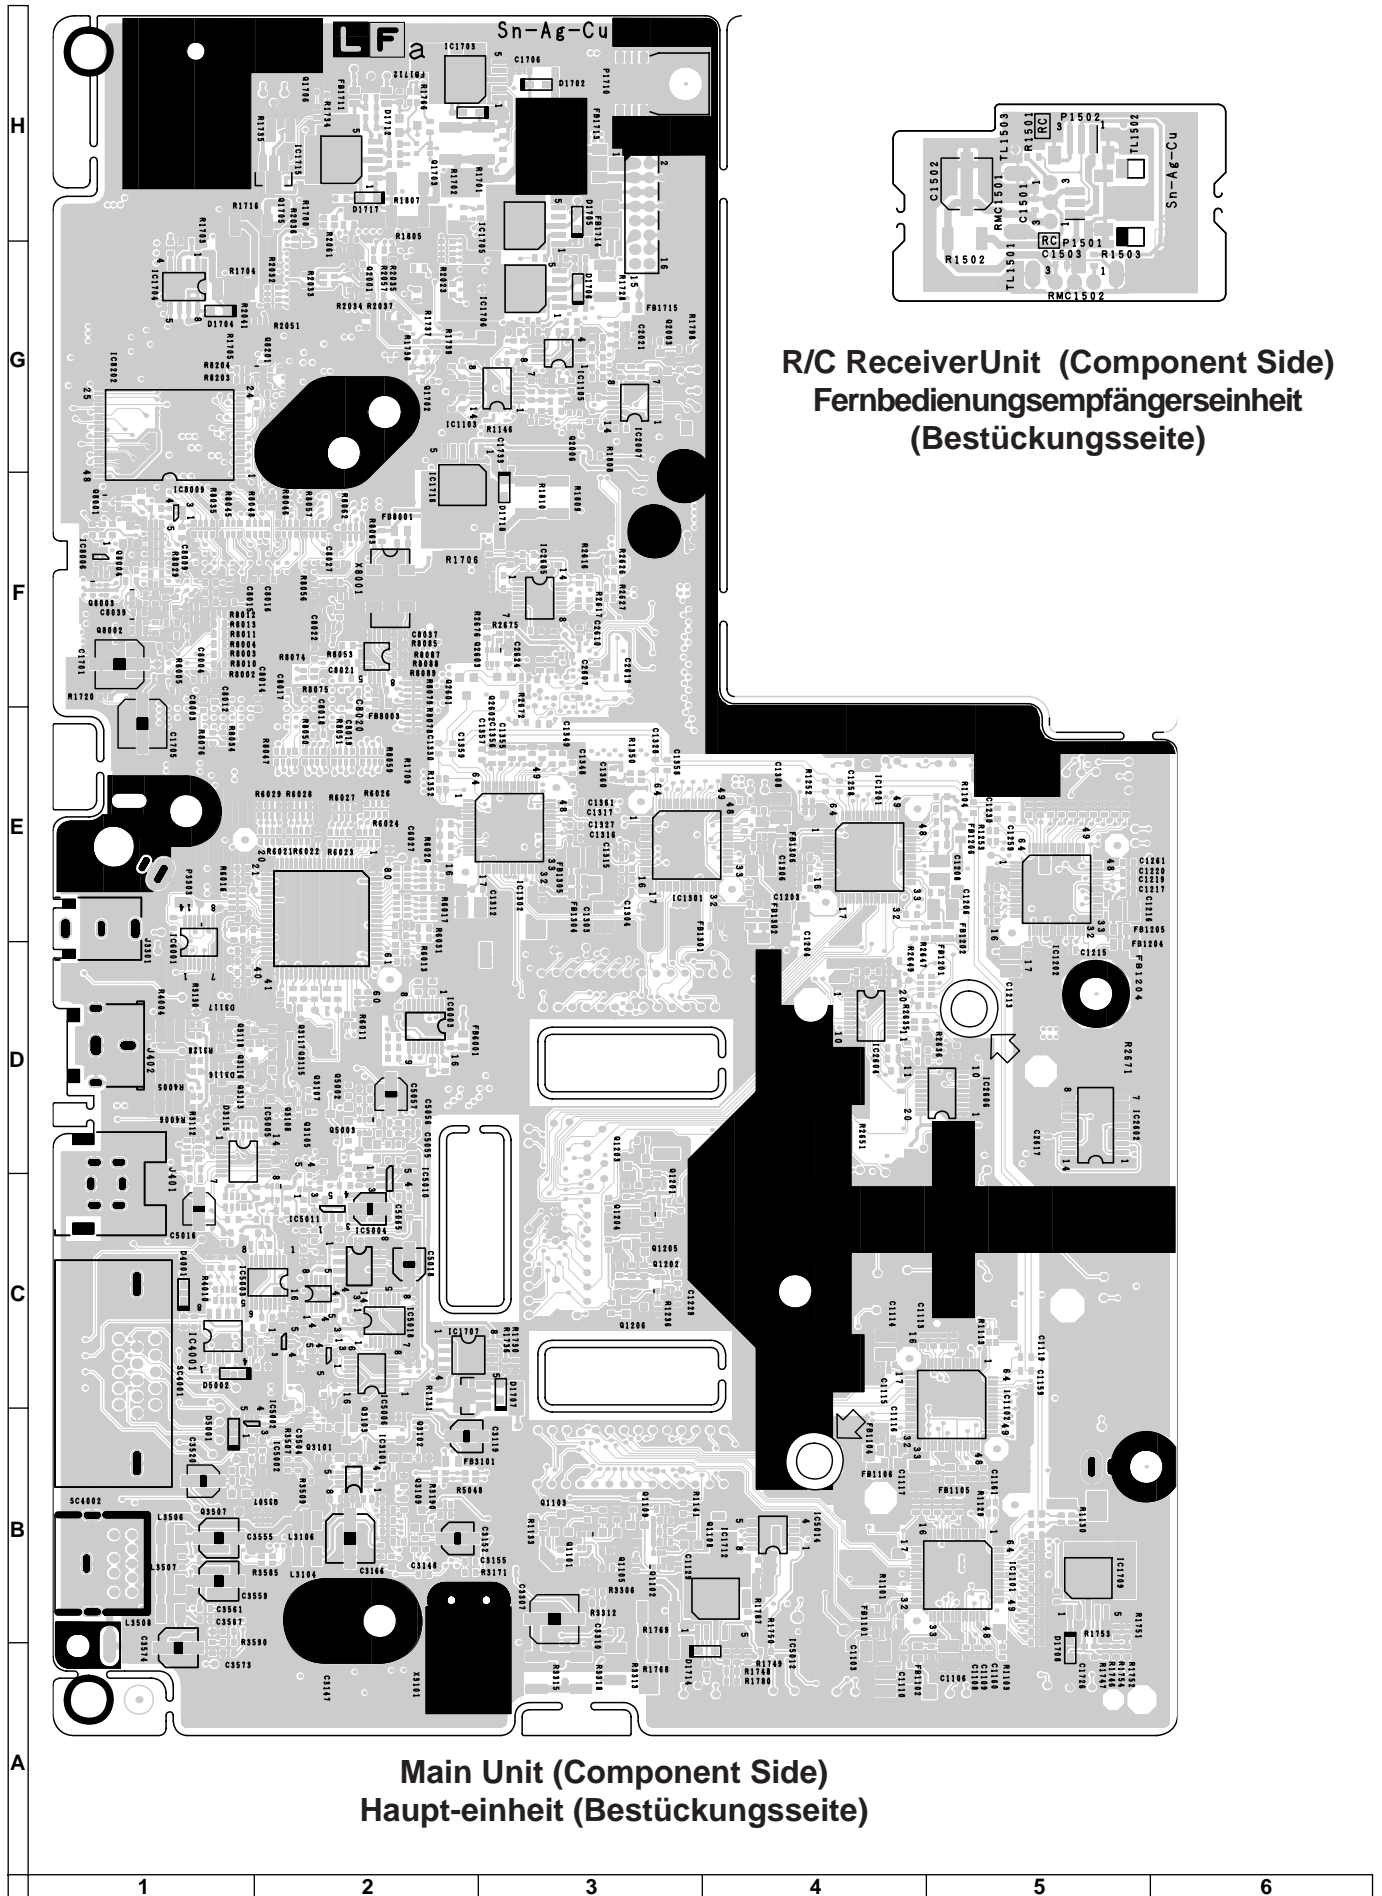

PARTS LIST

PARTS REPLACEMENT

Parts marked with "△" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

HOW TO ORDER REPLACEMENT PARTS

To have your order filled promptly and correctly, please furnish the following informations.

- | | |
|-----------------|----------------|
| 1. MODEL NUMBER | 2. REF. NO. |
| 3. PART NO. | 4. DESCRIPTION |
| 5. CODE | 6. QUANTITY |

in **USA**: Contact your nearest SHARP Parts Distributor.
For location of SHARP Parts Distributor,
Please call Toll-Free; 1-800-BE-SHARP

in **CANADA**: Contact SHARP Electronics of Canada Limited
Phone (416) 890-2100.

★ MARK: SPARE PARTS-DELIVERY SECTION

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

PRINTED WIRING BOARD ASSEMBLIES (NOT REPLACEMENT ITEM)

DUNTKB599FE01	-	Main Unit	—
DUNTKB601DE01	-	R/C Receiver Unit	—
RDENCA029WJZZ	-	Power Unit	—
RDENCA028WJZZ	J	Ballast Unit (Unit Replacement Item)	BU

ERSATZTEILLISTE

AUSTAUSCH VON TEILEN

Ersatzteile, die besondere Sicherheitseigenschaften haben, sind in dieser Anleitung markiert. Elektrische Komponenten mit solchen Eigenschaften sind in den Ersatzteil durch "△" gekennzeichnet.

Der Gebrauch von Ersatzteilen, die nicht dieselben Sicherheitseigenschaften haben wie die vom Hersteller empfohlenen und in der Bedienungsanleitung angegebenen, können zur Ursache von Blitzschlägen, Bränden und anderen Gefahren werden.

WIE MAN ERSATSTEILE BESTELLT

Damit Ihre Bestellung prompt und korrekt ausgeführt wird, geben Sie bitte folgende Informationen.

- | | |
|-------------------|-----------------|
| 1. MODELL NR. | 2. REF. NR. |
| 3. ERSATZTEIL NR. | 4. BESCHREIBUNG |
| 5. KODE | 6. QUANTITÄT |

★ MARKIERUNG : ERSATZTEILE-LIEFERUNG

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

DUNTKB599FE01 MAIN UNIT

INTEGRATED CIRCUITS

IC1101	VHiCXA7000R-1Q	J	CXA7000R	BB
IC1102	VHiCXA7000R-1Q	J	CXA7000R	BB
IC1103	VHiNJM2902V-1Y	J	NJM2902V	AD
IC1104	VHiM62392FP-1Y	J	M62392FP	AM
IC1105	VHiNJM2904V-1Y	J	NJM2904V	AF
IC1201	VHiCXA7000R-1Q	J	CXA7000R	BB
IC1202	VHiCXA7000R-1Q	J	CXA7000R	BB
IC1301	VHiCXA7000R-1Q	J	CXA7000R	BB
IC1302	VHiCXA7000R-1Q	J	CXA7000R	BB
IC1701	VHiPQ05DZ1U-1Y	J	PQ05DZ1U	AG
IC1702	VHiPQ05DZ1U-1Y	J	PQ05DZ1U	AG
IC1703	VHiPQ3DZ13U-1Y	J	PQ3DZ13U	AG
IC1704	VHiSi3025LA-1Y	J	SI-3025LSA-TL	AF
IC1705	VHiPQ05DZ1U-1Y	J	PQ05DZ1U	AG
IC1706	VHiPQ20WZ11-1Y	J	PQ20WZ1U	AF
IC1707	VHiNJM431M/-1Y	J	NJM431M	AE
IC1708	VHiPQ20WZ11-1Y	J	PQ20WZ1U	AF
IC1709	VHiPQ20WZ11-1Y	J	PQ20WZ1U	AF
IC1712	VHiPQ20WZ11-1Y	J	PQ20WZ1U	AF
IC1713	VHiPQ20WZ11-1Y	J	PQ20WZ1U	AF
IC1714	VHiPQ20WZ11-1Y	J	PQ20WZ1U	AF
IC1715	VHiPQ20WZ11-1Y	J	PQ20WZ1U	AF
IC1716	VHiPQ3DZ13U-1Y	J	PQ3DZ13U	AG
IC2002	VHiTE7780+-1Q	J	TE7780	AW
IC2006	VHiSP3220E+-1Y	J	SP3220ECY/TR	AM
IC2007	VHiAHCT08PW-1Y	J	SN74AHCT08PW	AD
IC2601	VHiCXD3526G-1Q	J	CXD3526G	BE
IC2603	VHiBD4729G+-1Y	J	BD4729G-TR	AD
IC2604	VHiSNAT541P-1Y	J	SN74AHCT541PWR	AF
IC2605	VHiHN24256T-1Y	J	HN58X24256TI	AT
IC2606	VHiSNAT541P-1Y	J	SN74AHCT541PWR	AF
IC2608	VHiSi3025LA-1Y	J	SI-3025LSA-TL	AF
IC3101	VHiSN2G04CT-1Y	J	SN74AHC2G04HDC	AE
IC3102	VHiCXA2101Q-1Q	J	CXA2101AQ-TL	BE
IC3104	VHiFSAV330T-1Y	J	FSAV330MTCX	AN
IC3105	VHiTB1274AF1EQ	J	TB1274AF	AX
IC3301	VHiDA7056AT-1Y	J	TDA7056AT/N2	AM
IC3506	VHiTC90A69F-1Y	J	TC90A69F	AT
IC4001	VHiBR24C21F-1Y	J	BR24C21F-E2	AG
IC5001	VHiSN1G00DC-1Y	J	SN74AHC1G00HDC	AB
IC5002	VHiSNT1G08C-1Y	J	SN74AHCT1G08DC	AD

Ref. No.	Part No.	★	Description	Code	Ref. No.	Part No.	★	Description	Code
DUNTKB599FE01									
MAIN UNIT (Continued)									
IC5003	VHILV123AT+-1Y	J	SN74LV123APWR	AF	Q3109	VS2SC3928AR-1Y	J	2SC3928AR	AB
IC5004	RH-IXA202WJN2Y	J	PIC12C509A-04	AP	Q3110	VSHN1B04FU/-1Y	J	HN1B04FU	AC
IC5005	VHINJM2901V-1Y	J	NJM2901V	AE	Q3111	VSHN1B04FU/-1Y	J	HN1B04FU	AC
IC5006	VHILV123AT+-1Y	J	SN74LV123APWR	AF	Q3112	VSHN1B04FU/-1Y	J	HN1B04FU	AC
IC5007	VHISN1G00DC-1Y	J	SN74AHC1G00HDC	AB	Q3114	VS2SC3928AR-1Y	J	2SC3928AR	AB
IC5008	VHISN1G32DC-1Y	J	SN74AHC1G32HDC	AD	Q3115	VS2SC2735/-1Y	J	2SC2735	AB
IC5010	VHILMV7239+-1Y	J	LMV7239M5X	AH	Q3117	VS2SC2735/-1Y	J	2SC2735	AB
IC5011	VHILMV7239+-1Y	J	LMV7239M5X	AH	Q3120	VSDTC114EE/-1Y	J	DTC114EE	AB
IC5014	VHIM62332FP-1Y	J	M62332FP	AL	Q3121	VSDTC114EE/-1Y	J	DTC114EE	AB
IC5015	VHISNT1G08C-1Y	J	SN74AHCT1G08DC	AD	Q3122	VSDTC114EE/-1Y	J	DTC114EE	AB
IC5016	VHISNAHC157-1Y	J	SN74AHC2G157HD	AE	Q3501	VSHN1B04FU/-1Y	J	HN1B04FU	AC
IC5017	VHISN1G86DC-1Y	J	SN74AHC1G86HDC	AD	Q3502	VSHN1B04FU/-1Y	J	HN1B04FU	AC
IC5018	VHITVHC74T/-1Y	J	TC74VHC74FT	AF	Q3505	VS2SC3928AR-1Y	J	2SC3928AR	AB
IC6001	VHILV125AT+-1Y	J	SN74LV125APWR	AE	Q3507	VS2SA1530AR-1Y	J	2SA1530AR	AB
IC6004	VHIAD9883A1-1Q	J	AD9883AKST-110	BD	Q3516	VS2SA1530AR-1Y	J	2SA1530AR	AB
IC6006	VHIMM3033D+-1Y	J	MM3033DURE	AD	Q3517	VS2SA1530AR-1Y	J	2SA1530AR	AB
IC6007	VHIMM3032F+-1Y	J	MM3032FURE	AD	Q5001	VSHN1B04FU/-1Y	J	HN1B04FU	AC
IC6008	VHIPQ1L333M-1Y	J	PQ1L333M2SP	AD	Q5002	VS2SC3928AR-1Y	J	2SC3928AR	AB
IC8001	VHIPST600IM-1Y	J	IC-PST600IMT	AE	Q5003	VS2SC3928AR-1Y	J	2SC3928AR	AB
IC8002	VHISNAHC14H-1Y	J	SN74AHC2G14HDC	AE	Q5005	VSHN1B04FU/-1Y	J	HN1B04FU	AC
IC8003	VHIPW164B10-1Q	J	PW164-10TK	BU	Q8001	VSRN4904///-1Y	J	RN4904	AB
IC8004	VHISN1G32DC-1Y	J	SN74AHC1G32HDC	AD	Q8004	VBSN20///-1Y	J	BSN20	AD
IC8007	VHISN2G66CT-1Y	J	SN74AHC2G66HDC	AE	Q8201	VSHN1B04FU/-1Y	J	HN1B04FU	AC
IC8008	VSHN1K03FU+-1Y	J	HN1K03FU	AD	DIODES AND THERMISTER				
IC8009	VHISN1G66DC-1Y	J	SN74AHC1G66HDC	AD	D1701	VHDHSU119//1Y	J	HSU119	AB
IC8010	VHIP2040CTR-1Y	J	P2040CTR	AM	D1702	VHDHSU119//1Y	J	HSU119	AB
IC8011	VHIP2042ATR-1Y	J	P2042ATR	AM	D1703	VHDHSU119//1Y	J	HSU119	AB
IC8202	RH-IXA473WJZZQ	J	A473WJ	AS	D1704	VHDHSU119//1Y	J	HSU119	AB
IC8203	VHIBR24C64F-1Y	J	BR24C64F-E2	AL	D1705	VHDHSU119//1Y	J	HSU119	AB
TRANSISTORS					D1706	VHDHSU119//1Y	J	HSU119	AB
Q1101	VSHN1B04FU-1Y	J	HN1B04FU	AC	D1707	VHDHSU119//1Y	J	HSU119	AB
Q1102	VSHN1B04FU/-1Y	J	HN1B04FU	AC	D1708	VHDHSU119//1Y	J	HSU119	AB
Q1103	VS2SC3928AR-1Y	J	2SC3928AR	AB	D1710	VHDDAN202K/-1Y	J	DAN202K	AB
Q1105	VS2SA1530AR-1Y	J	2SA1530AR	AB	D1711	VHDDAN202K/-1Y	J	DAN202K	AB
Q1108	VS2SC3928AR-1Y	J	2SC3928AR	AB	D1712	VHDDAN202K/-1Y	J	DAN202K	AB
Q1109	VS2SA1530AR-1Y	J	2SA1530AR	AB	D1713	VHDHSU119//1Y	J	HSU119	AB
Q1201	VSHN1B04FU-1Y	J	HN1B04FU	AC	D1714	VHDHSU119//1Y	J	HSU119	AB
Q1202	VSHN1B04FU/-1Y	J	HN1B04FU	AC	D1715	VHDHSU119//1Y	J	HSU119	AB
Q1203	VS2SC3928AR-1Y	J	2SC3928AR	AB	D1716	VHDHSU119//1Y	J	HSU119	AB
Q1204	VS2SA1530AR-1Y	J	2SA1530AR	AB	D1717	VHDHSU119//1Y	J	HSU119	AB
Q1205	VS2SC3928AR-1Y	J	2SC3928AR	AB	D1718	VHDHSU119//1Y	J	HSU119	AB
Q1206	VS2SA1530AR-1Y	J	2SA1530AR	AB	D2002	RH-EX1247CEZZY	J	Zener Diode,5.6V	AB
Q1301	VSHN1B04FU-1Y	J	HN1B04FU	AC	D2004	RH-EX1247CEZZY	J	Zener Diode,5.6V	AB
Q1302	VSHN1B04FU/-1Y	J	HN1B04FU	AC	D2005	RH-EX1271CEZZY	J	Zener Diode,12V	AB
Q1303	VS2SC3928AR-1Y	J	2SC3928AR	AB	D2006	RH-EX1271CEZZY	J	Zener Diode,12V	AB
Q1304	VS2SA1530AR-1Y	J	2SA1530AR	AB	D2007	RH-EX1271CEZZY	J	Zener Diode,12V	AB
Q1307	VS2SC3928AR-1Y	J	2SC3928AR	AB	D2008	RH-EX1271CEZZY	J	Zener Diode,12V	AB
Q1308	VS2SA1530AR-1Y	J	2SA1530AR	AB	D2009	RH-EX1244CEZZY	J	Zener Diode,5.1V	AB
Q1701	VSDTC114EE/-1Y	J	DTC114EE	AB	D2551	RH-PX0210TAZZY	J	LED, GREEN, RED	AC
Q1703	VSRN1704///-1Y	J	RN1704//	AC	D2552	RH-PX0210TAZZY	J	LED, GREEN, RED	AC
Q1704	VS2SD1664Q+-1Y	J	2SD1664Q+	AC	D2553	RH-PX0196TAZZY	J	LED	AC
Q2001	VSRN1704///-1Y	J	RN1704//	AC	D3105	VHDKDS226/-1Y	J	VHDKDS226	AB
Q2004	VS2SC3928AR-1Y	J	2SC3928AR	AB	D3108	VHDKDS226/-1Y	J	VHDKDS226	AB
Q2005	VSDTC114EE/-1Y	J	DTC114EE	AB	D3110	VHDKDS226/-1Y	J	VHDKDS226	AB
Q2006	VSRN1704///-1Y	J	RN1704//	AC	D3115	VHDKDS226/-1Y	J	VHDKDS226	AB
Q2007	VSDTC114EE/-1Y	J	DTC114EE	AB	D3116	VHDKDS226/-1Y	J	VHDKDS226	AB
Q2551	VSDTC144EUA-1Y	J	DTC144EUA	AB	D3117	VHDKDS226/-1Y	J	VHDKDS226	AB
Q2552	VSRN1704///-1Y	J	RN1704//	AC	D3301	RH-EX0515CEZZY	J	Zener Diode,5.1V	AB
Q2553	VSRN1704///-1Y	J	RN1704//	AC	D3302	RH-EX0515CEZZY	J	Zener Diode,5.1V	AB
Q2601	VS2SC2735/-1Y	J	2SC2735	AB	D3501	RH-EX1262CEZZY	J	Zener Diode,9.1V	AB
Q2602	VS2SC2735/-1Y	J	2SC2735	AB	D3502	RH-EX1247CEZZY	J	Zener Diode,5.6V	AB
Q2603	VSHN2C01FU/-1Y	J	HN2C01FU	AC	D3503	RH-EX1247CEZZY	J	Zener Diode,5.6V	AB
Q3101	VS2SC3928AR-1Y	J	2SC3928AR	AB	D4001	VHDHSU119//1Y	J	HSU119	AB
Q3102	VS2SC3928AR-1Y	J	2SC3928AR	AB	D4003	RH-EX1247CEZZY	J	Zener Diode,5.6V	AB
Q3103	VS2SC3928AR-1Y	J	2SC3928AR	AB	D4004	RH-EX1247CEZZY	J	Zener Diode,5.6V	AB
Q3104	VS2SC3928AR-1Y	J	2SC3928AR	AB	D5001	RH-EX1247CEZZY	J	Zener Diode,5.6V	AB
Q3105	VSDTA114EE/-1Y	J	DTA114EE	AB	D5002	RH-EX1247CEZZY	J	Zener Diode,5.6V	AB
Q3106	VS2SA1530AR-1Y	J	2SA1530AR	AB	D8001	VHDKDS226/-1Y	J	VHDKDS226	AB
Q3107	VSDTC114EE/-1Y	J	DTC114EE	AB	PACKAGED CIRCUITS				
Q3108	VS2SC2735/-1Y	J	2SC2735	AB	X2001	RCRSC0141TAZZY	J	Crystal	AG
					X3101	RCRSA025WJZZ	J	Crystal	AF
					X8001	RCRUAA013WJZZY	J	Crystal	AP
					X8002	RCRUAA017WJZZY	J	Crystal	AM

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

DUNTKB599FE01

MAIN UNIT (Continued)

COILS AND TRANSFORMERS

FL3103	RFILNA006WJZZY	J	Filter	AD
FL3104	RFILNA006WJZZY	J	Filter	AD
FL3509	RCiLF0306CEZZY	J	Filter	AH
FL3510	RCiLFA034WJZZY	J	Filter	AE
L1101	VPCKM100J1R3NY	J	Peaking 10μH	AB
L1102	VPCKM100J1R3NY	J	Peaking 10μH	AB
L1201	VPCKM100J1R3NY	J	Peaking 10μH	AB
L1202	VPCKM100J1R3NY	J	Peaking 10μH	AB
L1301	VPCKM100J1R3NY	J	Peaking 10μH	AB
L1302	VPCKM100J1R3NY	J	Peaking 10μH	AB
L3104	VPCKM4R7JR88NY	J	Peaking 4.7μH	AB
L3105	VPCKM100J1R3NY	J	Peaking 10μH	AB
L3106	VPCKM4R7JR88NY	J	Peaking 4.7μH	AB
L3502	VPCKM220J2R1NY	J	Peaking 22μH	AB
L3505	VPCKM101J6R0NY	J	Peaking 100μH	AB
L3506	VPCKM101J6R0NY	J	Peaking 100μH	AB
L3507	VPCKM101J6R0NY	J	Peaking 100μH	AB
L3508	VPCKM220J2R1NY	J	Peaking 22μH	AB

CAPACITORS

C1101	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1102	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1103	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1104	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1105	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1106	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1107	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1108	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1109	VCKYCY1AF105ZY	J	1	10V	Ceramic	AC
C1110	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1111	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1112	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1113	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1114	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1115	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1116	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1117	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1118	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1119	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1120	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1121	VCKYCY1AF105ZY	J	1	10V	Ceramic	AC
C1122	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1123	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1124	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1125	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1126	VCEAPF1EW106MY	J	10	25V	Electrolytic	AC
C1127	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1128	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1130	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1131	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1140	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1141	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1142	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1143	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1144	VCKYCY1AF105ZY	J	1	10V	Ceramic	AC
C1145	VCKYCY1AF105ZY	J	1	10V	Ceramic	AC
C1146	VCKYCY1AF105ZY	J	1	10V	Ceramic	AC
C1147	VCKYCY1AF105ZY	J	1	10V	Ceramic	AC
C1148	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1149	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1150	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1151	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1152	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1153	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1154	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1155	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1156	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1157	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1158	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1159	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

C1160	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1161	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1201	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1202	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1203	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1204	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1205	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1206	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1207	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1208	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1209	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1210	VCKYCY1AF105ZY	J	1	10V	Ceramic	AC
C1211	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1212	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1213	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1214	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1215	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1216	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1217	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1218	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1219	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1220	VCKYCY1AF105ZY	J	1	10V	Ceramic	AC
C1222	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1223	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1224	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1225	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1227	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1228	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1230	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1240	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1241	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1242	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1243	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1248	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1249	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1250	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1251	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1252	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1253	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1254	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1255	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1256	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1257	VCCCCY1HH4R0CY	J	4p	50V	Ceramic	AA
C1258	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1259	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1260	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1261	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1301	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1302	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1303	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1304	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1305	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1306	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1307	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1308	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1309	VCKYCY1AF105ZY	J	1	10V	Ceramic	AC
C1310	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1311	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1312	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1313	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1314	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1315	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1316	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1317	VCKYCY1AF105ZY	J	1	10V	Ceramic	AC
C1318	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1319	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1320	RC-KZA048WJZZY	J	10	25V	Ceramic	AD
C1321	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1322	VCEAPF1EW106MY	J	10	25V	Electrolytic	AC
C1323	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1325	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1326	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1327	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1328	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA
C1330	VCKYCY1EF104ZY	J	0.1	25V	Ceramic	AA

Ref. No.	Part No.	★	Description	Code	Ref. No.	Part No.	★	Description	Code
DUNTKB599FE01									
MAIN UNIT (Continued)									
C1340	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C2011	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1341	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C2012	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1342	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C2013	VCEAPF0JW226MY	J 22	6.3V Electrolytic	AB
C1343	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C2014	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1348	VCCCCCY1HH4R0CY	J 4p	50V Ceramic	AA	C2015	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1349	VCCCCCY1HH4R0CY	J 4p	50V Ceramic	AA	C2016	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1350	VCCCCCY1HH4R0CY	J 4p	50V Ceramic	AA	C2017	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1351	VCCCCCY1HH4R0CY	J 4p	50V Ceramic	AA	C2018	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1352	VCCCCCY1HH4R0CY	J 4p	50V Ceramic	AA	C2019	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1353	VCCCCCY1HH4R0CY	J 4p	50V Ceramic	AA	C2020	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1354	VCCCCCY1HH4R0CY	J 4p	50V Ceramic	AA	C2023	VCEAPF1HW225MY	J 2.2	50V Electrolytic	AB
C1355	VCCCCCY1HH4R0CY	J 4p	50V Ceramic	AA	C2024	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1356	VCCCCCY1HH4R0CY	J 4p	50V Ceramic	AA	C2025	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1357	VCCCCCY1HH4R0CY	J 4p	50V Ceramic	AA	C2026	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1358	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C2027	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1359	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C2028	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1360	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C2029	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1361	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C2030	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1701	VCEAPF1CW336MY	J 33	16V Electrolytic	AD	C2031	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1702	VCEAPF1CW336MY	J 33	16V Electrolytic	AD	C2032	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1703	VCEAPF1CW336MY	J 33	16V Electrolytic	AD	C2601	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1704	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C2602	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1705	VCEAPF1CW107MY	J 100	16V Electrolytic	AC	C2603	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1706	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C2604	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1707	VCEAPF1CW107MY	J 100	16V Electrolytic	AC	C2605	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1708	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C2606	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1709	VCEAPF1CW107MY	J 100	16V Electrolytic	AC	C2607	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1710	VCEAPF1CW336MY	J 33	16V Electrolytic	AD	C2608	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1711	VCEAPF1CW476MY	J 47	16V Electrolytic	AC	C2609	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1712	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C2610	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1713	VCEAPF1CW107MY	J 100	16V Electrolytic	AC	C2611	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1714	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C2612	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1715	VCEAPF1CW107MY	J 100	16V Electrolytic	AC	C2613	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1716	VCEAPF1EW226MY	J 22	25V Electrolytic	AD	C2614	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1717	VCEAPF1EW226MY	J 22	25V Electrolytic	AD	C2615	VCEAPF1CW106MY	J 10	16V Electrolytic	AB
C1718	VCEAPF1EW226MY	J 22	25V Electrolytic	AD	C2616	VCAAPC0GJ336MY	J 33	4.0V Electrolytic	AE
C1719	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C2618	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1722	VCEAPF1EW336MY	J 33	25V Electrolytic	AD	C2619	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1725	VCEAPF1CW336MY	J 33	16V Electrolytic	AD	C2620	RC-KZ0074TAZZY	J 10	6.3V Ceramic	AF
C1726	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C2621	VCEAPF1CW107MY	J 100	16V Electrolytic	AC
C1727	VCEAPF1EW226MY	J 22	25V Electrolytic	AD	C2622	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1730	VCEAPF0JW226MY	J 22	6.3V Electrolytic	AB	C2623	VCCCCCY1HH3R0CY	J 3.0p	50V Ceramic	AA
C1732	VCEAPF1EW226MY	J 22	25V Electrolytic	AD	C2624	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1733	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C2626	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1734	VCEAPF1CW107MY	J 100	16V Electrolytic	AC	C2627	RC-KZA048WJZZY	J 10	25V Ceramic	AD
C1735	VCEAPF1CW336MY	J 33	16V Electrolytic	AD	C3102	VCKYCY1AF105ZY	J 1	10V Ceramic	AC
C1737	VCEAPF1EW336MY	J 33	25V Electrolytic	AD	C3103	VCKYCY1AF105ZY	J 1	10V Ceramic	AC
C1738	VCEAPF1EW336MY	J 33	25V Electrolytic	AD	C3104	VCKYCY1AF105ZY	J 1	10V Ceramic	AC
C1739	VCEAPF1EW336MY	J 33	25V Electrolytic	AD	C3105	VCKYCY1AF105ZY	J 1	10V Ceramic	AC
C1740	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C3106	VCKYCY1AF105ZY	J 1	10V Ceramic	AC
C1741	VCEAPF1EW226MY	J 22	25V Electrolytic	AD	C3107	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1742	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C3108	VCCCCCY1HH470JY	J 47p	50V Ceramic	AA
C1743	VCEAPF1EW226MY	J 22	25V Electrolytic	AD	C3109	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1744	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C3110	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1745	VCEAPF1EW226MY	J 22	25V Electrolytic	AD	C3111	VCKYCY1AF105ZY	J 1	10V Ceramic	AC
C1746	VCEAPF1EW336MY	J 33	25V Electrolytic	AD	C3112	VCKYCY1HB103KY	J 0.01	50V Ceramic	AA
C1747	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C3113	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1748	VCEAPF1EW226MY	J 22	25V Electrolytic	AD	C3114	VCEAPF1CW476MY	J 47	16V Electrolytic	AC
C1749	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C3115	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1750	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C3116	VCEAPF1CW106MY	J 10	16V Electrolytic	AB
C1751	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C3117	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1752	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C3118	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C1753	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C3119	VCEAPF1CW106MY	J 10	16V Electrolytic	AB
C1754	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C3120	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C2001	VCKYCY1HB103KY	J 0.01	50V Ceramic	AA	C3121	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C2003	VCKYCY1HB103KY	J 0.01	50V Ceramic	AA	C3122	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C2005	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	C3123	VCEAPF1CW106MY	J 10	16V Electrolytic	AB
C2006	VCKYCY1HB103KY	J 0.01	50V Ceramic	AA	C3124	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C2007	VCEAPF1CW106MY	J 10	16V Electrolytic	AB	C3125	VCEAPF1CW106MY	J 10	16V Electrolytic	AB
C2008	VCCCCCY1HH220JY	J 22p	50V Ceramic	AA	C3126	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C2009	VCCCCCY1HH220JY	J 22p	50V Ceramic	AA	C3127	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
					C3129	VCKYCY1AF105ZY	J 1	10V Ceramic	AC
					C3131	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
					C3132	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
					C3133	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA

Ref. No.	Part No.	★	Description	Code
DUNTKB599FE01				
MAIN UNIT (Continued)				
C3134	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3135	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3136	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3137	VCKYCY1CF474ZY	J 0.47	16V Ceramic	AB
C3138	VCEAPF1CW106MY	J 10	16V Electrolytic	AB
C3139	VCKYCY1CF474ZY	J 0.47	16V Ceramic	AB
C3140	VCKYCY1CF474ZY	J 0.47	16V Ceramic	AB
C3141	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3142	VCEAPF1CW106MY	J 10	16V Electrolytic	AB
C3143	VCKYCY1HB222KY	J 2200p	50V Ceramic	AA
C3144	VCEAPF1CW106MY	J 10	16V Electrolytic	AB
C3145	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3146	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3147	VCKYCY1HB103KY	J 0.01	50V Ceramic	AA
C3148	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3151	VCEAPF1HW474MY	J 0.47	50V Electrolytic	AC
C3152	VCEAPF1HW225MY	J 2.2	50V Electrolytic	AB
C3153	VCEAPF1CW106MY	J 10	16V Electrolytic	AB
C3154	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3155	VCKYCY1HB103KY	J 0.01	50V Ceramic	AA
C3156	VCKYCY1HB222KY	J 2200p	50V Ceramic	AA
C3158	VCCCCY1HH9R0DY	J 9.0p	50V Ceramic	AA
C3159	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3161	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3163	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3166	VCEAPF0JW107MY	J 100	6.3V Electrolytic	AC
C3167	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3169	VCKYCY1HB103KY	J 0.01	50V Ceramic	AA
C3171	VCEAPF0JW476MY	J 47	6.3V Electrolytic	AB
C3176	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3177	VCEAPF0JW476MY	J 47	6.3V Electrolytic	AB
C3180	VCEAPF1HW475MY	J 4.7	25V Electrolytic	AB
C3181	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3301	VCCCCY1HH101JY	J 100p	50V Ceramic	AA
C3302	VCCCCY1HH101JY	J 100p	50V Ceramic	AA
C3303	VCE9PF1CW106MY	J 10	16V Elect.(N,P)	AC
C3304	VCE9PF1CW106MY	J 10	16V Elect.(N,P)	AC
C3306	VCCCCY1HH471JY	J 470p	50V Ceramic	AA
C3307	VCEAPF1CW107MY	J 100	16V Electrolytic	AC
C3308	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3309	VCEAPF1CW106MY	J 10	16V Electrolytic	AB
C3310	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3311	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3501	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3502	VCEAPF1CW106MY	J 10	16V Electrolytic	AB
C3503	VCEAPF1CW106MY	J 10	16V Electrolytic	AB
C3508	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3512	VCCCCY1HH100DY	J 10p	50V Ceramic	AA
C3515	VCCCCY1HH120JY	J 12p	50V Ceramic	AA
C3516	VCCCCY1HH270JY	J 27p	50V Ceramic	AA
C3520	VCEAPF1HW105MY	J 1	50V Electrolytic	AB
C3523	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3526	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3530	VCEAPF1CW106MY	J 10	16V Electrolytic	AB
C3531	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3551	VCKYCY1HB103KY	J 0.01	50V Ceramic	AA
C3555	VCEAPF0JW476MY	J 47	6.3V Electrolytic	AB
C3557	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3559	VCEAPF0JW476MY	J 47	6.3V Electrolytic	AB
C3560	VCKYCY1HB103KY	J 0.01	50V Ceramic	AA
C3561	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3562	VCEAPF0JW476MY	J 47	6.3V Electrolytic	AB
C3564	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3567	VCCCCY1EH681JY	J 680p	25V Ceramic	AB
C3571	VCKYCY1HB103KY	J 0.01	50V Ceramic	AA
C3572	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3573	VCKYCY1HB103KY	J 0.01	50V Ceramic	AA
C3574	VCEAPF0JW476MY	J 47	6.3V Electrolytic	AB
C3576	VCKYCY1HB103KY	J 0.01	50V Ceramic	AA
C3577	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C3579	VCKYCY1HB103KY	J 0.01	50V Ceramic	AA

Ref. No.	Part No.	★	Description	Code
C3581	VCKYCY1HB103KY	J 0.01	50V Ceramic	AA
C3582	VCKYCY1HB103KY	J 0.01	50V Ceramic	AA
C4001	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C5001	VCCCCY1HH330JY	J 33p	50V Ceramic	AA
C5002	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C5003	VCCCCY1HH101JY	J 100p	50V Ceramic	AA
C5004	VCCCCY1HH330JY	J 33p	50V Ceramic	AA
C5005	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C5006	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C5007	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C5008	VCCCCY1EH102JY	J 1000p	25V Ceramic	AB
C5009	VCCCCY1EH102JY	J 1000p	25V Ceramic	AB
C5010	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C5011	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C5012	VCKYCY1HB103KY	J 0.01	50V Ceramic	AA
C5013	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C5014	VCEAPF1CW106MY	J 10	16V Electrolytic	AB
C5015	VCKYCY1HB103KY	J 0.01	50V Ceramic	AA
C5018	VCEAPF1CW106MY	J 10	16V Electrolytic	AB
C5019	VCCCCY1EH102JY	J 1000p	25V Ceramic	AB
C5021	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C5022	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C5029	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C5036	VCCCCY1HH471JY	J 470p	50V Ceramic	AA
C5039	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C5044	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C5055	VCKYCY1AF105ZY	J 1	10V Ceramic	AC
C5056	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C5057	VCEAPF1HW474MY	J 0.47	50V Electrolytic	AC
C5058	VCKYCY1HB222KY	J 2200p	50V Ceramic	AA
C5059	VCCCCY1HH5R0CY	J 5.0p	50V Ceramic	AA
C5060	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C5062	VCKYCY1AF105ZY	J 1	10V Ceramic	AC
C5063	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C5064	VCCCCY1HH101JY	J 100p	50V Ceramic	AA
C5065	VCEAPF1CW106MY	J 10	16V Electrolytic	AB
C6003	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C6006	VCEAPF0JW226MY	J 22	6.3V Electrolytic	AB
C6007	VCKYCY1EB473KY	J 0.047	25V Ceramic	AA
C6008	VCKYCY1EB473KY	J 0.047	25V Ceramic	AA
C6009	VCKYCY1HB102KY	J 1000p	50V Ceramic	AA
C6010	VCKYCY1EB473KY	J 0.047	25V Ceramic	AA
C6012	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C6013	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C6014	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C6015	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C6016	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C6017	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C6018	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C6019	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C6021	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C6022	VCKYCY1EB822KY	J 8200p	25V Ceramic	AA
C6023	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C6024	VCKYCY1CB823KY	J 0.082	16V Ceramic	AH
C6025	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C6026	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C6027	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C6028	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C6030	VCEAPF0JW226MY	J 22	6.3V Electrolytic	AB
C6032	VCEAPF0JW226MY	J 22	6.3V Electrolytic	AB
C6033	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C6034	VCEAPF0JW226MY	J 22	6.3V Electrolytic	AB
C6035	VCEAPF0JW226MY	J 22	6.3V Electrolytic	AB
C6036	VCEAPF0GW107MY	J 100	4.0V Electrolytic	AC
C8001	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C8002	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C8003	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C8004	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C8005	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C8006	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C8007	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C8008	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C8009	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C8010	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA
C8012	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA

Ref. No.	Part No.	★	Description	Code	Ref. No.	Part No.	★	Description	Code
DUNTKB599FE01									
MAIN UNIT (Continued)									
C8013	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1153	VRS-CY1JF153FY	J 15k	1/16W Metal Oxide	AA
C8014	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1154	VRS-CY1JF153FY	J 15k	1/16W Metal Oxide	AA
C8015	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1155	VRS-CY1JF682FY	J 6.8k	1/16W Metal Oxide	AA
C8016	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1156	VRS-CY1JF682FY	J 6.8k	1/16W Metal Oxide	AA
C8017	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1157	VRS-CY1JF682FY	J 6.8k	1/16W Metal Oxide	AA
C8018	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1158	VRS-CY1JF562FY	J 5.6k	1/16W Metal Oxide	AA
C8019	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1159	VRS-CY1JF562FY	J 5.6k	1/16W Metal Oxide	AA
C8020	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1160	VRS-CY1JF562FY	J 5.6k	1/16W Metal Oxide	AA
C8021	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1161	VRS-CY1JF103FY	J 10k	1/16W Metal Oxide	AA
C8022	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1162	VRS-CY1JF682FY	J 6.8k	1/16W Metal Oxide	AA
C8023	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1166	VRS-CY1JF132FY	J 1.3k	1/16W Metal Oxide	AA
C8024	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1167	VRS-CY1JF152FY	J 1.5k	1/16W Metal Oxide	AA
C8025	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1168	VRS-CY1JF132FY	J 1.3k	1/16W Metal Oxide	AA
C8026	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1169	VRS-CY1JF132FY	J 1.3k	1/16W Metal Oxide	AA
C8027	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1170	VRS-CY1JF152FY	J 1.5k	1/16W Metal Oxide	AA
C8028	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1171	VRS-CY1JF152FY	J 1.5k	1/16W Metal Oxide	AA
C8029	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1172	VRS-CY1JF102FY	J 1k	1/16W Metal Oxide	AA
C8030	VCEAPF1CW106MY	J 10	16V Electrolytic	AB	R1173	VRS-CY1JF102FY	J 1k	1/16W Metal Oxide	AA
C8031	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1174	VRS-CY1JF102FY	J 1k	1/16W Metal Oxide	AA
C8032	VCEAPF1CW106MY	J 10	16V Electrolytic	AB	R1189	VRS-CY1JF101JY	J 100	1/16W Metal Oxide	AA
C8033	VCAAPC1CJ396MY	J 39	16V Electrolytic	AG	R1190	VRS-CY1JF222FY	J 2.2k	1/16W Metal Oxide	AA
C8034	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1191	VRS-CY1JF332FY	J 3.3k	1/16W Metal Oxide	AA
C8035	VCAAPC1CJ396MY	J 39	16V Electrolytic	AG	R1192	VRS-CY1JF222FY	J 2.2k	1/16W Metal Oxide	AA
C8036	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1193	VRS-CY1JF332FY	J 3.3k	1/16W Metal Oxide	AA
C8037	VCCCCCY1HH100DY	J 10p	50V Ceramic	AA	R1194	VRS-CY1JF222FY	J 2.2k	1/16W Metal Oxide	AA
C8038	VCCCCCY1HH100DY	J 10p	50V Ceramic	AA	R1195	VRS-CY1JF332FY	J 3.3k	1/16W Metal Oxide	AA
C8039	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1196	VRS-CY1JF203FY	J 20k	1/16W Metal Oxide	AA
C8040	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1197	VRS-CY1JF101JY	J 100	1/16W Metal Oxide	AA
C8041	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1198	VRS-CY1JF682FY	J 6.8k	1/16W Metal Oxide	AA
C8042	VCKYCY1EF104ZY	J 10p	50V Ceramic	AA	R1199	VRS-CY1JF393FY	J 39k	1/16W Metal Oxide	AA
C8202	VCKYCY1EB223KY	J 0.1	25V Ceramic	AA	R1201	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA
C8203	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1202	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA
C8204	VCKYCY1EF104ZY	J 0.1	25V Ceramic	AA	R1204	VRS-CY1JF332JY	J 3.3k	1/16W Metal Oxide	AA
RESISTORS					R1225	VRS-CY1JF101JY	J 100	1/16W Metal Oxide	AA
R1101	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA	R1226	VRS-CY1JF222JY	J 2.2k	1/16W Metal Oxide	AA
R1102	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA	R1227	VRS-CY1JF222JY	J 2.2k	1/16W Metal Oxide	AA
R1103	VRS-CY1JF332JY	J 3.3k	1/16W Metal Oxide	AA	R1228	VRS-CY1JF3R3JY	J 3.3	1/16W Metal Oxide	AA
R1104	VRS-CY1JF000JY	J 0	1/16W Metal Oxide	AA	R1229	VRS-CY1JF3R3JY	J 3.3	1/16W Metal Oxide	AA
R1105	VRS-CY1JF101JY	J 100	1/16W Metal Oxide	AA	R1230	VRS-CY1JF3R3JY	J 3.3	1/16W Metal Oxide	AA
R1108	VRS-CY1JF393FY	J 39k	1/16W Metal Oxide	AA	R1232	VRS-CY1JF3R3JY	J 3.3	1/16W Metal Oxide	AA
R1109	VRS-CY1JF682FY	J 6.8k	1/16W Metal Oxide	AA	R1233	VRS-CY1JF3R3JY	J 3.3	1/16W Metal Oxide	AA
R1110	VRS-CY1JF101JY	J 100	1/16W Metal Oxide	AA	R1234	VRS-CY1JF3R3JY	J 3.3	1/16W Metal Oxide	AA
R1111	VRS-CY1JF103FY	J 10k	1/16W Metal Oxide	AA	R1235	VRS-CY1JF222JY	J 2.2k	1/16W Metal Oxide	AA
R1112	VRS-CY1JF203FY	J 20k	1/16W Metal Oxide	AA	R1236	VRS-CY1JF222JY	J 2.2k	1/16W Metal Oxide	AA
R1113	VRS-CJ1JF103JY	J 10k	1/16W Metal Oxide	AA	R1237	VRS-CY1JF101JY	J 100	1/16W Metal Oxide	AA
R1114	VRS-CY1JF393FY	J 39k	1/16W Metal Oxide	AA	R1252	VRS-CJ1JF103JY	J 10k	1/16W Metal Oxide	AA
R1117	VRS-CY1JF103FY	J 10k	1/16W Metal Oxide	AA	R1253	VRS-CJ1JF103JY	J 10k	1/16W Metal Oxide	AA
R1123	VRS-CY1JF203FY	J 20k	1/16W Metal Oxide	AA	R1301	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA
R1128	VRS-CY1JF103FY	J 10k	1/16W Metal Oxide	AA	R1302	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA
R1129	VRS-CJ1JF103JY	J 10k	1/16W Metal Oxide	AA	R1304	VRS-CY1JF332JY	J 3.3k	1/16W Metal Oxide	AA
R1130	VRS-CJ1JF680JY	J 68	1/16W Metal Oxide	AA	R1325	VRS-CY1JF101JY	J 100	1/16W Metal Oxide	AA
R1131	VRS-CY1JF101JY	J 100	1/16W Metal Oxide	AA	R1326	VRS-CY1JF222JY	J 2.2k	1/16W Metal Oxide	AA
R1132	VRS-CY1JF222JY	J 2.2k	1/16W Metal Oxide	AA	R1327	VRS-CY1JF222JY	J 2.2k	1/16W Metal Oxide	AA
R1133	VRS-CY1JF3R3JY	J 3.3	1/16W Metal Oxide	AA	R1328	VRS-CY1JF3R3JY	J 3.3	1/16W Metal Oxide	AA
R1134	VRS-CY1JF222JY	J 2.2k	1/16W Metal Oxide	AA	R1329	VRS-CY1JF3R3JY	J 3.3	1/16W Metal Oxide	AA
R1135	VRS-CY1JF3R3JY	J 3.3	1/16W Metal Oxide	AA	R1330	VRS-CY1JF3R3JY	J 3.3	1/16W Metal Oxide	AA
R1136	VRS-CY1JF3R3JY	J 3.3	1/16W Metal Oxide	AA	R1332	VRS-CY1JF101JY	J 100	1/16W Metal Oxide	AA
R1137	VRS-CY1JF101JY	J 100	1/16W Metal Oxide	AA	R1333	VRS-CY1JF222JY	J 2.2k	1/16W Metal Oxide	AA
R1138	VRS-CY1JF222JY	J 2.2k	1/16W Metal Oxide	AA	R1334	VRS-CY1JF222JY	J 2.2k	1/16W Metal Oxide	AA
R1139	VRS-CY1JF3R3JY	J 3.3	1/16W Metal Oxide	AA	R1335	VRS-CY1JF3R3JY	J 3.3	1/16W Metal Oxide	AA
R1140	VRS-CY1JF222JY	J 2.2k	1/16W Metal Oxide	AA	R1336	VRS-CY1JF3R3JY	J 3.3	1/16W Metal Oxide	AA
R1141	VRS-CY1JF3R3JY	J 3.3	1/16W Metal Oxide	AA	R1337	VRS-CY1JF3R3JY	J 3.3	1/16W Metal Oxide	AA
R1142	VRS-CY1JF3R3JY	J 3.3	1/16W Metal Oxide	AA	R1350	VRS-CJ1JF103JY	J 10k	1/16W Metal Oxide	AA
R1145	VRS-CY1JF332JY	J 3.3k	1/16W Metal Oxide	AA	R1352	VRS-CJ1JF103JY	J 10k	1/16W Metal Oxide	AA
R1147	VRS-CY1JF203FY	J 20k	1/16W Metal Oxide	AA	R1701	VRS-TX2HF3R3JY	J 3.3	1/2W Metal Oxide	AB
R1148	VRS-CY1JF103FY	J 10k	1/16W Metal Oxide	AA	R1702	VRS-TX2HF3R3JY	J 3.3	1/2W Metal Oxide	AB
R1149	VRS-CY1JF103FY	J 10k	1/16W Metal Oxide	AA	R1704	VRS-TX2HF3R3JY	J 3.3	1/2W Metal Oxide	AB
R1150	VRS-CY1JF203FY	J 20k	1/16W Metal Oxide	AA	R1711	VRS-CY1JF103JY	J 10k	1/16W Metal Oxide	AA
R1151	VRS-CY1JF203FY	J 20k	1/16W Metal Oxide	AA	R1712	VRS-CY1JF103JY	J 10k	1/16W Metal Oxide	AA
R1152	VRS-CY1JF153FY	J 15k	1/16W Metal Oxide	AA	R1713	VRS-CY1JF683FY	J 68k	1/16W Metal Oxide	AA
					R1714	VRS-CY1JF822FY	J 8.2k	1/16W Metal Oxide	AA
					R1715	VRS-CY1JF333FY	J 33k	1/16W Metal Oxide	AA
					R1716	VRS-TX2HF2R2JY	J 2.2	1/2W Metal Oxide	AB
					R1718	VRS-TX2HF2R2JY	J 2.2	1/2W Metal Oxide	AB
					R1719	VRS-TX2HF2R2JY	J 2.2	1/2W Metal Oxide	AB

Ref. No.	Part No.	★	Description	Code
DUNTKB599FE01				
MAIN UNIT (Continued)				
R1720	VRS-CY1JF103JY	J 10k	1/16W Metal Oxide	AA
R1721	VRS-TX2HF1R0JY	J 1	1/2W Metal Oxide	AB
R1722	VRS-TX2HF1R0JY	J 1	1/2W Metal Oxide	AB
R1723	VRS-CY1JF103JY	J 10k	1/16W Metal Oxide	AA
R1724	VRS-CY1JF103JY	J 10k	1/16W Metal Oxide	AA
R1725	VRS-CY1JF103JY	J 10k	1/16W Metal Oxide	AA
R1726	VRS-TX2HF1R5JY	J 1.5	1/2W Metal Oxide	AB
R1727	VRS-TX2HF1R5JY	J 1.5	1/2W Metal Oxide	AB
R1728	VRS-TX2HF1R0JY	J 1	1/2W Metal Oxide	AB
R1729	VRS-CY1JF152FY	J 1.5k	1/16W Metal Oxide	AA
R1730	VRS-CY1JF751FY	J 750	1/16W Metal Oxide	AA
R1731	VRS-CY1JF391JY	J 390	1/16W Metal Oxide	AA
R1732	VRS-TX2HF2R2JY	J 2.2	1/2W Metal Oxide	AB
R1735	VRS-TW2ED000JY	J 0	1/4W Metal Oxide	AB
R1736	VRS-CY1JF332FY	J 3.3k	1/16W Metal Oxide	AA
R1737	VRS-CY1JF103JY	J 10k	1/16W Metal Oxide	AA
R1740	VRS-TX2HF2R2JY	J 2.2	1/2W Metal Oxide	AB
R1742	VRN-CY1JF273DY	J 27k	1/16W 0. Metal Film	AB
R1743	VRN-CY1JF132DY	J 1.3k	1/16W 0. Metal Film	AB
R1744	VRN-CY1JF683DY	J 68k	1/16W 0. Metal Film	AB
R1745	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA
R1746	VRS-CY1JF683FY	J 68k	1/16W Metal Oxide	AA
R1747	VRS-CY1JF682FY	J 6.8k	1/16W Metal Oxide	AA
R1749	VRS-CY1JF273FY	J 27k	1/16W Metal Oxide	AA
R1750	VRS-CY1JF333FY	J 33k	1/16W Metal Oxide	AA
R1751	VRS-CY1JF392FY	J 3.9k	1/16W Metal Oxide	AA
R1752	VRS-CY1JF123FY	J 12k	1/16W Metal Oxide	AA
R1753	VRS-CY1JF682FY	J 6.8k	1/16W Metal Oxide	AA
R1754	VRS-CY1JF333FY	J 33k	1/16W Metal Oxide	AA
R1755	VRS-CY1JF224FY	J 220k	1/16W Metal Oxide	AA
R1756	VRS-CY1JF183FY	J 18k	1/16W Metal Oxide	AA
R1757	VRS-CY1JF562JY	J 5.6k	1/16W Metal Oxide	AA
R1758	VRS-CY1JF101JY	J 100	1/16W Metal Oxide	AA
R1759	VRS-CY1JF682JY	J 6.8k	1/16W Metal Oxide	AA
R1760	VRS-CY1JF393FY	J 39k	1/16W Metal Oxide	AA
R1761	VRS-CY1JF123FY	J 12k	1/16W Metal Oxide	AA
R1762	VRS-CY1JF393FY	J 39k	1/16W Metal Oxide	AA
R1763	VRS-CY1JF203FY	J 20k	1/16W Metal Oxide	AA
R1764	VRS-CJ1JF472JY	J 4.7k	1/16W Metal Oxide	AA
R1765	VRS-CJ1JF472JY	J 4.7k	1/16W Metal Oxide	AA
R1766	VRS-CJ1JF472JY	J 4.7k	1/16W Metal Oxide	AA
R1767	VRS-CY1JF103JY	J 10k	1/16W Metal Oxide	AA
R1768	VRS-TX2HF2R2JY	J 2.2	1/2W Metal Oxide	AB
R1770	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA
R1771	VRS-TX2HF2R2JY	J 2.2	1/2W Metal Oxide	AB
R1773	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA
R1774	VRS-TX2HF2R2JY	J 2.2	1/2W Metal Oxide	AB
R1776	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA
R1779	VRS-CY1JF123FY	J 12k	1/16W Metal Oxide	AA
R1780	VRS-CY1JF682FY	J 6.8k	1/16W Metal Oxide	AA
R1781	VRS-CY1JF273FY	J 27k	1/16W Metal Oxide	AA
R1782	VRS-CY1JF682FY	J 6.8k	1/16W Metal Oxide	AA
R1783	VRS-CY1JF222FY	J 2.2k	1/16W Metal Oxide	AA
R1784	VRS-CY1JF682FY	J 6.8k	1/16W Metal Oxide	AA
R1785	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA
R1786	VRS-CY1JF332FY	J 3.3k	1/16W Metal Oxide	AA
R1787	VRS-CY1JF103FY	J 10k	1/16W Metal Oxide	AA
R1789	VRS-CY1JF472JY	J 4.7k	1/16W Metal Oxide	AA
R1790	VRS-CY1JF332FY	J 3.3k	1/16W Metal Oxide	AA
R1791	VRS-CY1JF912FY	J 9.1k	1/16W Metal Oxide	AA
R1795	VRS-CY1JF332FY	J 3.3k	1/16W Metal Oxide	AA
R1800	VRS-CY1JF562FY	J 5.6k	1/16W Metal Oxide	AA
R1805	VRS-TX2HF2R2JY	J 2.2	1/2W Metal Oxide	AB
R1806	VRS-CY1JF223FY	J 22k	1/16W Metal Oxide	AA
R1808	VRS-CY1JF103JY	J 10k	1/16W Metal Oxide	AA
R1809	VRS-TX2HF2R2JY	J 2.2	1/2W Metal Oxide	AB
R2001	VRS-CY1JF000JY	J 0	1/16W Metal Oxide	AA
R2004	VRN-CY1JF103DY	J 10k	1/16W 0. Metal Film	AA
R2007	VRS-CH1JF102JY	J 1k	1/16W Metal Oxide	AA
R2008	VRS-CH1JF102JY	J 1k	1/16W Metal Oxide	AA
R2009	VRS-CY1JF000JY	J 0	1/16W Metal Oxide	AA

Ref. No.	Part No.	★	Description	Code
R2010	VRS-CY1JF332JY	J 3.3k	1/16W Metal Oxide	AA
R2012	VRS-CJ1JF100JY	J 10	1/16W Metal Oxide	AA
R2015	VRS-CH1JF102JY	J 1k	1/16W Metal Oxide	AA
R2017	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA
R2018	VRS-CY1JF103JY	J 10k	1/16W Metal Oxide	AA
R2019	VRS-CY1JF103JY	J 10k	1/16W Metal Oxide	AA
R2020	VRN-CY1JF103DY	J 10k	1/16W 0. Metal Film	AA
R2021	VRS-CH1JF102JY	J 1k	1/16W Metal Oxide	AA
R2023	VRS-CH1JF103JY	J 10k	1/16W Metal Oxide	AA
R2025	VRS-CJ1JF100JY	J 10	1/16W Metal Oxide	AA
R2026	VRS-CY1JF100JY	J 10	1/16W Metal Oxide	AA
R2028	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA
R2029	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA
R2030	VRS-CY1JF100JY	J 10	1/16W Metal Oxide	AA
R2031	VRS-CY1JF105JY	J 1M	1/16W Metal Oxide	AA
R2032	VRS-CH1JF103JY	J 10k	1/16W Metal Oxide	AA
R2033	VRS-CJ1JF472JY	J 4.7k	1/16W Metal Oxide	AA
R2035	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA
R2036	VRS-CJ1JF332JY	J 3.3k	1/16W Metal Oxide	AA
R2037	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA
R2038	VRS-CJ1JF101JY	J 100	1/16W Metal Oxide	AA
R2039	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA
R2042	VRS-CY1JF100JY	J 10	1/16W Metal Oxide	AA
R2043	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA
R2044	VRS-CJ1JF102JY	J 1k	1/16W Metal Oxide	AA
R2045	VRS-CY1JF103JY	J 10k	1/16W Metal Oxide	AA
R2047	VRS-CY1JF000JY	J 0	1/16W Metal Oxide	AA
R2053	VRS-CY1JF472JY	J 4.7k	1/16W Metal Oxide	AA
R2056	VRS-CY1JF152JY	J 1.5k	1/16W Metal Oxide	AA
R2057	VRS-CY1JF103JY	J 10k	1/16W Metal Oxide	AA
R2058	VRS-CY1JF472JY	J 4.7k	1/16W Metal Oxide	AA
R2502	VRS-CY1JF000JY	J 0	1/16W Metal Oxide	AA
R2551	VRS-TV1JD471JY	J 470	1/16W Metal Oxide	AA
R2552	VRS-TV1JD122JY	J 1.2k	1/16W Metal Oxide	AA
R2553	VRS-TV1JD471JY	J 470	1/16W Metal Oxide	AA
R2554	VRS-TV1JD122JY	J 1.2k	1/16W Metal Oxide	AA
R2555	VRS-TV1JD122JY	J 1.2k	1/16W Metal Oxide	AA
R2601	VRS-CY1JF000JY	J 0	1/16W Metal Oxide	AA
R2602	VRS-CY1JF000JY	J 0	1/16W Metal Oxide	AA
R2603	VRS-CY1JF000JY	J 0	1/16W Metal Oxide	AA
R2604	VRS-CY1JF000JY	J 0	1/16W Metal Oxide	AA
R2606	VRS-CH1JF560JY	J 56	1/16W Metal Oxide	AA
R2607	VRS-CH1JF560JY	J 56	1/16W Metal Oxide	AA
R2608	VRS-CH1JF560JY	J 56	1/16W Metal Oxide	AA
R2609	VRS-CY1JF104JY	J 100k	1/16W Metal Oxide	AA
R2611	VRS-CY1JF000JY	J 0	1/16W Metal Oxide	AA
R2614	VRS-CY1JF000JY	J 0	1/16W Metal Oxide	AA
R2615	VRS-CY1JF000JY	J 0	1/16W Metal Oxide	AA
R2616	VRS-CJ1JF332JY	J 3.3k	1/16W Metal Oxide	AA
R2617	VRS-CJ1JF101JY	J 100	1/16W Metal Oxide	AA
R2618	VRS-CY1JF000JY	J 0	1/16W Metal Oxide	AA
R2619	VRS-CY1JF000JY	J 0	1/16W Metal Oxide	AA
R2621	VRS-CY1JF000JY	J 0	1/16W Metal Oxide	AA
R2622	VRS-CY1JF000JY	J 0	1/16W Metal Oxide	AA
R2623	VRS-CY1JF000JY	J 0	1/16W Metal Oxide	AA
R2626	VRS-CJ1JF332JY	J 3.3k	1/16W Metal Oxide	AA
R2627	VRS-CJ1JF101JY	J 100	1/16W Metal Oxide	AA
R2628	VRS-CH1JF560JY	J 56	1/16W Metal Oxide	AA
R2630	VRS-CH1JF560JY	J 56	1/16W Metal Oxide	AA
R2631	VRS-CH1JF560JY	J 56	1/16W Metal Oxide	AA
R2632	VRS-CH1JF560JY	J 56	1/16W Metal Oxide	AA
R2634	VRS-CH1JF560JY	J 56	1/16W Metal Oxide	AA
R2635	VRS-CJ1JF100JY	J 10	1/16W Metal Oxide	AA
R2636	VRS-CH1JF100JY	J 10	1/16W Metal Oxide	AA
R2637	VRS-CY1JF220JY	J 22	1/16W Metal Oxide	AA
R2638	VRS-CY1JF100JY	J 10	1/16W Metal Oxide	AA
R2639	VRS-CY1JF220JY	J 22	1/16W Metal Oxide	AA
R2640	VRS-CY1JF220JY	J 22	1/16W Metal Oxide	AA
R2641	VRS-CY1JF100JY	J 10	1/16W Metal Oxide	AA
R2642	VRS-CY1JF100JY	J 10	1/16W Metal Oxide	AA
R2664	VRS-CY1JF000JY	J 0	1/16W Metal Oxide	AA
R2668	VRS-CY1JF103JY	J 10k	1/16W Metal Oxide	AA
R2669	VRS-TX2HF8R2JY	J 8.2	1/2W Metal Oxide	AB
R2672	VRS-CJ1JF101JY	J 100	1/16W Metal Oxide	AA
R2673	VRS-CY1JF102JY	J 1k	1/16W Metal Oxide	AA

Ref. No.	Part No.	★	Description	Code	Ref. No.	Part No.	★	Description	Code
DUNTKB599FE01									
MAIN UNIT (Continued)									
R2674	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA	R3305	VRS-CY1JF224JY	J	220k 1/16W	Metal Oxide AA
R2675	VRS-CJ1JF680JY	J	68 1/16W	Metal Oxide AA	R3306	VRS-CY1JF124JY	J	120k 1/16W	Metal Oxide AA
R2676	VRS-CY1JF221JY	J	220 1/16W	Metal Oxide AA	R3307	VRS-CJ1JF333JY	J	33k 1/16W	Metal Oxide AA
R3101	VRS-CY1JF101JY	J	100 1/16W	Metal Oxide AA	R3310	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA
R3102	VRS-CY1JF101JY	J	100 1/16W	Metal Oxide AA	R3311	VRS-CY1JF822JY	J	8.2k 1/16W	Metal Oxide AA
R3103	VRS-CY1JF101JY	J	100 1/16W	Metal Oxide AA	R3312	VRS-CY1JF393JY	J	39k 1/16W	Metal Oxide AA
R3104	VRS-CY1JF103JY	J	10k 1/16W	Metal Oxide AA	R3313	VRS-TX2HF8R2JY	J	8.2 1/2W	Metal Oxide AB
R3105	VRS-CY1JF330JY	J	33 1/16W	Metal Oxide AA	R3314	VRS-TV1JD000JY	J	0 1/10W	Metal Oxide AA
R3106	VRS-CY1JF221JY	J	220 1/16W	Metal Oxide AA	R3315	VRS-TX2HF1R0JY	J	1 1/2W	Metal Oxide AB
R3107	VRS-CY1JF330JY	J	33 1/16W	Metal Oxide AA	R3318	VRS-TX2HF1R0JY	J	1 1/2W	Metal Oxide AB
R3108	VRS-CY1JF000JY	J	0 1/16W	Metal Oxide AA	R3502	VRS-CY1JF000JY	J	0 1/16W	Metal Oxide AA
R3109	VRS-CY1JF221JY	J	220 1/16W	Metal Oxide AA	R3503	VRS-CY1JF000JY	J	0 1/16W	Metal Oxide AA
R3110	VRS-CY1JF330JY	J	33 1/16W	Metal Oxide AA	R3504	VRS-CY1JF000JY	J	0 1/16W	Metal Oxide AA
R3111	VRS-CY1JF221JY	J	220 1/16W	Metal Oxide AA	R3505	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA
R3112	VRS-CJ1JF223JY	J	22k 1/16W	Metal Oxide AA	R3506	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA
R3113	VRS-CY1JF101JY	J	100 1/16W	Metal Oxide AA	R3507	VRS-CY1JF112FY	J	1.1k 1/16W	Metal Oxide AA
R3114	VRS-CY1JF101JY	J	100 1/16W	Metal Oxide AA	R3509	VRS-CY1JF562FY	J	5.6k 1/16W	Metal Oxide AA
R3115	VRS-CY1JF471JY	J	470 1/16W	Metal Oxide AA	R3525	VRS-CY1JF223JY	J	22k 1/16W	Metal Oxide AA
R3117	VRS-CY1JF473FY	J	47k 1/16W	Metal Oxide AA	R3526	VRS-CY1JF223JY	J	22k 1/16W	Metal Oxide AA
R3118	VRS-CY1JF101JY	J	100 1/16W	Metal Oxide AA	R3532	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA
R3119	VRS-CJ1JF101JY	J	100 1/16W	Metal Oxide AA	R3537	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA
R3122	VRS-CY1JF000JY	J	0 1/16W	Metal Oxide AA	R3560	VRS-CY1JF821FY	J	820 1/16W	Metal Oxide AA
R3123	VRS-CY1JF000JY	J	0 1/16W	Metal Oxide AA	R3562	VRS-CY1JF471FY	J	470 1/16W	Metal Oxide AA
R3124	VRS-CY1JF000JY	J	0 1/16W	Metal Oxide AA	R3563	VRS-CY1JF181FY	J	180 1/16W	Metal Oxide AA
R3125	VRS-CY1JF101JY	J	100 1/16W	Metal Oxide AA	R3564	VRS-CY1JF152JY	J	1.5k 1/16W	Metal Oxide AA
R3126	VRS-CY1JF470JY	J	47 1/16W	Metal Oxide AA	R3565	VRS-CY1JF471FY	J	470 1/16W	Metal Oxide AA
R3128	VRS-CJ1JF223JY	J	22k 1/16W	Metal Oxide AA	R3569	VRS-CY1JF302JY	J	3k 1/16W	Metal Oxide AA
R3129	VRS-CY1JF223FY	J	22k 1/16W	Metal Oxide AA	R3571	VRS-CY1JF392JY	J	3.9k 1/16W	Metal Oxide AA
R3130	VRS-CJ1JF223JY	J	22k 1/16W	Metal Oxide AA	R3576	VRS-CY1JF391JY	J	390 1/16W	Metal Oxide AA
R3131	VRS-CY1JF101JY	J	100 1/16W	Metal Oxide AA	R3577	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA
R3132	VRS-CY1JF101JY	J	100 1/16W	Metal Oxide AA	R3578	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA
R3133	VRS-CY1JF101JY	J	100 1/16W	Metal Oxide AA	R3579	VRS-CY1JF681JY	J	680 1/16W	Metal Oxide AA
R3134	VRS-CY1JF101JY	J	100 1/16W	Metal Oxide AA	R3580	VRS-CY1JF100JY	J	10 1/16W	Metal Oxide AA
R3135	VRS-CY1JF101JY	J	100 1/16W	Metal Oxide AA	R3583	VRS-CY1JF100JY	J	10 1/16W	Metal Oxide AA
R3136	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA	R3585	VRS-CJ1JF101JY	J	100 1/16W	Metal Oxide AA
R3138	VRS-CY1JF101JY	J	100 1/16W	Metal Oxide AA	R3590	VRS-CY1JF331JY	J	330 1/16W	Metal Oxide AA
R3139	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA	R4004	VRS-TW2ED750JY	J	75 1/4W	Metal Oxide AA
R3141	VRS-CY1JF222JY	J	2.2k 1/16W	Metal Oxide AA	R4005	VRS-TW2ED750JY	J	75 1/4W	Metal Oxide AA
R3142	VRS-CJ1JF103JY	J	10k 1/16W	Metal Oxide AA	R4006	VRS-TW2ED750JY	J	75 1/4W	Metal Oxide AA
R3143	VRS-CY1JF681JY	J	680 1/16W	Metal Oxide AA	R4007	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA
R3144	VRS-CY1JF681JY	J	680 1/16W	Metal Oxide AA	R4008	VRS-CY1JF103JY	J	10k 1/16W	Metal Oxide AA
R3145	VRS-CY1JF103JY	J	10k 1/16W	Metal Oxide AA	R4009	VRS-CY1JF473JY	J	47k 1/16W	Metal Oxide AA
R3146	VRS-CJ1JF472JY	J	4.7k 1/16W	Metal Oxide AA	R401	VRS-TW2ED750JY	J	75 1/4W	Metal Oxide AA
R3147	VRS-CY1JF681JY	J	680 1/16W	Metal Oxide AA	R4010	VRS-CH1JF101JY	J	100 1/16W	Metal Oxide AA
R3148	VRS-CY1JF472JY	J	4.7k 1/16W	Metal Oxide AA	R4011	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA
R3149	VRS-CJ1JF101JY	J	100 1/16W	Metal Oxide AA	R402	VRS-TW2ED750JY	J	75 1/4W	Metal Oxide AA
R3151	VRS-CY1JF561JY	J	560 1/16W	Metal Oxide AA	R403	VRS-TW2ED750JY	J	75 1/4W	Metal Oxide AA
R3152	VRS-CY1JF561JY	J	560 1/16W	Metal Oxide AA	R5001	VRS-CY1JF271JY	J	270 1/16W	Metal Oxide AA
R3153	VRS-CY1JF335JY	J	3.3M 1/16W	Metal Oxide AA	R5002	VRS-CH1JF103JY	J	10k 1/16W	Metal Oxide AA
R3154	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA	R5003	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA
R3155	VRS-CY1JF472JY	J	4.7k 1/16W	Metal Oxide AA	R5004	VRS-CY1JF000JY	J	0 1/16W	Metal Oxide AA
R3156	VRS-CY1JF561JY	J	560 1/16W	Metal Oxide AA	R5005	VRS-CY1JF104JY	J	100k 1/16W	Metal Oxide AA
R3157	VRS-CY1JF560JY	J	56 1/16W	Metal Oxide AA	R5006	VRS-CH1JF103JY	J	10k 1/16W	Metal Oxide AA
R3158	VRS-CY1JF682JY	J	6.8k 1/16W	Metal Oxide AA	R5007	VRS-CH1JF103JY	J	10k 1/16W	Metal Oxide AA
R3160	VRS-CY1JF103JY	J	10k 1/16W	Metal Oxide AA	R5008	VRS-CY1JF271JY	J	270 1/16W	Metal Oxide AA
R3161	VRS-CY1JF471JY	J	470 1/16W	Metal Oxide AA	R5009	VRS-CJ1JF272JY	J	2.7k 1/16W	Metal Oxide AA
R3162	VRS-CY1JF103JY	J	10k 1/16W	Metal Oxide AA	R5010	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA
R3165	VRS-CY1JF101JY	J	100 1/16W	Metal Oxide AA	R5011	VRS-CY1JF103JY	J	10k 1/16W	Metal Oxide AA
R3167	VRS-CY1JF471JY	J	470 1/16W	Metal Oxide AA	R5012	VRS-CY1JF103JY	J	10k 1/16W	Metal Oxide AA
R3169	VRS-CY1JF681JY	J	680 1/16W	Metal Oxide AA	R5013	VRS-CY1JF274JY	J	270k 1/16W	Metal Oxide AA
R3170	VRS-CY1JF471JY	J	470 1/16W	Metal Oxide AA	R5014	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA
R3171	VRS-CY1JF273JY	J	27k 1/16W	Metal Oxide AA	R5015	VRS-CY1JF102FY	J	1k 1/16W	Metal Oxide AA
R3172	VRS-CY1JF392JY	J	3.9k 1/16W	Metal Oxide AA	R5016	VRS-CY1JF101JY	J	100 1/16W	Metal Oxide AA
R3176	VRS-CY1JF103JY	J	10k 1/16W	Metal Oxide AA	R5017	VRS-CY1JF562FY	J	5.6k 1/16W	Metal Oxide AA
R3186	VRS-CY1JF103JY	J	10k 1/16W	Metal Oxide AA	R5018	VRS-CY1JF103JY	J	10k 1/16W	Metal Oxide AA
R3187	VRS-CY1JF101JY	J	100 1/16W	Metal Oxide AA	R5024	VRS-CY1JF470JY	J	47 1/16W	Metal Oxide AA
R3190	VRS-CJ1JF101JY	J	100 1/16W	Metal Oxide AA	R5026	VRS-CY1JF132FY	J	1.3k 1/16W	Metal Oxide AA
R3215	VRS-CY1JF221JY	J	220 1/16W	Metal Oxide AA	R5031	VRS-CY1JF123JY	J	12k 1/16W	Metal Oxide AA
R3216	VRS-CY1JF471JY	J	470 1/16W	Metal Oxide AA	R5032	VRS-CY1JF470JY	J	47 1/16W	Metal Oxide AA
R3301	VRS-TV1JD000JY	J	0 1/10W	Metal Oxide AA	R5033	VRS-CY1JF333JY	J	33k 1/16W	Metal Oxide AA
R3304	VRS-CY1JF224JY	J	220k 1/16W	Metal Oxide AA	R5034	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA
					R5035	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA
					R5036	VRS-CY1JF102JY	J	1k 1/16W	Metal Oxide AA
					R5037	VRS-CY1JF471JY	J	470 1/16W	Metal Oxide AA
					R5038	VRS-CY1JF392FY	J	3.9k 1/16W	Metal Oxide AA

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

DUNTKB599FE01

MAIN UNIT (Continued)

R5039	VRS-CY1JF151FY	J	150	1/16W	Metal Oxide	AA
R5040	VRS-CY1JF112FY	J	1.1k	1/16W	Metal Oxide	AA
R5041	VRS-CY1JF100JY	J	10	1/16W	Metal Oxide	AA
R5042	VRS-CY1JF472JY	J	4.7k	1/16W	Metal Oxide	AA
R5043	VRS-CY1JF821JY	J	820	1/16W	Metal Oxide	AA
R5048	VRS-CJ1JF101JY	J	100	1/16W	Metal Oxide	AA
R5051	VRS-CY1JF112FY	J	1.1k	1/16W	Metal Oxide	AA
R6011	VRS-CJ1JF101JY	J	100	1/16W	Metal Oxide	AA
R6013	VRS-CJ1JF101JY	J	100	1/16W	Metal Oxide	AA
R6015	VRS-CY1JF272JY	J	2.7k	1/16W	Metal Oxide	AA
R6016	VRS-CH1JF101JY	J	100	1/16W	Metal Oxide	AA
R6017	VRS-CH1JF101JY	J	100	1/16W	Metal Oxide	AA
R6020	VRS-CH1JF101JY	J	100	1/16W	Metal Oxide	AA
R6021	VRS-CH1JF101JY	J	100	1/16W	Metal Oxide	AA
R6022	VRS-CH1JF101JY	J	100	1/16W	Metal Oxide	AA
R6023	VRS-CH1JF101JY	J	100	1/16W	Metal Oxide	AA
R6024	VRS-CH1JF101JY	J	100	1/16W	Metal Oxide	AA
R6025	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R6030	VRS-CY1JF220JY	J	22	1/16W	Metal Oxide	AA
R6056	VRS-TW2ED2R2JY	J	2.2	1/4W	Metal Oxide	AA
R6058	VRS-TW2ED2R2JY	J	2.2	1/4W	Metal Oxide	AA
R6059	VRS-CY1JF102JY	J	1k	1/16W	Metal Oxide	AA
R8001	VRS-CY1JF332JY	J	3.3k	1/16W	Metal Oxide	AA
R8002	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8003	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8004	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8006	VRS-CY1JF102JY	J	1k	1/16W	Metal Oxide	AA
R8009	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8010	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8011	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8014	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8015	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8016	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8018	VRS-CY1JF222JY	J	2.2k	1/16W	Metal Oxide	AA
R8019	VRS-CY1JF182JY	J	1.8k	1/16W	Metal Oxide	AA
R8021	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8022	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8023	VRS-CY1JF470JY	J	47	1/16W	Metal Oxide	AA
R8024	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8025	VRS-CY1JF220JY	J	22	1/16W	Metal Oxide	AA
R8026	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8029	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8031	VRS-CY1JF220JY	J	22	1/16W	Metal Oxide	AA
R8033	VRS-CY1JF102JY	J	1k	1/16W	Metal Oxide	AA
R8035	VRS-CH1JF220JY	J	22	1/16W	Metal Oxide	AA
R8037	VRS-CY1JF222JY	J	2.2k	1/16W	Metal Oxide	AA
R8038	VRS-CH1JF220JY	J	22	1/16W	Metal Oxide	AA
R8040	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8042	VRS-CY1JF220JY	J	22	1/16W	Metal Oxide	AA
R8043	VRS-CY1JF220JY	J	22	1/16W	Metal Oxide	AA
R8044	VRS-CH1JF220JY	J	22	1/16W	Metal Oxide	AA
R8045	VRS-CH1JF220JY	J	22	1/16W	Metal Oxide	AA
R8046	VRS-CH1JF220JY	J	22	1/16W	Metal Oxide	AA
R8047	VRS-CH1JF181JY	J	180	1/16W	Metal Oxide	AA
R8048	VRS-CH1JF220JY	J	22	1/16W	Metal Oxide	AA
R8049	VRS-CH1JF220JY	J	22	1/16W	Metal Oxide	AA
R8050	VRS-CH1JF181JY	J	180	1/16W	Metal Oxide	AA
R8051	VRS-CH1JF181JY	J	180	1/16W	Metal Oxide	AA
R8052	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8053	VRS-CY1JF220JY	J	22	1/16W	Metal Oxide	AA
R8054	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8055	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8057	VRS-CH1JF220JY	J	22	1/16W	Metal Oxide	AA
R8058	VRS-CH1JF220JY	J	22	1/16W	Metal Oxide	AA
R8059	VRS-CH1JF181JY	J	180	1/16W	Metal Oxide	AA
R8060	VRS-CH1JF181JY	J	180	1/16W	Metal Oxide	AA
R8061	VRS-CH1JF181JY	J	180	1/16W	Metal Oxide	AA
R8062	VRS-CH1JF220JY	J	22	1/16W	Metal Oxide	AA
R8063	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R8064	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R8065	VRS-CY1JF102JY	J	1k	1/16W	Metal Oxide	AA

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

R8069	VRS-CJ1JF332JY	J	3.3k	1/16W	Metal Oxide	AA
R8070	VRS-CJ1JF332JY	J	3.3k	1/16W	Metal Oxide	AA
R8074	VRS-CJ1JF000JY	J	00	1/16W	Metal Oxide	AA
R8076	VRS-CY1JF103JY	J	10k	1/16W	Metal Oxide	AA
R8080	VRS-CY1JF680JY	J	68	1/16W	Metal Oxide	AA
R8081	VRS-CY1JF680JY	J	68	1/16W	Metal Oxide	AA
R8085	VRS-CY1JF680JY	J	68	1/16W	Metal Oxide	AA
R8086	VRS-CY1JF680JY	J	68	1/16W	Metal Oxide	AA
R8089	VRS-CY1JF000JY	J	0	1/16W	Metal Oxide	AA
R8201	VRS-CY1JF102JY	J	1k	1/16W	Metal Oxide	AA
R8202	VRS-CY1JF102JY	J	1k	1/16W	Metal Oxide	AA
R8203	VRS-CY1JF103FY	J	10k	1/16W	Metal Oxide	AA
R8204	VRS-CY1JF332FY	J	3.3k	1/16W	Metal Oxide	AA
R8205	VRS-CY1JF332JY	J	3.3k	1/16W	Metal Oxide	AA
R8206	VRS-CJ1JF101JY	J	100	1/16W	Metal Oxide	AA
R8208	VRS-CY1JF332JY	J	3.3k	1/16W	Metal Oxide	AA

SWITCHES

S2002	QSW-K0099TAZZY	J	Switch	AC
S2501	QSW-K0108CEZZY	J	Switch, KEYSTONE	AD
S2502	QSW-K0108CEZZY	J	Switch, -	AD
S2508	QSW-K0108CEZZY	J	Switch, +	AD
S2509	QSW-K0108CEZZY	J	Switch, OFF	AD
S2510	QSW-K0108CEZZY	J	Switch, AUTO SYNC.	AD
S2511	QSW-K0108CEZZY	J	Switch, INPUT	AD
S2514	QSW-K0108CEZZY	J	Switch, ON	AD

MISCELLANEOUS PARTS

FB401	RBLN-0058CEZZY	J	Ferrite Bead	AB
FB402	RBLN-0058CEZZY	J	Ferrite Bead	AB
FB403	RBLN-0058CEZZY	J	Ferrite Bead	AB
FB407	RBLN-0058CEZZY	J	Ferrite Bead	AB
FB408	RBLN-0058CEZZY	J	Ferrite Bead	AB
FB1101	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB1102	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB1104	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB1105	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB1106	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB1201	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB1202	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB1204	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB1205	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB1206	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB1301	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB1302	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB1304	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB1305	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB1306	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB1701	RBLN-0064TAZZY	J	Ferrite Bead	AB
FB1702	RBLN-0064TAZZY	J	Ferrite Bead	AB
FB1703	RBLN-0064TAZZY	J	Ferrite Bead	AB
FB1704	RBLN-0064TAZZY	J	Ferrite Bead	AB
FB1705	RBLN-0064TAZZY	J	Ferrite Bead	AB
FB1706	RBLN-0064TAZZY	J	Ferrite Bead	AB
FB1707	RBLN-0064TAZZY	J	Ferrite Bead	AB
FB1708	RBLN-0064TAZZY	J	Ferrite Bead	AB
FB1709	RBLN-0064TAZZY	J	Ferrite Bead	AB
FB1710	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB1711	RBLN-0064TAZZY	J	Ferrite Bead	AB
FB1712	RBLN-0064TAZZY	J	Ferrite Bead	AB
FB1713	RBLN-0095CEZZY	J	Ferrite Bead	AD
FB1714	RBLN-0095CEZZY	J	Ferrite Bead	AD
FB1715	RBLN-0058TAZZY	J	Ferrite Bead	AC
FB1716	RBLN-0095CEZZY	J	Ferrite Bead	AD
FB1717	RBLN-0095CEZZY	J	Ferrite Bead	AD
FB2001	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB2002	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB2005	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB2006	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB2007	RBLN-0061TAZZY	J	Ferrite Bead	AD
FB2008	RBLN-0061TAZZY	J	Ferrite Bead	AD
FB2009	RBLN-0061TAZZY	J	Ferrite Bead	AD
FB2011	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB2012	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB2013	RBLN-0059CEZZY	J	Ferrite Bead	AB

Ref. No.	Part No.	★	Description	Code
DUNTKB599FE01				
MAIN UNIT (Continued)				
FB2014	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB2601	RBLN-0061TAZZY	J	Ferrite Bead	AD
FB2602	RBLN-0061TAZZY	J	Ferrite Bead	AD
FB2603	RBLN-0061TAZZY	J	Ferrite Bead	AD
FB2604	RBLN-0061TAZZY	J	Ferrite Bead	AD
FB2605	RBLN-0061TAZZY	J	Ferrite Bead	AD
FB3101	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB3302	RBLN-0058CEZZY	J	Ferrite Bead	AB
FB3303	RBLN-0058CEZZY	J	Ferrite Bead	AB
FB3304	RBLN-0064TAZZY	J	Ferrite Bead	AB
FB3305	RBLN-0064TAZZY	J	Ferrite Bead	AB
FB3306	RBLN-0064TAZZY	J	Ferrite Bead	AB
FB4004	RBLN-0058CEZZY	J	Ferrite Bead	AB
FB4005	RBLN-0058CEZZY	J	Ferrite Bead	AB
FB4006	RBLN-0058CEZZY	J	Ferrite Bead	AB
FB4007	RBLN-0058CEZZY	J	Ferrite Bead	AB
FB4008	RBLN-0058CEZZY	J	Ferrite Bead	AB
FB4009	RBLN-0058CEZZY	J	Ferrite Bead	AB
FB4010	RBLN-0058CEZZY	J	Ferrite Bead	AB
FB5001	RBLN-0059CEZZY	J	Ferrite Bead	AB
FB6002	RBLN-0067CEZZY	J	Ferrite Bead	AB
FB6003	RBLN-A005WJZZY	J	Ferrite Bead	AA
FB6004	RBLN-0081TAZZY	J	Ferrite Bead	AA
FB6005	RBLN-0081TAZZY	J	Ferrite Bead	AA
FB8001	RBLN-0067CEZZY	J	Ferrite Bead	AB
FB8002	RBLN-0067CEZZY	J	Ferrite Bead	AB
FB8003	RBLN-0067CEZZY	J	Ferrite Bead	AB
FB8004	RBLN-0067CEZZY	J	Ferrite Bead	AB
FB8005	RBLN-0067CEZZY	J	Ferrite Bead	AB
FB8006	RBLN-0067CEZZY	J	Ferrite Bead	AB
J401	QSOC0456CEZZ	J	DIN JACK Socket,4pin	AE
J402	QJAKEA042WJZZ	J	Jack,4pin	AE
J3301	QJAKEA043WJZZ	J	Jack,3pin	AC
P1301	QPLGN0458REZZY	J	Plug,4pin(TC)	AD
P1701	QPLGN0464TAZZY	J	Plug,4pin(FE)	AC
P1702	QPLGN0364TAZZY	J	Plug,3pin(FG)	AC
P1703	QPLGN0464TAZZY	J	Plug,4pin(FA)	AC
P1704	QPLGN0364TAZZY	J	Plug,3pin(FB)	AC
P1705	QPLGN0364TAZZY	J	Plug,3pin(FC)	AC
P1706	QPLGN0175FJZZY	J	Plug,3pin(ED)	AC
P1707	QPLGN0429FJZZ	J	Plug,16pin(EA)	AD
P1708	QPLGN0174FJZZY	J	Plug,2pin(TF)	AC
P1709	QLUGHA001WJZZY	J	Lug	AD
P1710	QLUGHA001WJZZY	J	Lug	AD
P2001	QPLGN0263TAZZY	J	Plug,2pin(TH)	AB
P2004	QPLGN0364TAZZY	J	Plug,3pin(RB)	AC
P2005	QPLGN0363TAZZY	J	Plug,3pin(TI)	AC
P2006	QPLGN0264TAZZY	J	Plug,2pin(LF)	AC
P2501	QLUGHA001WJZZY	J	Lug	AD
P2502	QLUGHA002WJZZ	J	Lug	AB
P3301	QPLGN0264TAZZY	J	Plug,2pin(SP)	AC
P3302	QLUGHA002WJZZ	J	Lug	AB
SC1101	QSOCN3271TAZZY	J	Socket,32pin(RP)	AE
SC1201	QSOCN3272TAZZY	J	Socket,32pin(GP)	AE
SC1301	QSOCN3271TAZZY	J	Socket,32pin(BP)	AE
SC4001	QSOCNA130WJZZ	J	Socket,17pin	AG
SC4002	QSOC0902CEZZ	J	DIN JACK Socket,12pin	AL
	PSLDM133WJFW	J	Shield	AE
	JBTN-A118WJSA	J	Button	AP
	QEARPA058WJFW	J	Earth Plate	AE

Ref. No.	Part No.	★	Description	Code
DUNTKB601DE01				
R/C RECEIVER UNIT				
CAPACITORS				
C1501	VCKYCY1EF104ZY	J	0.1 25V Ceramic	AA
C1502	VCEAPF1CW107MY	J	100 16V Electrolytic	AC
RESISTORS				
R1501	VRS-CY1JF471JY	J	470 1/16W Metal Oxide	AA
R1502	VRS-TX2HF220JY	J	22 1/2W Metal Oxide	AB
MISCELLANEOUS PARTS				
P1502	QPLGN0198FJZZY	J	Plug,3pin(RC)	AD
RMC1501	RRMCU0239CEZZ	J	Remote Receiver	AG
	PSLDC3117CEFW	J	Shield	AD
	QCNW-B111WJZZ	J	Connecting Cord	AE
RDENCA029WJZZ				
POWER UNIT				
INTEGRATED CIRCUITS				
IC701	95CH1156AC001	J	FA5501AN-TE1	
IC751	95C0H1Q3A0010	J	TA76431	AQ
TRANSISTORS				
△ Q701	95C0T643A0010	J	FET, 2SK2698	AY
△ Q702	95C0T645A0020	J	FET, 2SK2717	AW
Q703	95C0T394A0010	J	2SC4081	AH
Q704	95C0T196A0010	J	2SA1812	AS
Q705	95C0T192A0010	J	2SA1576A	AH
Q706	95C0T394A0010	J	2SC4081	AH
Q707	95C0T395A0020	J	2SC4097	AL
Q708	95C0T190A0020	J	2SA1313	AH
Q709	95C0T391A0050	J	2SC2712	AF
Q751	95C0T394A0010	J	2SC4081	AH
DIODES				
D701	95C0D114A6040	J	D3SBA60	AV
△ D702	95CD2172AL006	J	SF10L60U	AR
D704	95C0D2Q1A0060	J	EC21QS06	AQ
D705	95C0D491A0290	J	Zener Diode, UDZ30B	AM
D707	95C0D295A0080	J	1SS355	AE
D708	95C0D295A0080	J	1SS355	AE
D709	95C0D295A0080	J	1SS355	AE
D710	95C0D491A0280	J	Zener Diode, UDZ27B	
D711	95C0D491A0290	J	Zener Diode, UDZ30B	AM
D712	95C0D491A0230	J	Zener Diode, UDZ16B	AM
D713	95C0D491A0230	J	Zener Diode, UDZ16B	AM
D714	95C0D295A0080	J	1SS355	AE
D715	95C0D295A0080	J	1SS355	AE
D716	95C0D295A0080	J	1SS355	AE
D717	95C0D295A0080	J	1SS355	AE
D718	95C0D292A0020	J	SC902-2	AM
D720	95C0D491A0280	J	Zener Diode, UDZ27B	
D751	95C0D292A0020	J	SC902-2	AM
D753	95C0D219B0060	J	YG811S06R	AM
D756	95C0D219B0060	J	YG811S06R	AM
PACKAGED CIRCUITS				
NTC701	95C0D759A4R00	J	NTC Thermistor, NTH7D4ROLHT62A	AK
NTC702	95C0D759A4R00	J	NTC Thermistor, NTH7D4ROLHT62A	AK
△ PC701	95CH7138AS001	J	Optical Isolater, PC123Y82	AH
△ PC702	95CH7138AS001	J	Optical Isolater, PC123Y82	AH
PTC701	95C0D802A1010	J	Posistor, PTH9M04BD222TS2F333	AP
△ Z701	95C0D758A4710	J	Transient Voltage Surge Suppressor, ENC471	AK

Ref. No.	Part No.	★	Description	Code
RDENCA029WJZZ				
POWER UNIT (Continued)				
COILS AND TRANSFORMER				
△ L701	95CL1121RL103	J	Inductor, FK-050E-1030KS	
L704	95CL1000AS002	J	Inductor, 1A002	AQ
L705	95C0L109R1310	J	Inductor, SK-08MS-67Y	
L706	95C0L319R0010	J	Core, FSOB120RT01B	
△ T701	95CL2000DS110	J	Transformer, 2D110	
CONTROL				
VR751	95C0R854E1020	J	Variable Resistor, 1k 1/10W	AH
CAPACITORS				
△ C701	95C0C245Q4740	J	0.47 AC250V Film	AS
△ C702	95C0C245Q2240	J	0.22 AC250V Film	AL
△ C703	95CC1356QS222	J	2200p Ceramic	
△ C704	95CC1356QS222	J	2200p Ceramic	
C705	95CC2110YS474	J	0.47 450V Film	
C706	95CC2110YS105	J	1.0 450V Film	
C707	95C0C1A9R4710	J	470p 1kV Ceramic	AF
C708	95CC3127MS151	J	150 400V Electrolytic	
C709	95C0C1A9R4710	J	470p 1kV Ceramic	AF
C711	95C0C195E1040	J	0.1 50V Ceramic	AF
C712	95C0C194E2220	J	2200p 50V Ceramic	AE
C713	95C0C195E1030	J	0.01 50V Ceramic	AC
C714	95C0C195E1030	J	0.01 50V Ceramic	AC
C715	95C0C194E1020	J	1000p 50V Ceramic	AK
C716	95C0C195B4740	J	0.47 16V Ceramic	AD
C718	95C0C195E1030	J	0.01 50V Ceramic	AC
C720	95C0C1Q0A1060	J	10 6.3V Ceramic	AQ
C721	95C0C193A4720	J	4700p 50V Ceramic	AM
C722	95C0C195C1040	J	0.1 25V Ceramic	AD
C723	95C0C194E1010	J	100p 50V Ceramic	AC
C724	95C0C1B2S4700	J	47p 2kV Ceramic	AE
C725	95C0C194E1020	J	1000p 50V Ceramic	AK
C726	95C0C3A0D5600	J	56 35V Electrolytic	AM
C727	95C0C193A4720	J	4700p 50V Ceramic	AM
C730	95CC1356QS222	J	2200p Ceramic	
C751	95C0C1A9R2210	J	220p 1kV Ceramic	AF
C752	95C0C1A9R2210	J	220p 1kV Ceramic	AF
C753	95C0C3A0D1510	J	150 35V Electrolytic	AM
C754	95C0C1A9R2210	J	220p 1kV Ceramic	AF
C755	95C0C3A0C6810	J	680 25V Electrolytic	AS
C757	95C0C3A0A1220	J	1200 10V Electrolytic	AS
C758	95C0C195C1040	J	0.1 25V Ceramic	AD
C759	95C0C195E1040	J	0.1 50V Ceramic	AF
C763	95C0C1A9R2210	J	220p 1kV Ceramic	AF

RESISTORS				
J709	95C0R3Q0V0000	J	0 1/8W 2012(J)	
J710	95C0R390T0000	J	0 1/4W 3216(J)	AC
J711	95C0R3Q0V0000	J	0 1/8W 2012(J)	
J712	95C0R3Q0V0000	J	0 1/8W 2012(J)	
△ R701	95C0R390T6830	J	68k 1/4W 3216(J)	
△ R702	95C0R390T6830	J	68k 1/4W 3216(J)	
△ R703	95C0R390T6830	J	68k 1/4W 3216(J)	
R704	95C0R390T4740	J	470k 1/4W 3216(J)	
R705	95C0R390T4740	J	470k 1/4W 3216(J)	
R706	95C0R390T3340	J	330k 1/4W 3216(J)	AC
R707	95C0R390T2200	J	22 1/4W 3216(J)	AH
R709	95C0R3Q0V1530	J	15k 1/8W 2012(J)	AB
R710	95C0R516FR100	J	0.1 3W	AN
R711	95C0R391T5140	J	510k 1/4W 3216(F)	AC
R712	95C0R391T5140	J	510k 1/4W 3216(F)	AC
R713	95C0R391T5140	J	510k 1/4W 3216(F)	AC
R714	95C0R3Q0V2230	J	22k 1/8W 2012(J)	AB
R718	95C0R3Q0V1010	J	100 1/8W 2012(J)	AF
R720	95C0R3Q3V1030	J	10k 1/10W 2012(D)	AC
R721	95C0R3Q0V4720	J	4.7k 1/8W 2012(J)	AB
R722	95C0R3Q3V1030	J	10k 1/10W 2012(D)	AC
R723	95C0R3Q0V3310	J	330 1/8W 2012(J)	AB
R724	95C0R390T1040	J	100k 1/4W 3216(J)	AF
R725	95C0R390T3320	J	3.3k 1/4W 3216(J)	AC

Ref. No.	Part No.	★	Description	Code
R727	95C0R390T3340	J	330k 1/4W 3216(J)	AC
R728	95C0R390T1000	J	10 1/4W 3216(J)	AC
R729	95C0R390T1830	J	18k 1/4W 3216(J)	AD
R730	95C0R390T2210	J	220 1/4W 3216(J)	AF
R731	95C0R390T4710	J	470 1/4W 3216(J)	AD
R732	95C0R3Q3V5620	J	5.6k 1/10W 2012(D)	
R733	95C0R3Q3V3330	J	33k 1/10W 2012(D)	
R734	95C0R3Q0V4710	J	470 1/8W 2012(J)	AB
R735	95C0R3Q3V3340	J	330k 1/10W 2012(D)	AF
R736	95C0R3Q0V1030	J	10k 1/8W 2012(J)	AB
R737	95C0R3Q0V1030	J	10k 1/8W 2012(J)	AB
R738	95C0R390T1830	J	18k 1/4W 3216(J)	AD
R739	95C0R3Q0V3330	J	33k 1/8W 2012(J)	AB
R740	95C0R390T3340	J	330k 1/4W 3216(J)	AC
R741	95C0R390T3340	J	330k 1/4W 3216(J)	AC
R742	95C0R3Q0V4710	J	470 1/8W 2012(J)	AB
R743	95C0R3Q0V6820	J	6.8k 1/8W 2012(J)	AF
R744	95C0R3Q0V6810	J	680 1/8W 2012(J)	AF
R745	95C0R3Q0V1010	J	100 1/8W 2012(J)	AF
R746	95C0R3Q0V8220	J	8.2k 1/8W 2012(J)	AB
R747	95C0R3Q0V2220	J	2.2k 1/8W 2012(J)	AB
R748	95C0R390T3320	J	3.3k 1/4W 3216(J)	AC
R749	95C0R3Q0V6820	J	6.8k 1/8W 2012(J)	AF
R750	95C0R390T1000	J	10 1/4W 3216(J)	AC
R751	95C0R390T3320	J	3.3k 1/4W 3216(J)	AC
R752	95C0R3Q0V5610	J	560 1/8W 2012(J)	AB
R753	95C0R3Q0V1020	J	1k 1/8W 2012(J)	AB
R754	95C0R3Q0V1030	J	10k 1/8W 2012(J)	AB
R755	95C0R3Q1V2220	J	2.2k 1/8W 2012(F)	AC
R756	95C0R3Q1V1820	J	1.8k 1/8W 2012(F)	AC
R758	95C0R3Q0V3320	J	3.3k 1/8W 2012(J)	AF
R759	95C0R3Q0V6810	J	680 1/8W 2012(J)	AF
R760	95C0R3Q0V3330	J	33k 1/8W 2012(J)	AB
R761	95C0R3Q0V5630	J	56k 1/8W 2012(J)	AF
R762	95C0R3Q0V1830	J	18k 1/8W 2012(J)	
MISCELLANEOUS PARTS				
BEA701	95C0L551A0020	J	Ferrite Beads, BL02RN2-R62	AE
BEA702	95C0L551A0010	J	Ferrite Beads, BL02RN1-R62	AD
BEA703	95C0L551A0010	J	Ferrite Beads, BL02RN1-R62	AD
BEA704	95C0L551A0020	J	Ferrite Beads, BL02RN2-R62	AE
BEA705	95C0L552A0010	J	Ferrite Beads, BL01RN1-A63	
CN701	95CK2051AQ302	J	Connector, B2P3-VH-BL	
CN702	95CK2051AQ202	J	Connector, B2P3-VH-R	
CN703	95C0WPF201600	J	Connector	
CN751	95CK2011BQ016	J	Connector, B16B-PHDSS	
CN752	95C0K202B0040	J	Connector, B4B-PH-K-S	
△ F701	95C0K718A6R30	J	Fuse, AC250V/6.3AH	AN
△ FH701	95C0M850A0010	J	Fuse Holder	AK
△ FH702	95C0M850A0010	J	Fuse Holder	AK

MEMO

Handwriting practice lines consisting of 25 horizontal dashed lines.

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------


CABINET AND MECHANICAL PARTS

1	<i>Not Available</i>	-	Top Body Ass'y	—
1-1	DBDYTA019WJ01	J	Top Body Ass'y (PG-A10X)	BA
1-1	DBDYTA019WJ02	J	Top Body Ass'y (PG-A10X-SL)	—
1-1-1	<i>Not Available</i>	J	Top Body	—
1-1-2	GCOVAA303WJSA	J	LED Cover	AD
1-1-3	HBDGB3132CESC	J	SHARP Badge (PG-A10X)	AG
1-1-3	HBDGB3132CESD	J	SHARP Badge (PG-A10X-SL)	—
1-1-4	HINDPA057WJSA	J	IQ2 Label	AF
1-2	GCOVAA302WJKA	J	Lens Cover Top (PG-A10X)	AM
1-2	GCOVAA302WJKB	J	Lens Cover Top (PG-A10X-SL)	—
1-3	XEBSD30P08000	J	Screw, x2	AA
2	<i>Not Available</i>	-	Bottom Body Ass'y	—
2-1	CDORUA005WJ01	J	Lamp Door Ass'y (PG-A10X)	AV
2-1	CDORUA005WJ02	J	Lamp Door Ass'y (PG-A10X-SL)	—
2-1-1	<i>Not Available</i>	-	Lamp Door	—
2-1-2	LX-BZ3449CEFF	J	Screw, x1	AC
2-1-3	MSPRC0215CEFW	J	Spring, x1	AC
2-1-4	PFILDA007WJZZ	J	Filter	AC
2-1-5	XREUW20-04000	J	E-Ring, x1	AA
2-2	CDUC-A015WJ01	J	Intake Duct Ass'y (PG-A10X)	BF
2-2	CDUC-A015WJ02	J	Intake Duct Ass'y (PG-A10X-SL)	—
2-2-1	LANGKA135WJFW	J	Fan Angle	AB
2-2-2	NFANSA005WJZZ	J	Fan, LCD B	AV
2-2-3	NFANSA006WJZZ	J	Fan, LCD R/G	AU
2-2-4	PDUC-A015WJKA	J	Intake Duct A (PG-A10X)	—
2-2-4	PDUC-A015WJKB	J	Intake Duct A (PG-A10X-SL)	—
2-2-5	PDUC-A016WJKZ	J	Intake Duct B	AL
2-2-6	PSPAZA238WJZZ	J	Spacer A	AD
2-2-7	PSPAZA240WJZZ	J	Spacer B, x2	AB
2-2-8	RH-HXA005WJZZ	J	Thermistor	AK
2-2-9	XBBSF40P30000	J	Screw, x1	AB
2-2-10	XBPSD30P06J00	J	Screw, x1	AA
2-2-11	XBPSD40P30JS0	J	Screw, x2	AB
2-2-12	XEBSD30P08000	J	Screw, x2	AA
2-3	DBDYUA021WJ01	J	Bottom Body Ass'y (PG-A10X)	BD
2-3	DBDYUA036WJ01	J	Bottom Body Ass'y (PG-A10X-SL)	—
2-3-1	<i>Not Available</i>	-	Bottom Body	—
2-3-2	LANGF2155CEFW	J	Kenjinton Angle	AD
2-3-3	LX-NZ3144CEFW	J	M4 Nut, x3	AC
2-3-4	LX-NZ3184CEFW	J	M3 Nut, x1	AD
2-3-5	PFILD0111CEZZ	J	PBS Filter	AE
2-3-6	PFILDA006WJZZ	J	POWER/BALLAST Filter	AE
2-4	GLEGGA022WJSA	J	Rubber Leg (PG-A10X)	—
2-4	GLEGGA022WJSB	J	Rubber Leg (PG-A10X-SL)	—
2-5	GLEGPA011WJKA	J	Adjuster (Front), x2 (PG-A10X)	—
2-5	GLEGPA011WJKB	J	Adjuster (Front), x2 (PG-A10X-SL)	—
2-6	GLEGPA013WJSA	J	Adjuster (Rear) (PG-A10X)	AE
2-6	GLEGPA013WJSB	J	Adjuster (Rear) (PG-A10X-SL)	—
2-7	LX-HZ3105CEFD	J	Screw, x1	AB
2-8	PSPAKA016WJKZ	J	SP Spacer	AD
2-9	PSPAZA161WJZZ	J	Fan Spacer	AC
2-10	QCNW-B113WJZZ	J	REF Switch	AH
2-11	RSP-ZA029WJZZ	J	Speaker	AQ
2-12	XEBSD30P16000	J	Screw, x3	AA
3	CCAPHA007WJ01	J	Lens Cap Ass'y	AH
4	Refer to Optical Mechanism Unit			
5	CCNW-B109WJ01	J	AC Inlet Ass'y	AU

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

6	<i>Not Available</i>	-	Exhaust Cover Ass'y	—
6-1	DCOVAA301WJ01	J	Exhaust Cover Ass'y (PG-A10X)	AV
6-1	DCOVAA301WJ02	J	Exhaust Cover Ass'y (PG-A10X-SL)	—
6-1-1	<i>Not Available</i>	-	Exhaust Cover	—
6-1-2	GCOVAA419WJSA	J	R/C Cover	AD
6-1-3	PCOVZA017WJZZ	J	R/C Filter	AD
6-2	LHLDZA137WJKA	J	Exhaust Cover Holder	AL
6-3	XEBSD30P08000	J	Screw, x1	AA
7	CHLDZA135WJ01	J	Power/Ballast Holder Ass'y	AZ
7-1	LHLDFA011WJKZ	J	Ballast Holder, x2	AC
7-2	<i>Not Available</i>	-	Power/Ballast Holder	—
7-4	LX-NZ3172CEFJ	J	Speed Nut, x1	AD
7-5	NFANRA014WJZZ	J	Fan	AT
7-6	PSLDMA134WJFW	J	Power/Ballast Shield	AM
7-7	XEBSD30P16000	J	Screw, x2	AA
8	DUNTKB601DE01	-	R/C Receiver Unit	—
9	DUNTKB599FE01	-	Main Unit	—
10	JBTA-A118WJSA	J	Operation Button	AP
11	PCOVUA012WJZZ	J	S Terminal Cover	AD
12	PSLDMA133WJFW	J	Terminal Shield	AG
13	QEARPA058WJFW	J	Earth Plate	AE
14	XBBSD20P03000	J	Screw, x1	AA
15	XEBSD30P08000	J	Screw, x2	AA
16	LHLDW1009CEZZ	J	Holder	AA
17	LX-BZ3100CEFD	J	Screw, x5	AA
18	LX-HZA007WJFD	J	Screw, x2	AB
19	PCOVNA003WJKZ	J	Power/Ballast Holder Cover	AH
20	PSLDMA189WJFW	J	Bottom Shield	AN
21	PZETKA043WJKZ	J	Shield Cover	AK
22	QCNW-B110WJZZ	J	Bi Metal	AP
23	QCNW-B112WJZZ	J	EA Wire	AL
24	RDENCA028WJZZ	J	Ballast Unit	BU
25	RDENCA029WJZZ	-	Power Unit	—
26	QCNW-B111WJZZ	J	RC Wire	AE
27	<i>Not Available</i>	-	Serial No. Label	—
28	XBBSN30P08000	J	Screw, x3	AA
29	XBPSD40P08JS0	J	Screw, x1	AA
30	XEBSD30P08000	J	Screw, x3	AA
31	XEBSD30P12000	J	Screw, x16	AA
32	QCNW-B123WJZZ	J	D Cable	AG

CABINET AND MECHANICAL PARTS/ GEHÄUSE UND MECHANISCHE BAUTEILE

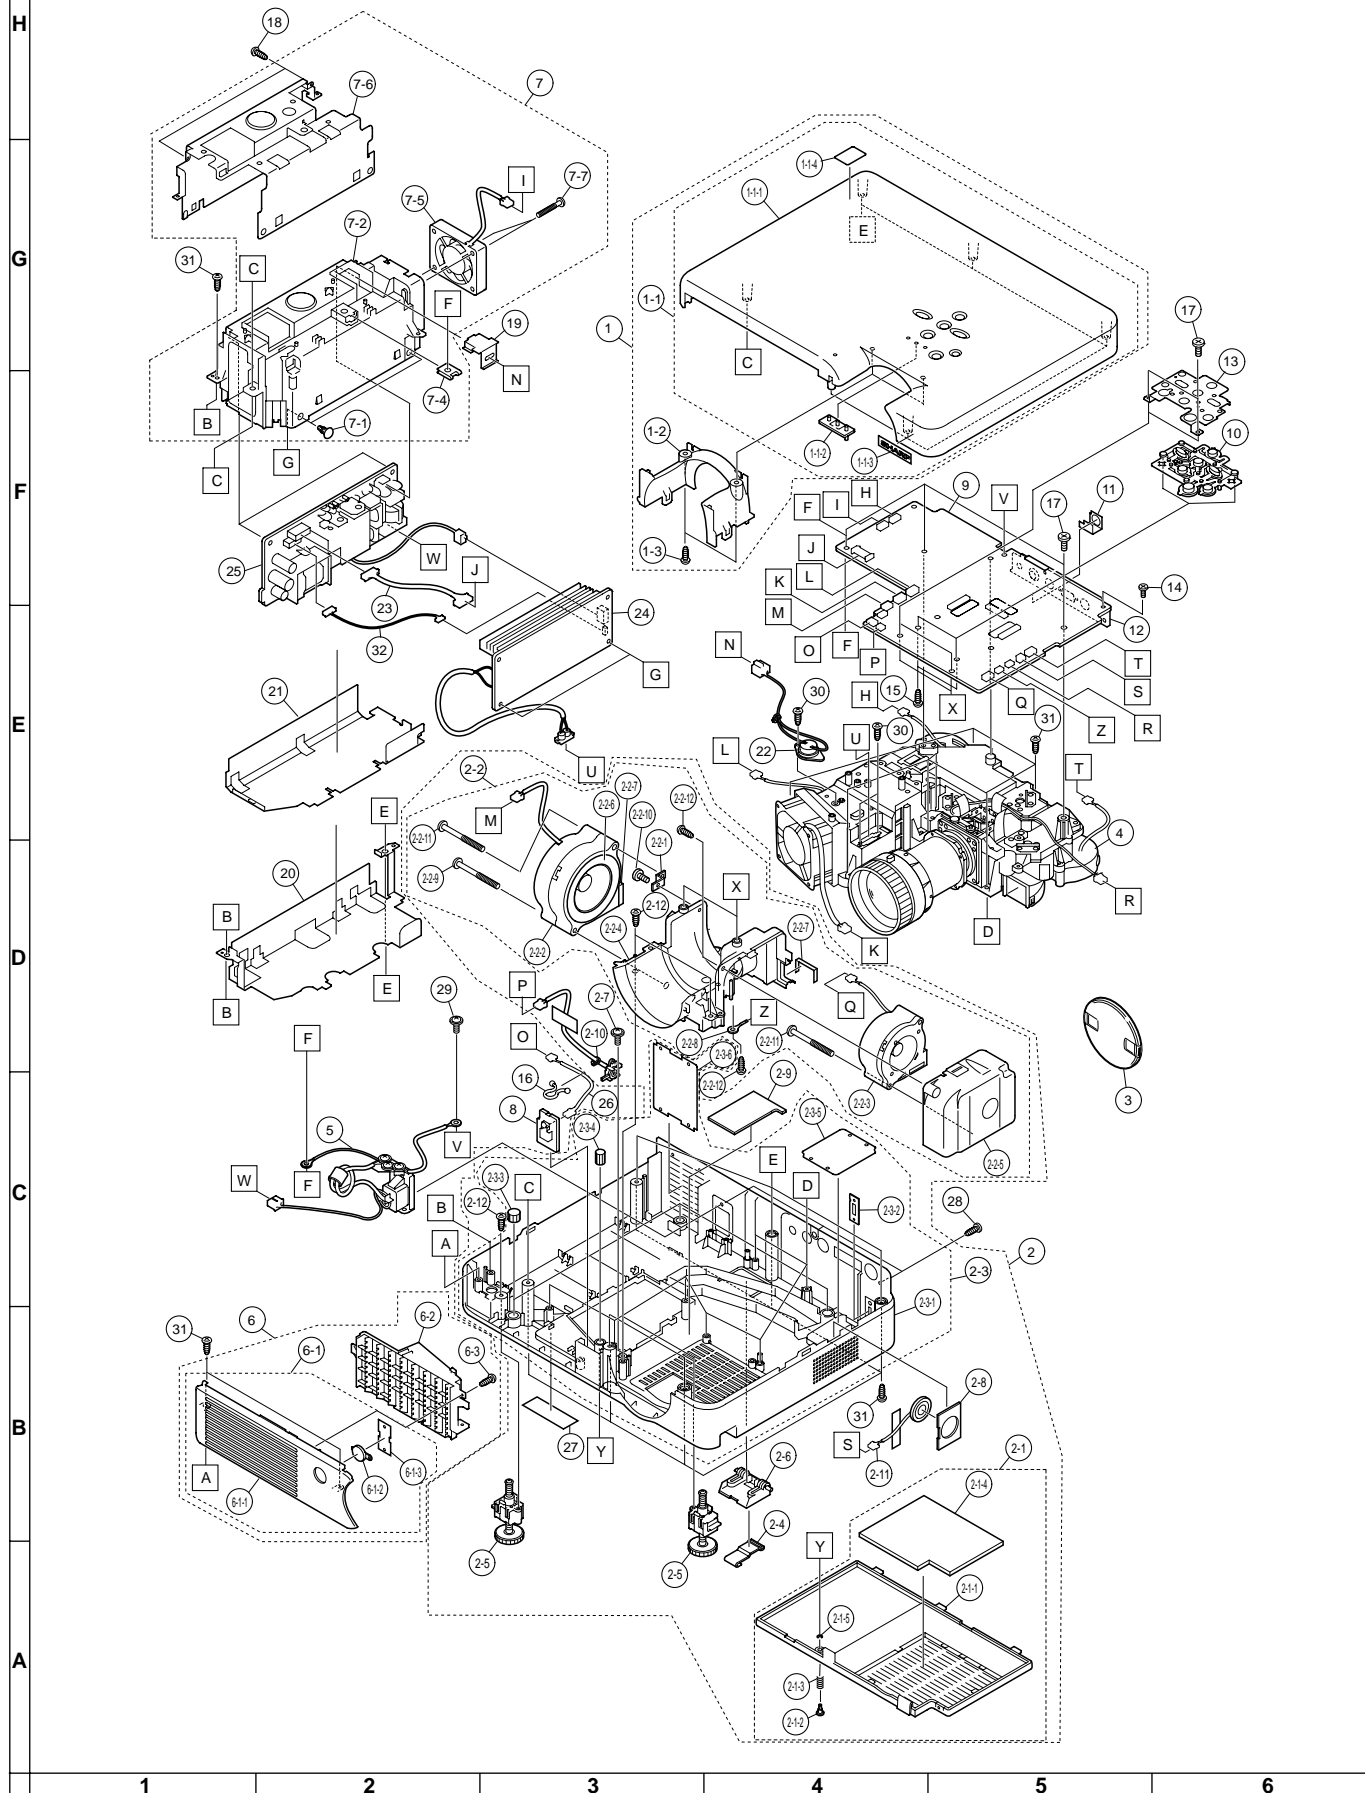


Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

OPTICS MECHANISM PARTS

4	CCHSKA005WJ01	J	Optics Mechanism Unit	EC
4-1	CDUC-A014WJ01	J	Lamp House Ass'y	BN
4-2	CHLDZA157WJ01	J	Prizm Holder Unit	DQ
4-2-1	<i>Not Available</i>	-	Prizm Holder	—
4-2-2	MSPRKA005WJFW	J	PF Out Spring, x2	AD
4-2-3	PfILWA030WJZZ	J	PF Out G	BC
4-2-4	PfILWA031WJZZ	J	PF Out B	BC
4-2-5	<i>Not Available</i>	-	X Prizm	—
4-2-6	<i>Not Available</i>	-	LCD R	—
4-2-7	<i>Not Available</i>	-	LCD G	—
4-2-8	<i>Not Available</i>	-	LCD B	—
4-2-9	XBBSF20P02000	J	Screw, x2	AB
⚠ 4-3	BQC-PGA10X//1	J	Lamp Unit	CK
4-4	CLNS-A018WJ01	J	Projection Lens unit	CB
4-4-1	PCOVZA010WJSA	J	Zoom Ring	AT
4-4-2	PCOVZA011WJSA	J	Focus Ring	AT
4-4-3	<i>Not Available</i>	-	Projection Lens	—
4-4-4	XiPSN20P04000	J	Screw, x8	AA
4-5	CCHSKA006WJ01	J	Sub Frame Ass'y	CS
4-5-1	MSPRKA006WJFW	J	PF In Spring, x3	AE
4-5-2	NFANSA007WJZZ	J	Blower Fan	AU
4-5-3	PfILWA032WJZZ	J	PF In R	AY
4-5-4	PfILWA033WJZZ	J	PF In G	BC
4-5-5	PfILWA034WJZZ	J	PF In B	BC
4-5-6	XBBSD25P05000	J	Screw, x3	AB
4-6	XBBSD30P06000	J	Screw, x2	AA
4-8	XBBSD30P12000	J	Screw, x4	AA

OPTICS MECHANISM PARTS/ TEILE FÜR OPTIKMECHANISMUS

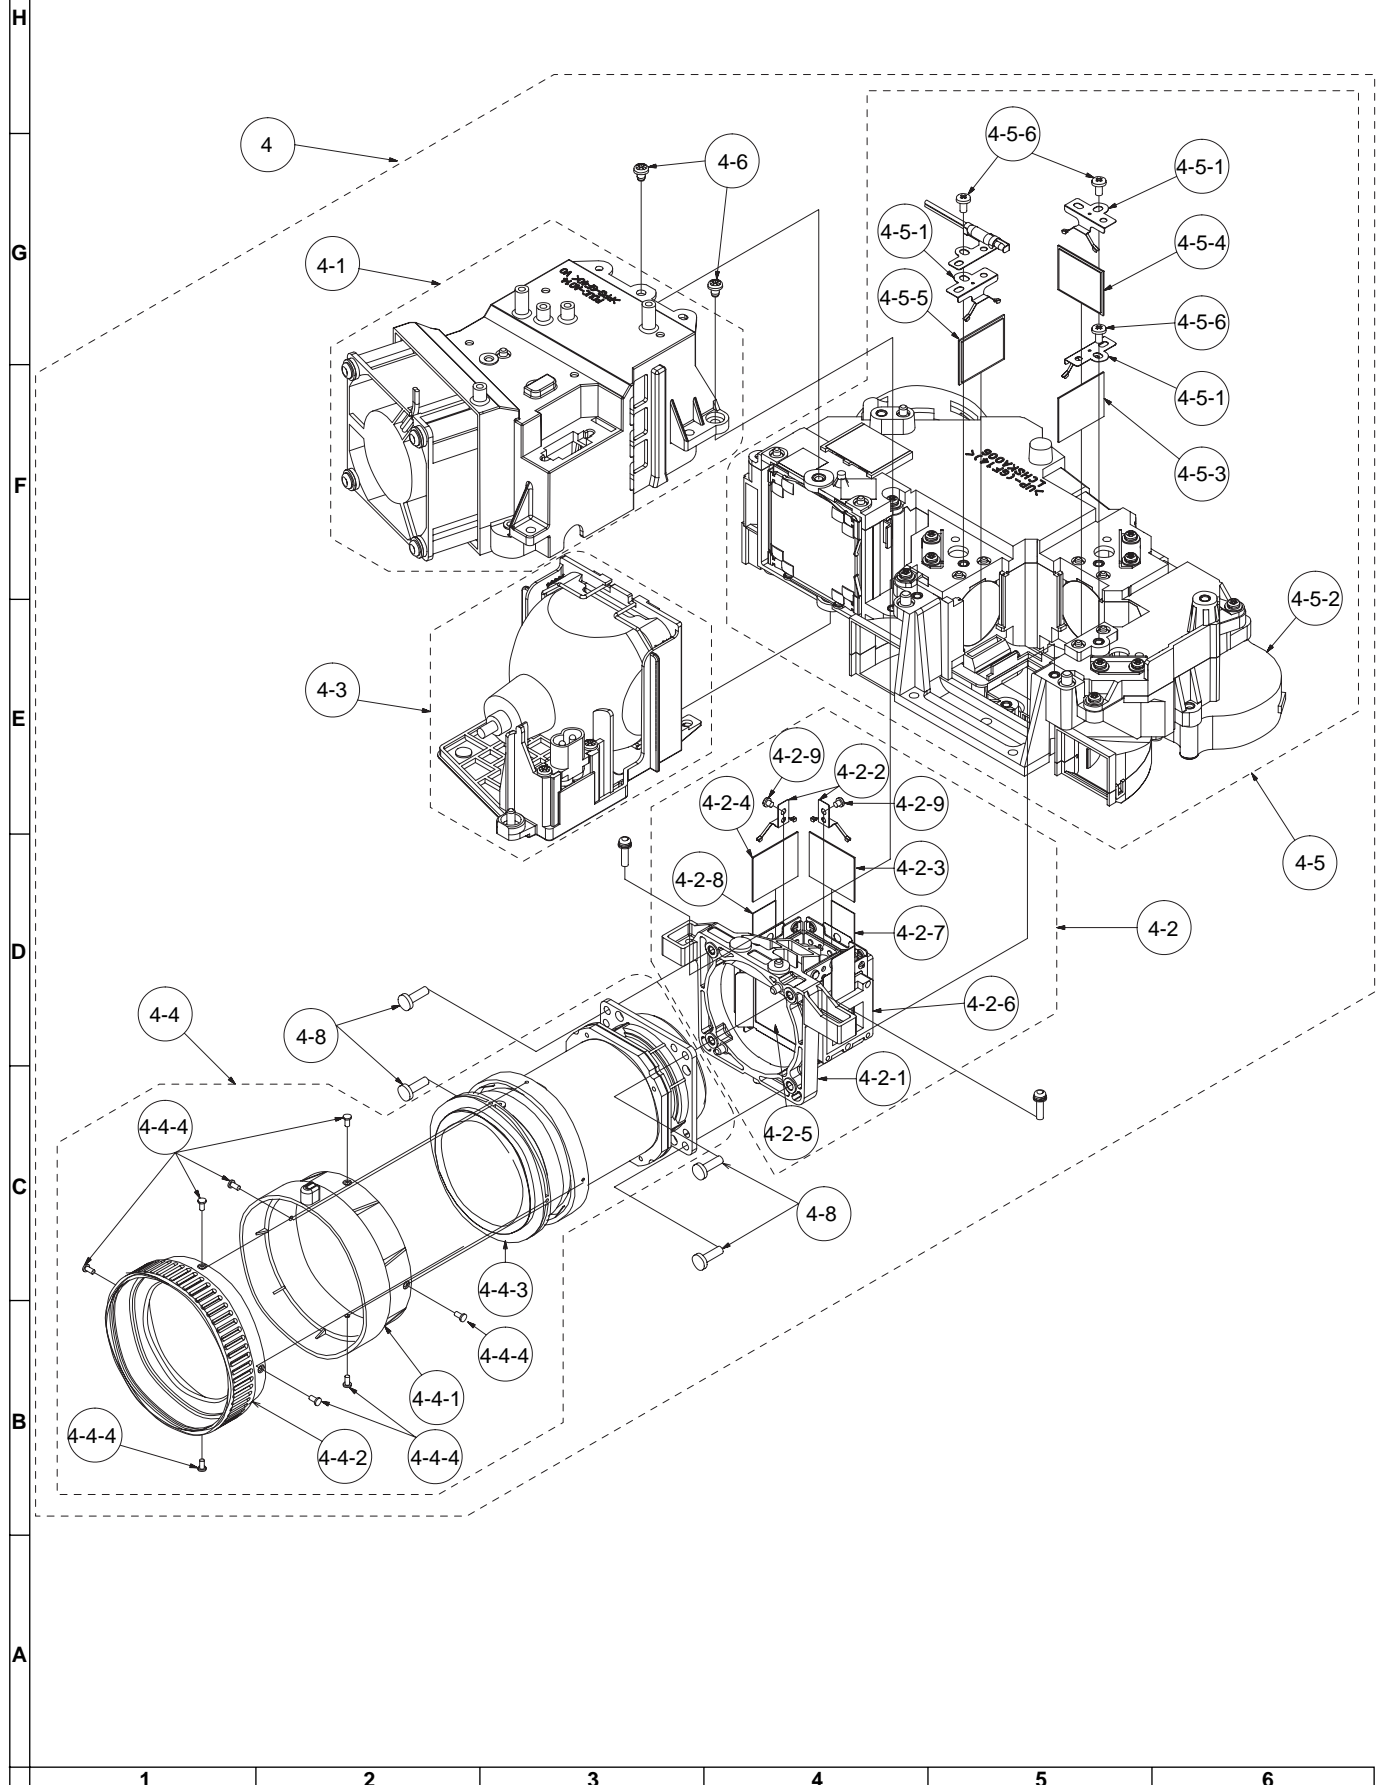

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

SUPPLIED ACCESSORIES

	PFIIDA008WJZZ	J	Extra Air Filter	AD
	GCASNA006WJSA	J	Carring Bag	AZ
⚠	RRMCGA138WJSA	J	Remote Control Unit	AQ
⚠	QACCBA015WJPZ	J	AC Cord (for U.K., Hong Kong and Singapore)	AZ
⚠	QACCD016WJPZ	J	AC Cord (for USA and Canada)	AQ
⚠	QACCV006WJPZ	J	AC Cord (for Europe except U.K.)	AQ
⚠	QACCLA005WJPZ	J	AC Cord (for New Zealand and Oceania)	AR
	QCNWGA015WJPZ	J	Mini Din-D sub Converter	AK
	QCNWGA012WJPZ	J	RGB Cable	AS
	TINS-A505WJN1	J	Operation Manual	AP
	UDSKAA022WJN1	J	CD Rom Operation Manual	AM
	TLABZA191WJZZ	J	Quick Reference	AF

ACCESSORIES (NOT REPLACEMENT ITEM)

	TCADEA032WJZZ	-	Questionnaire Card	—
	TGAN-A019WJZZ	-	Guarantee Card (for Canada)	—
	TGAN-A106WJZZ	-	Guarantee Card (for USA)	—
	TGAN-A018WJZZ	-	ER Package (for USA)	—
	TGAN-A020WJZZ	-	ER Package (for Canada)	—
	TLABZA255WJZZ	-	ER Stecker (for USA and Canada)	—
	TFUT-A001WJZZ	-	Envelope for send back (for USA and Canada)	—
	SSAKAA013WJZZ	-	Polyethylene Bag (for USA and Canada)	—

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------


PACKING PARTS (NOT REPLACEMENT ITEM)

	SPAKCA464WJZZ	-	Packing Case (PG-A10X)	—
	SPAKCA779WJZZ	-	Packing Case (PG-A10X-SL)	—
	SPAKPA180WJZZ	-	Polystyllene Cover	—
	SPAKXA188WJZZ	-	Pulp Mold	—
	SSAKA0160CEZZ	-	Polyethylene Bag	—
	SPAKFA166WJZZ	-	Accessories Case	—

SERVICE JIGS (Use for servicing)



	QCNW-4852CEZZ	J	Extension Cable 32-pin MAIN-LCD Panel x 3	BH
--	---------------	---	---	----

PACKING OF THE SET / VERPACKEN DES GERÄTS

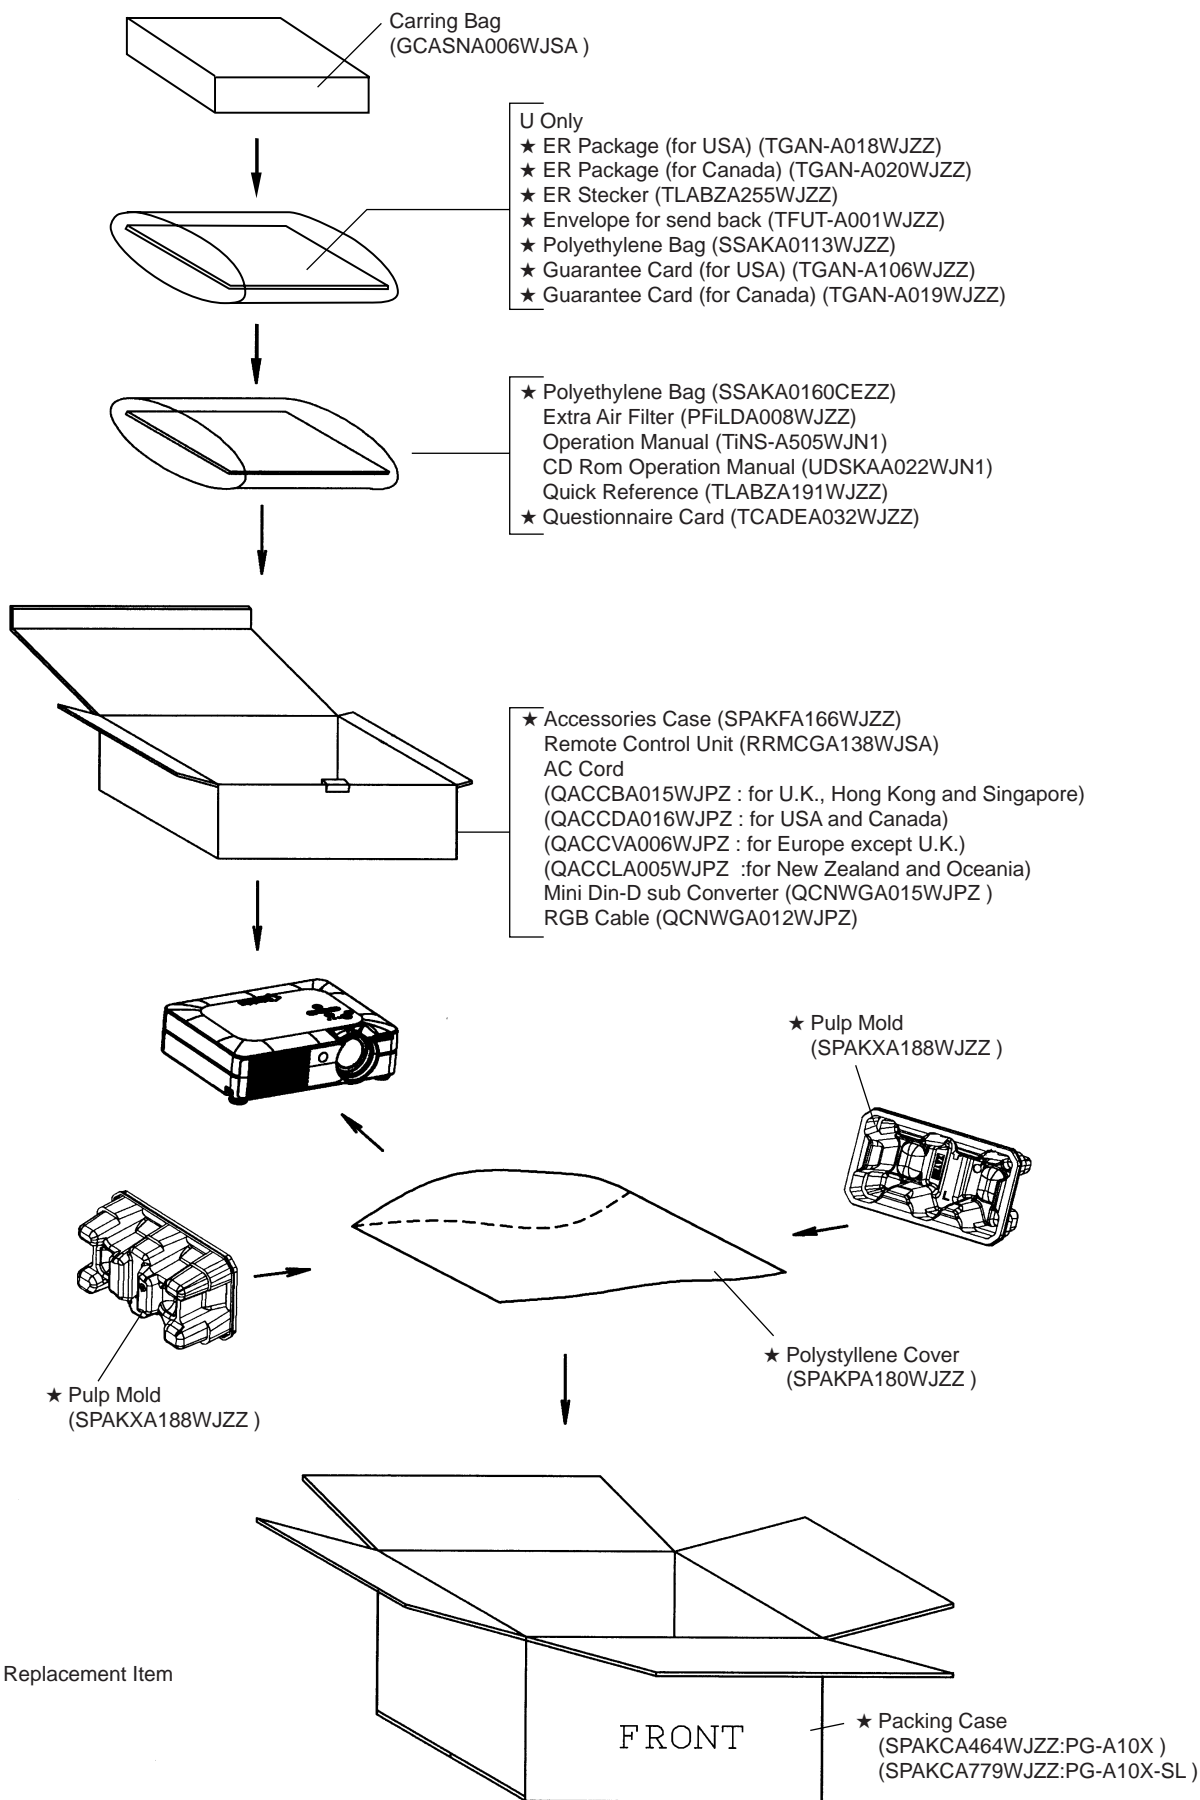

MARK★:Not Replacement Item

CEILING MOUNT BRACKET AN-A10T/ DECKENMONTAGEHALTERUNG AN-A10T

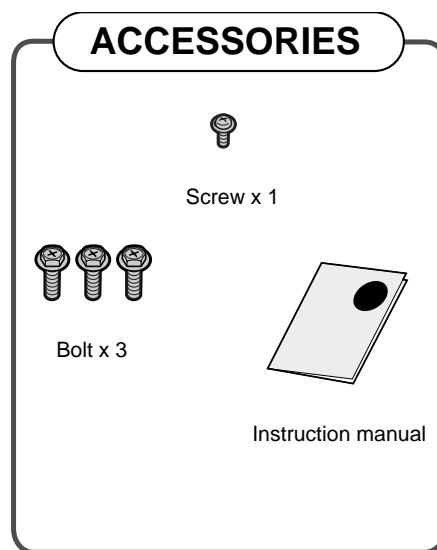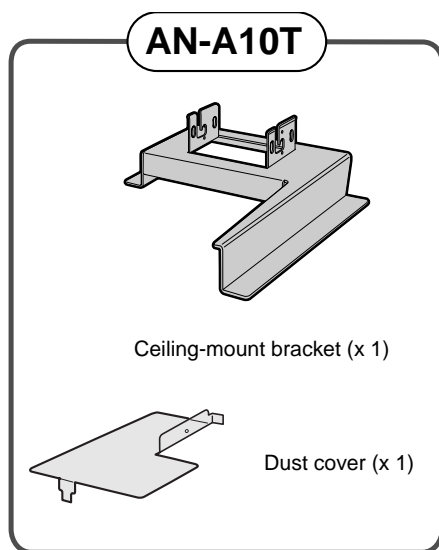

PARTS LIST

PARTS REPLACEMENT

Parts marked with "△" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

HOW TO ORDER REPLACEMENT PARTS

To have your order filled promptly and correctly, please furnish the following informations.

- | | |
|-----------------|----------------|
| 1. MODEL NUMBER | 2. REF. NO. |
| 3. PART NO. | 4. DESCRIPTION |
| 5. CODE | 6. QUANTITY |

in **USA**: Contact your nearest SHARP Parts Distributor.
For location of SHARP Parts Distributor,
Please call Toll-Free; 1-800-BE-SHARP

in **CANADA**: Contact SHARP Electronics of Canada Limited
Phone (416) 890-2100.

★ MARK: SPARE PARTS-DELIVERY SECTION

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

AN-A10T

1	9AQAN-A10T-01	J	Ceiling Mount Bracket	
2	9AQAN-A10T-02	J	Dust Cover	
	9AQAN-A10T-03	J	Model Label	

SUPPLIED ACCESSORIES

	9AQAN-A10T-04	J	Instruction Manual	
	9AQAN-C30T-13	J	Screw, x1	AM
	9AQAN-NV4T-15	J	Bolt, x3	AM

ERSATZTEILLISTE

AUSTAUSCH VON TEILEN

Ersatzteile, die besondere Sicherheitseigenschaften haben, sind in dieser Anleitung markiert. Elektrische Komponenten mit solchen Eigenschaften sind in den Ersatzteil durch "△" gekennzeichnet. Der Gebrauch von Ersatzteilen, die nicht dieselben Sicherheitseigenschaften haben wie die vom Hersteller empfohlenen und in der Bedienungsanleitung angegebenen, können zur Ursache von Blitzeinschlägen, Bränden und anderen Gefahren werden.

WIE MAN ERSATSTEILE BESTELLT

Damit Ihre Bestellung prompt und korrekt ausgeführt wird, geben Sie bitte folgende Informationen.

- | | |
|-------------------|-----------------|
| 1. MODELL NR. | 2. REF. NR. |
| 3. ERSATZTEIL NR. | 4. BESCHREIBUNG |
| 5. KODE | 6. QUANTITÄT |


★ MARKIERUNG : ERSATZTEILE-LIEFERUNG

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

PACKING PARTS (NOT REPLACEMENT ITEM)

5	9AQAN-A10T-K01	-	Packing Case	—
6	9AQAN-A10T-K02	-	Pad (A)	—
7	9AQAN-A10T-K03	-	Pad (B)	—
8	9AQAN-A10T-K04	-	Pad (C)	—
9	9AQAN-A10T-K05	-	Pad (D)	—
10	9AQAN-A10T-K06	-	Mirror Mat	—
11	9AQAN-A10T-K07	-	Polyethylene Bag	—
12	9AQAN-A10T-K08	-	Pad (E)	—
13	9AQAN-A10T-K09	-	Pad (F)	—

PACKING OF THE SET / VERPACKEN DES GERÄTS

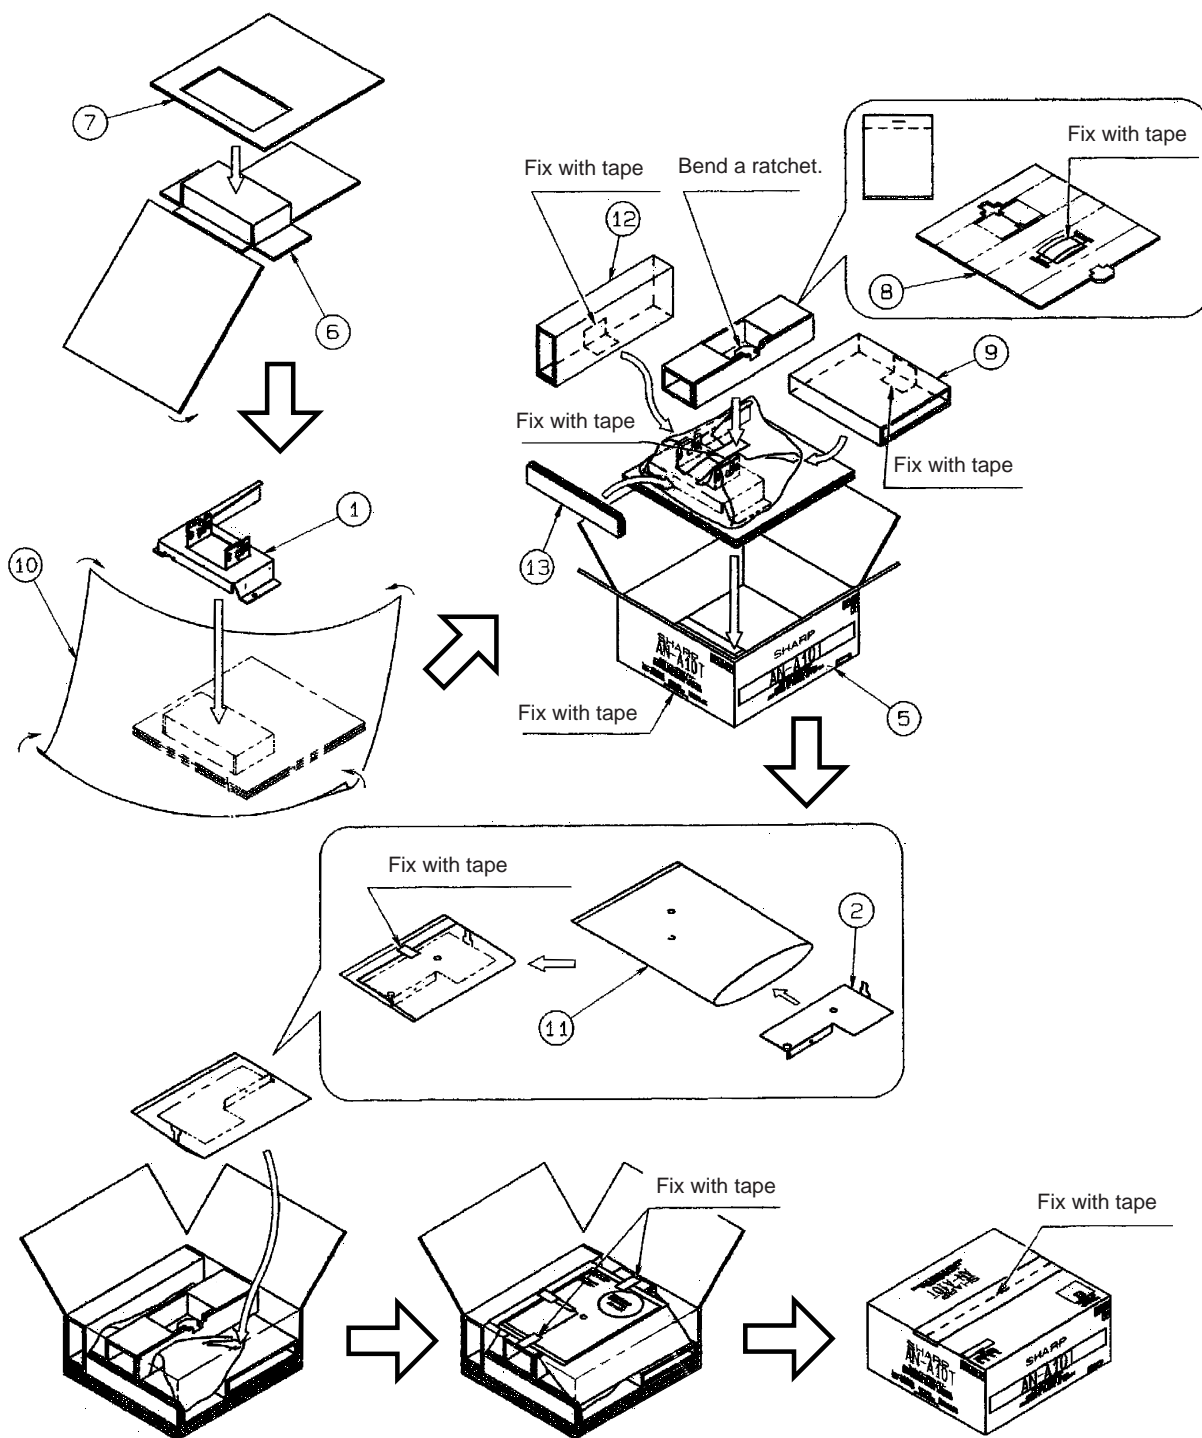

SHARP

COPYRIGHT © 2003 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced,
stored in a retrieval system, or transmitted in
any form or by any means, electronic, mechanical,
photocopying, recording, or otherwise, without
prior written permission of the publisher.

TQ1516-S

Apr. 2003 Printed in Japan

In Japan gedruckt

Design and Production Information

Design : JAPAN

Production : JAPAN

SY. DS

SHARP CORPORATION
AV Systems Group
Quality & Reliability Control Center
Yaita, Tochigi 329-2193, Japan